### **Top and Bottom Extender Cable Assembly**

## **KJ4002X1-BE1 Top Extender Cable Assembly**

# KJ4002X1-BF1, BF2, BF3, BF4 Bottom Extender Cable Assembly

#### Hazardous Atmosphere



II 3 G

Nemko No. 02ATEX431U EEx nA IIC T4

#### **Power Specifications**

LocalBus Circuit Power 12.6 VDC at 15 A

#### **Environmental Specifications**

Ambient Temperature -40 to 70° C

Shock 10g ½ Sinewave for 11 msec

Vibration 1mm Peak to Peak from 5 to 16Hz;

0.5g from 16 to 150Hz

Airborne ISA-S71.04 –1985 Airborne Contaminants Class G3

Relative Humidity 5 to 95% Non-Condensing IP 20

Rating

**Note:** Refer to the product label for serial number and location and date of manufacture.

Warning: This product has specific instructions for installation, removal and operation in hazardous areas. Refer to document 12P2046 "DeltaV ™ Scalable Process System Zone 2 Installation Instructions". Other installation instructions are available in the "Installing Your DeltaV Automation System" manual.

#### Removal and Insertion

This unit cannot be removed or inserted with system power energized.

Power must be de-energized before disconnecting any carriers or LocalBus Extender cables.

This product must **not** be unplugged unless either the system has been de-energized or the area is known to be safe. No combination of I/O carriers and LocalBus Extenders must exceed a length of 6.5 meters. Interconnecting cable between enclosures must be in conduit.

#### Maintenance and Adjustment

This unit contains no user serviceable parts and should not be disassembled for any reason. Calibration is not required.

#### Other Safety Approvals





