

# PNEUMATIC MARINE PRODUCTS FOR PROPULSION CONTROL

Pneumatics It's that easy











Marine Control Systems such as LOGICMASTER<sup>®</sup> and GEARMASTER<sup>®</sup> Propulsion Control Systems protect engines and equipment on tugs, offshore supply, and other vessels.

See page 54 for overview of our Electronic Marine Controls.


## **INDEX**

TYPICAL SYSTEM SCHEMATICS	
OGICMASTER® Air ClutchOGICMASTER® Hydraulic Clutch	. 3
.OGICMASTERୁଁ Hydraulic Clutch	. 4
GEARMASTER <sup>®</sup> Hvdraulic Clutch	. 5
LOGICMASTER® AIR CLUTCH CONTROL UNITS	
eatures and Specifications	
R431007550) Control Unit - Standard	
R431007552) Control Unit - Standard w/ Shaft Brake	
R431009156) Control Unit - Prop. Reversing Timing	
R431009167) Control Unit - 3600 Caterpillar engine only	7
I. LOGICMASTER® HYDRAULIC CLUTCH CNTRL. UNI	
Features and Specifications	
R431007528) Control Unit	9
R431007529) Control UnitII. GEARMASTER® CONTROL UNITS AND SYSTEMS	9
II. GEARMASTER CONTROL UNITS AND SYSTEMS	40
Features and Specifications	10
R431007068) Control Unit - Pneumatic Throttle Interlock	.11
R431007069) Control Unit - Hydraulic. Throttle Interlock	11
V. CLUTCH AND THROTTLE VALVES	40
THD-2-FM CONTROLAIR® Valve	12
2. HD-2-FM CONTROLAIR <sup>®</sup> Valve	14
B. HD-2-FC CONTROLAIR® Valve	15
HD-2-FX CONTROLAIR <sup>®</sup> Valve HC-2-FM CONTROLAIR <sup>®</sup> Valve	16
	17
	18
B. H-2-FX CONTROLAIR® Valve	20
). H-3 & H-3-G CONTROLAIR <sup>®</sup> Valve 0. SH-3 CONTROLAIR <sup>®</sup> Valve	21
O. SH-3 CONTROLAIR® Valve  H-4 & H-4-G CONTROLAIR® Valve  Output  Description:	22
2. 2A-2A CONTROLAIR Valve	23
/. AIR LOGIC VALVES	24
Gauge Block	
Shuttle Valve-Marine Logic	
Check Valve	
Flow Control	
Time Delay with Volume	
Air Volume	
B-Way Solenoid Normally Open Valve	
3-Way Solenoid Normally Close Valve	
Multifunction Valves - Pneumatic Pilot	
Multifunction Valves - Hydraulic Pilot	
Multifunction Adjustable Valve	
Pressure Regulator	
Subplate	
Hydraulic Shuttle Valve	39
/I. ASSOCIATED COMPONENTS	00
Shuttle Valve, Inline	40
Quick Release Valve, Inline	41
Relayair <sup>®</sup> Valve	42
Three-Position Cylinder	44
A-2-H Actuator	
AA-1 Actuator	
Shuttle Panel - Two Station - Single Engine	
Shuttle Panel - Two Station - Single Engine Shuttle Panel - Two Station - Twin Engine	<del>1</del> 0
Pontrol Transfer/Interlock Panel with Shuttle Walves	50
Control Transfer/Interlock Panel with Shuttle Valves	52



# Control Units & Systems Typical Control System Schematic


## LOGICMASTER® AIR CLUTCH CONTROL SYSTEM

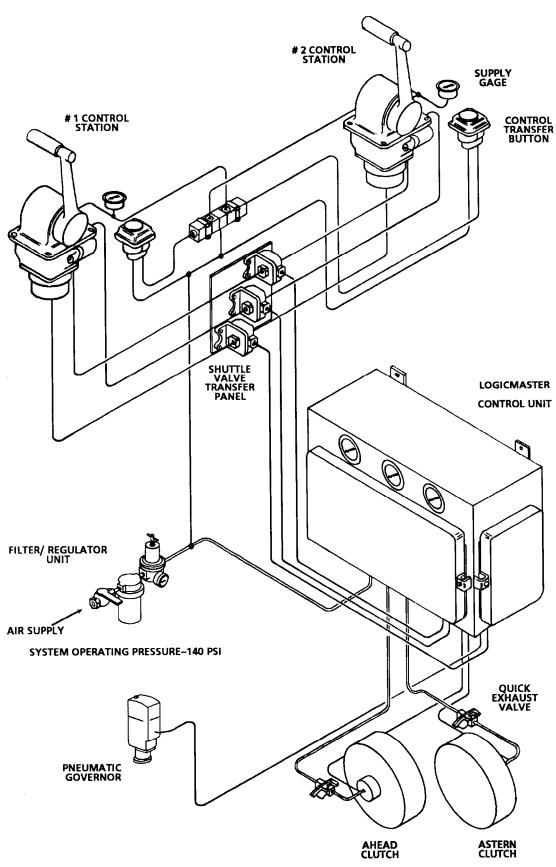



Typical Control System Schematic


## LOGICMASTER® HYDRAULIC CLUTCH CONTROL SYSTEM SINGLE ENGINE—TWO CONTROL STATIONS

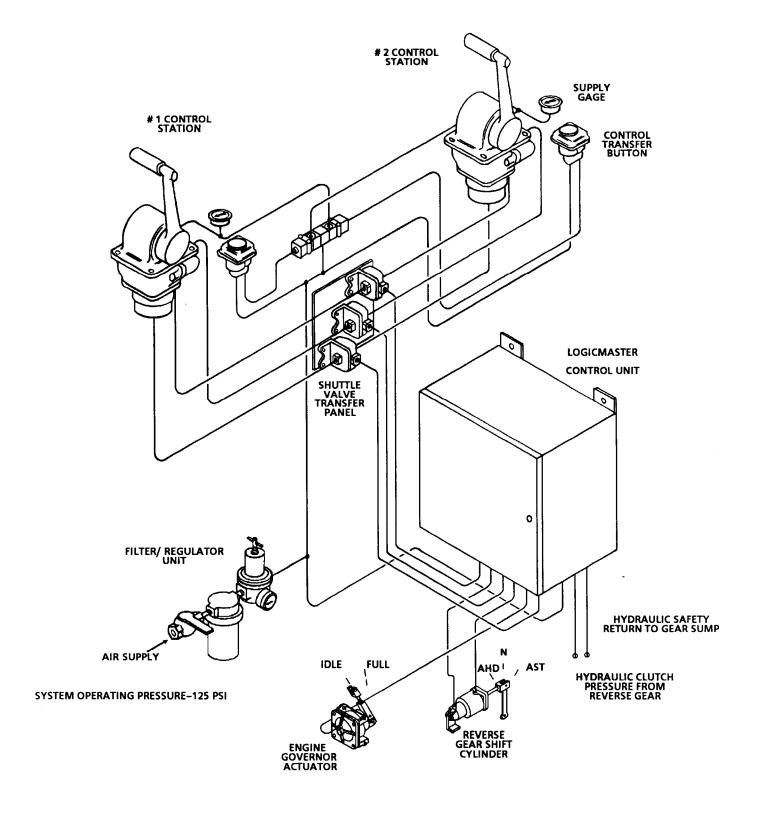




# Control Units & Systems Typical Control System Schematic

## GEARMASTER® HYDRAULIC CLUTCH CONTROL SYSTEM SINGLE ENGINE—TWO CONTROL STATIONS

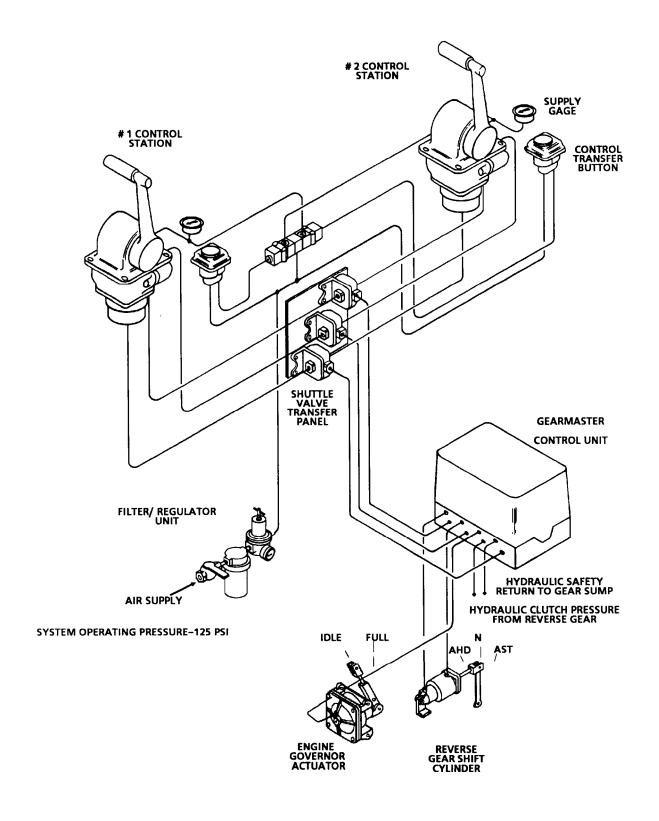

LogicMaster® Air Clutch Control Units

## LOGICMASTER® AIR CLUTCH CONTROL UNITS

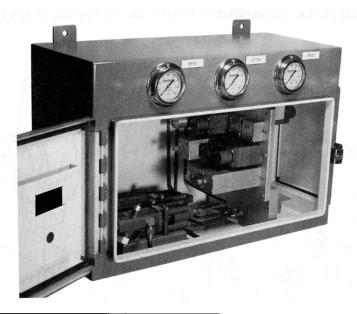

- 1,000 TO 4,000 H.P.
- TUGS, OFFSHORE SUPPLY BOATS. TOW BOATS. FISHING & **GENERAL SERVICE BOATS**

#### FEATURES...

- Fast maneuvering
- Maximum protection for propulsion machinery
- Rugged, service proven control valves
- Compact arrangement simplifies shipboard installations
- Manifolding assembly minimizes piping & potential leakage problems
- Factory tested for 100% operational performance and timing adjustments
- Simplified maintenance and troubleshooting

**OGICMASTER Air Clutch** Control Units combine proven, high performance pneumatic components into factory assembled, tested and pre-timed units, ready for shipboard installation and operation. All operating valves are subbase mounted for simplified service, maintenance and troubleshooting. Standard service and parts are as near as your authorized Rexroth Marine distributor.

LMAC units incorporate the pneumatic pressure interlocks and protective circuits required for proper engine and reverse gear operation without the necessity to rely on operator judgement to time, sequence or anticipate the propulsion machinery functions. The built-in control system logic program provides safe operation of the engine and reverse gear under all maneuvering conditions. The propulsion machinery responds to maneuvering commands without wear or damage from high speed clutch engagement or engine stalling during reversal maneuvers.

#### CONTROL SYSTEM SEQUENCE OF OPERATION...from FULL AHEAD to FULL ASTERN

- · Operator moves control handle from FULL AHEAD to FULL ASTERN
- Governor goes to the IDLE position
- AHEAD clutch exhausted
- Shaft Brake applied (if used)
- Timed interlock holds clutches in **NEUTRAL** (adjustable)
- Propeller speed reduces to acceptable level
- ASTERN clutch inflates at a controlled rate
- Shaft brake releases as clutch inflates
- Governor power boost prevents engine stalling on initial engagement
- Clutch reaches lock-up pressure; governor advances to FULL SPEED.




LogicMaster® Air Clutch Control Units

Ordering Information					
Model Part No. Old Part No. Descripti			Description		
LMAC-1	R431007550	P -090196-00000	Standard Unit		
LMAC-2	R431007552	P -090197-00000	Standard Unit with shaft brake control signal		
LMAC-3	R431009156	P -090198-00000	Unit with proportional reversing interlock timing		
LMAC-3C	R431009167		Unit with proportional reversing interlock timing for 3600 Series Caterpillar® engine		

Weight:87 lbs. (40kg.)

 $\label{lem:maintenance kit for the above units is Part Number R431006453 ( P -064517-00000).$ 

Caterpillar® engine is a registered trademark of Caterpillar, Inc., Mossville, IL

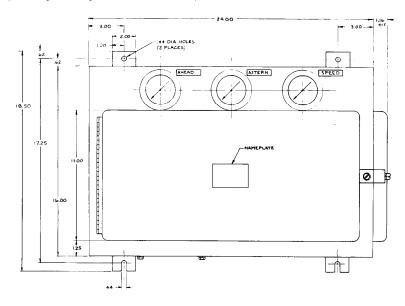

# to astern r proportion timing is p maneuvers performed for faster l

# LMAC CONTROL UNITS INCORPOR ATE THE FOLLOWING INTERLOCKS AND OPERATIONAL FEATURES . . .

**GOVERNOR POWER BOOST**—applied at the time of clutch engagement to prevent engine stalling and possible engine reversal-boost is adjustable for magnitude and duration.

#### CROSS-ENGAGEMENT

**INTERLOCKS**—monitor clutch pressure to insure that one clutch fully vents before the opposite clutch can be inflated, i.e. "ahead" clutch must fully disengage before "astern" clutch can engage.

#### TIMED REVERSING INTERLOCK

**CONTROL**—provides an adjustable "neutral" hold time during fast reversals to allow engine and propeller speed to decrease to an acceptable level before opposite clutch can be engaged.

#### CLUTCH PRESSURE/ENGINE SPEED

**INTERLOCK**—insures that selected clutch inflates to lock-up pressure before engine speed can be increased.

**SOFT CLUTCH ENGAGEMENT**—provides smooth engagement to reduce gear shock and engine loading by two-stage rate of clutch fill. Initial fill is at a controlled rate for soft engagement then opens to maximum flow rate for rapid fill.

#### SHAFT BRAKE CONTROL

(optional)—activates shaft brake in synchronization with clutches. Brake releases when clutch engagement starts and applies when clutches release. With brake control the "timed reversing interlock" provides neutral hold time to permit the propeller to be stopped.

#### PROPORTIONAL TIMED REVERSING

**INTERLOCK** (optional)—provides an ahead to astern reversing time which is in proportion to vessel speed (adjustable). Since timing is proportional to speed, low speed maneuvers for docking and shifting are performed with minimum interlock timing for faster handling.

#### Port Numbers

1A - Ahead Clutch Out

1C — Ahead Signal In

3A - Astern Clutch Out

3C – Astern Signal In

8A – Speed Signal Out

8C - Speed Signal In

AHD CL - Ahead Interlock

AST CL – Astern Interlock

SH BR - Shaft Brake Signal



LogicMaster® Hydraulic Clutch Control Units

## LOGICMASTER® HYDRAULIC CLUTCH CONTROL UNITS & CONTROL SYSTEMS

- 800 TO 2,000 H.P
- OFFSHORE SUPPLY BOATS, CREW BOATS, TUGS, FISHING & GENERAL SERVICE BOATS

LOGICMASTER Hydraulic Clutch Control Units combine proven, high-performance pneumatic components into factory assembled, tested and pre-timed units ready for shipboard installation and operation. All operating valves are subbase mounted for simplified service, maintenance and troubleshooting.



#### FEATURES...

- Compact arrangement —permits simplified shipboard installation
- Rugged, service proven operating valves
- Integral circuit manifold eliminates piping, fittings and potential leakage problems
- Standard circuit layout simplifies field maintenance and troubleshooting
- Factory performance tested—100% pressure tested for operational performance and timina
- Enclosure protects equipment and minimizes tampering
- Operates on standard 125 psi shipboard air supply


Both systems include the standard interlock features of timed reversing interlock, governor power boost on clutch engagement and clutch pressure — throttle control interlock. The LM2 system **offers the additional** clutch pressure-shaft brake in coordination with the clutch operation.


#### CONTROL SYSTEM SEQUENCE OF OPERATION...from FULL AHEAD to FULL ASTERN

- Operator moves control handle from FULL AHEAD to FULL ASTERN
- Governor goes to the IDLE position
- Reverse gear to NEUTRAL
- Shaft Brake applied (if used)
- Timed interlock holds reverse gear in neutral
- Engine & Shaft speed to IDLE or SHAFT STOP
- Reverse gear shifts ASTERN
- Shaft brake releases (if used)
- Governor power boost applied
- Clutch pressure reaches lock-up
- Governor power boost terminates; governor advances to FULL SPEED.



LogicMaster® Hydraulic Clutch Control Units

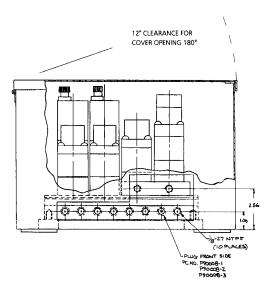

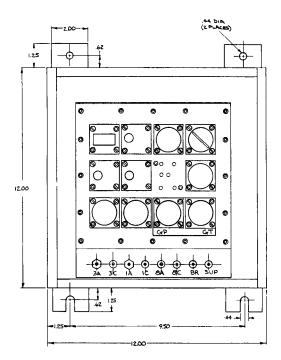

**LOGICMASTER**<sup>®</sup> Hydraulic Clutch Control systems are specifically designed for the hydraulic clutch type of marine reverse gears and include these service proven interlocks and features:

**POWER BOOST...**Advances governor setting during clutch engagement to provide increased engine torque and prevent stalling as the propeller load is applied. On completion of clutch engagement, the boost drops off and the governor is positioned to the setting called for by the pilothouse control lever. Governor power boost can be adjusted for desired magnitude and duration.

CLUTCH PRESSURE—THROTTLE CONTROL INTERLOCK...Monitors the buildup of hydraulic pressure in the clutch during engagement. Clutch pressure must reach preset engagement level before engine speed can be advanced from the remote control station to prevent high engine speed during clutch engagement and resultant clutch wear. This feature also protects the reverse gear if clutch pressure drops during operation. Loss of clutch pressure releases the interlock and engine speed is reduced to idle, preventing clutch damage.

**TIMED REVERSING INTERLOCK...**Holds the clutch control in neutral position for a preset time on reversals even though the remote control lever is shifted directly through neutral. This allows engine and propeller speeds to decrease to an acceptable level before reversal is initiated. When a shaft brake is used, the neutral timing is long enough for the brake to apply and stop the propeller before reversing. Timing is adjustable.

CLUTCH PRESSURE—SHAFT BRAKE INTERLOCK...Prevents the shaft brake from being applied when either clutch is engaged. As the clutch pressure is applied, the shaft brake control valve is actuated to release the brake. This clutch pressure interlock prevents simultaneous engagement of the clutch and brake.

#### **Port Numbers**

- 1A Ahead Out
- 1C Ahead In
- 3A Astern Out
- 3C Astern In
- 8A Speed Out
- 8C Speed In
- GP Gear Pressure
- GT Hydraulic Safety Return
- BR Shaft Brake Signal
- SUP Supply

Ordering Information					
Model	Model Part No. Old Part No. Description		Description		
LM1	R431007529	P -090008-00001	Unit less shaft brake control		
LM2	R431007528	P -090008-00000	Unit with shaft brake control signal		
	D40400/450	D 0/4517 00000	Maintenance kit for R431007529		
	R431006452	P -064517-00000	(Old Part No. P -090008-00001)		
	D42100/454	D 0/4510 00000	Maintenance kit for R431007528		
	R431006454	P -064518-00000	(Old Part No. P -090008-00000)		

Weight: 31 lbs. (14.1kg.)

## **AVENTICS**

## **Control Units & Systems**

GearMaster® Propulsion Control Systems

#### **GEARMASTER® MARINE** PROPULSION CONTROL SYSTEMS

- **HYDRAULIC CLUTCH REVERSE GEARS**
- 200 TO 1200 H.P.
- TOWBOATS, TUGS, TRAWLERS, SEINERS



**EARMASTER**® Controls Gincorporate the necessary interlock and protective circuits for proper engine and reverse gear operation without relying on operator judgement to time or anticipate propulsion machinery functions. With GEARMASTER controls, the propulsion machinery responds to maneuvering demands without wear or damage from high speed dutch engagement or engine stalling.

## **Part Numbers of Control**

- R431007068 with pneumatic clutch/throttle interlock (Old Part No. P -067393-00000)
- R431007069 with hydraulic clutch/throttle interlock (Old Part No. P -067394-00000)

#### FEATURES...

- Compact size...simplified installation
- · Simplicity...minimum number of components
- · Serviceability...manifold mounted components
- Service proven...components and control circuit
- Minimum piping connections with manifolded circuit
- Timed reversing interlocks
- Clutch engagement/ throttle interlock
- Controlled engine acceleration
- Shaft brake timing




# Control Units & Systems GearMaster® Propulsion Control System

Ordering Information				
Part No.	Old Part No.	Description		
R431007068	P -067393-00000	Pneumatic throttle interlock unit		
R431007069	P -067394-00000	Hydraulic throttle interlock unit		
R431000806	P -027493-00000	Maintenance kit for R431007068		
		(Old Part No. P -067393-00000)		
R431000807 P -027494-00000		Maintenance kit for R431007069		
	021434 00000	(Old Part No. P -067394-00000)		



Weight: 15 lbs. (6.8 kg.)

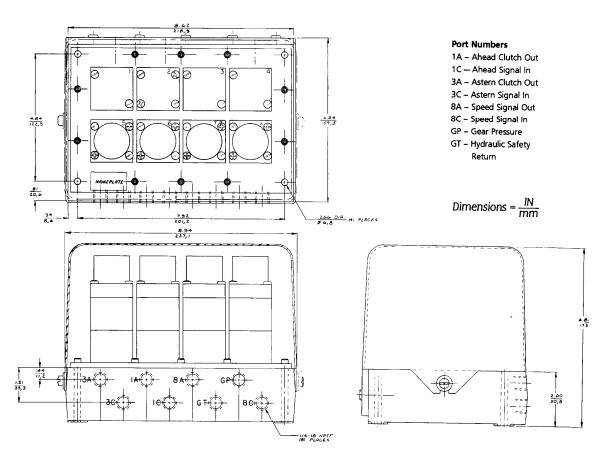




Model THD-2-FM

#### **Twin Engine Marine Control Valve**



THD-2-FM valves provide single handle control for propulsion direction and engine speed for two engines. This top of the line model is ruggedly built from nonferrous materials and has an attractive chrome-plated brass cover with chrome handles. The completely enclosed cover and rugged construction make it ideal for exposed station installations.

Fore or aft movement to either control handle from neutral to the clutch position delivers supply pressure into the appropriate ahead or astern control line to engage the clutch. Further movement increases the pressure signal delivered to the engine governor. The neutral and clutch positions are detented for positive position indication. An adjustable friction brake holds the handles in any selected position. Models are available in 10-65 psi and 30-70 psi pressure ranges.

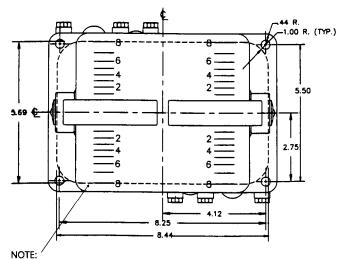



- PANEL MOUNTING CUTOUT ONE PIPE BRACKET MUST BE REMOVED FOR INSTALLATION.
  (2) CUTOUT TEMPLATE PACKAGED WITH EACH VALVE.

#### **FEATURES...**

- Modern, Low Profile Design
- Rugged Construction
- Polished Chrome Plated Brass Cover and Handles
- Provides Direction and Speed Control of Two Engines in One Assembly
- Enclosed Upper Cover for Exposed Station Service
- Simplified Console Installation
- Accomodates up to 3/4" Console Thickness

Model THD-2-FM

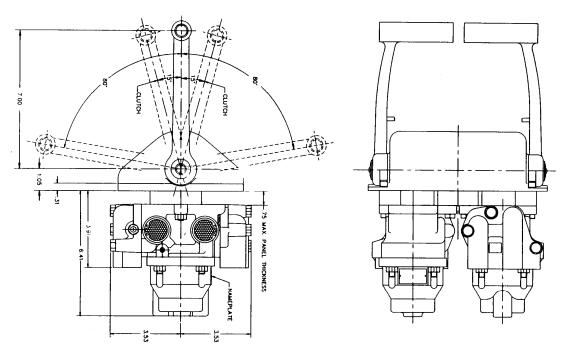

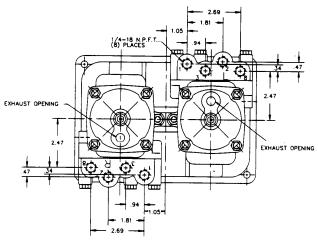

MAX. INLET AIR 200 PSI (13.8 BAR)

THD-2-FM Order Information:					
Part No. Old Part No. Description					
R431000720	P -027121-00101	THD-2-FM (10-65 PSI)			
R431000721	P -027121-00109	THD-2-FM (30-70 PSI)			

Maintenance kit (2 Required) R431006521

(Old Part No. P -064894-0002)

TEMPERATURE -40°F TO 160°F (-40°C TO 71°C)

PORT CONNECTIONS: 2 = SUPPLY 1 = CLUTCH 3 = CLUTCH 8 = SPEED WEIGHT: 25 LBS. (11.3 KG.)





Model HD-2-FM




HD-2-FM Valves provide single handle control for propulsion direction and engine speed. This middle of the line model is ruggedly built from non-ferrous materials and has an attractive chrome plated bronze cover with a chrome handle. The completely enclosed cover and rugged construction make it ideal for exposed station installations.

Fore or aft movement of the control handle from neutral to the clutch position delivers supply pressure into the ahead or astern control line to engage the appropriate clutch. Further movement increases the pressure signal delivered to the engine governor. The neutral and clutch positions are detented for positive position indication. The HD-2-FM is designed with an L-shaped handle so that two units can be mounted side by side for operation with one hand. An adjustable friction brake holds the handle in any selected position.

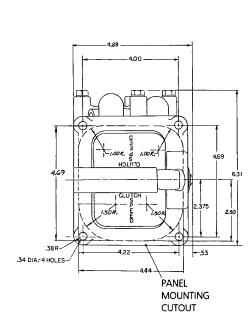

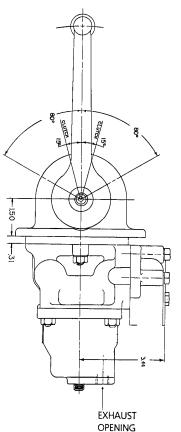

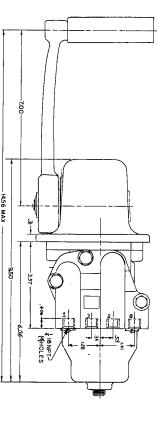

HD-2-FM Order Information:						
Designation	Part No.	Old Part No.	Setting			
HD-2-FM	R431006281	P -063470-00101	10-65 PSI			
HD-2-FM	R431006282	P -063470-00109	30-70 PSI			
HD-2-FM	R431006283	P -063470-00111	10-70 PSI			

Maintenance kit R431006521 (Old Part No. P -064894-00002)

MAX. INLET AIR	PORT CONNECTIONS:
200 PSI (13.8 BAR)	2 = SUPPLY
	1 = CLUTCH
TEMPERATURE	3 = CLUTCH
-40°F TO 160° <b>F</b>	8 = SPEED
(-40°C TO 71° <b>C</b> )	WEIGHT: 12 LBS.
	(5.44 KG.)




Model HD-2-FC

The HD-2-FC CONTROLAIR Valve is a handle operated pressure control and directional flow control valve. It contains two 3-way directional valves and a pressure regulating portion, which are arranged to furnish inlet air pressure to two directional clutch control lines and graduated pressure to one infinite positioning speed control line.

The selection between the two clutch control lines depends upon handle movement to either side of "Neutral" position. The pressure in the speed control line is proportional to the position of the handle in either quadrant.

The cover is die-cast aluminum with grey textured polyester paint, with stainless steel handle, hub and yoke. The angled handle, so designed that when mounted side by side they can be operated by one hand, is equipped with an adjustable friction brake that will hold the handle in any selected position.



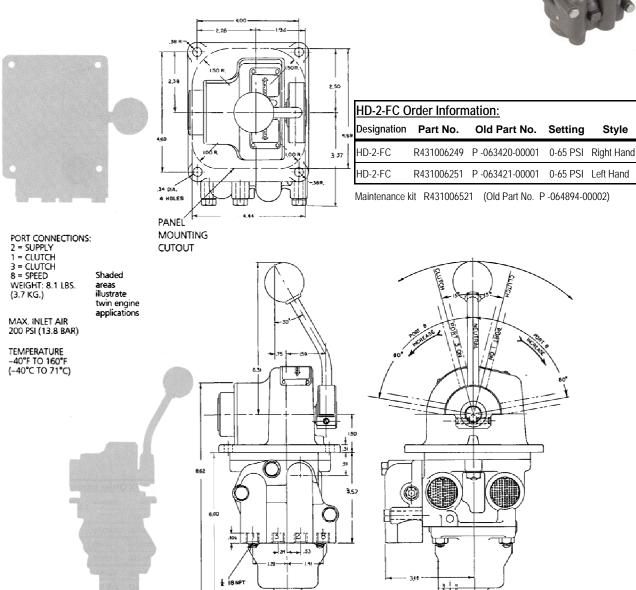


EXHAUST OPENING

Model HD-2-FX



The HD-2-FX valve provides simple and efficient single handle control for propulsion direction and engine speed. It is frequently used as an engine room control, or on smaller craft as a bridge control.

Lightweight and rugged, non-ferrous construction, HD-2-FX valves are made of anodized die-cast aluminum for economy. The lever remains in the position where released. Holding friction is adjustable. Functional operation is the same as HD-2-FM and HD-2-FC CONTROLAIR valves.

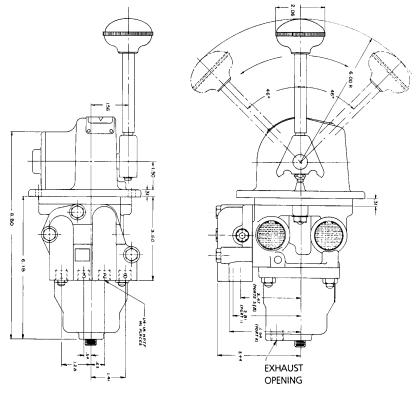

MAX. INLET AIR 200 PSI (13.8 BAR)

TEMPERATURE -40°F TO 160°F (-40°C TO 71°C)

PORT CONNECTIONS:

2 = SUPPLY


1 = CLUTCH

3 = CLUTCH

8 = SPEED

WEIGHT: 7 LBS.

(3.17 KG.)

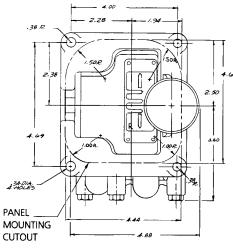

HD-2-FX Order Information:					
Part No.	Old Part No.	Pressure	Cover		
R431002823	P -050970-00001	0-65 PSI	Plain		
R431002824	P -050970-00002	0-100 PSI	Plain		
R431002825	P -050970-00003	0-125 PSI	Plain		
R431002826	P -050970-00004	0-150 PSI	Plain		
R434001204	P -066514-00001	0-65 PSI	Chrome*		
R434001749	P -064924-00017	30-70 PSI	Plain		

\*Chrome cover and handle yoke.

Maintenance kit R431006521

(Old Part No. P -064894-00002)




Model HC-2-FM

The HC-2-FM valve is designed for open deck marine service and is the same as the HC-2-FX CONTROLAIR valve, except it features longer handle travel, more accurate positioning and a polished chrome plated bronze cover and handle.

The valve is a lever operated, pressure regulating, 4-way directional valve. It consists of two 3-way directional valves and a 3-way pressure regulating portion. The regulating portion furnishes inlet air to the directional valves. Each directional valve has its own outlet port.

Initial lever movement from "mid" position selects the outlet port to be activated. Further lever movement in the same direction controls the outlet pressure at that point. The opposite port remains connected to atmosphere. Lever remains in the position where released. Handle holding friction is adjustable.

Use these valves to control two clutches, a clutch and a brake, two single acting cylinders or a double acting cylinder...wherever you want to selectively control pressure in either of two separate air lines with one lever.

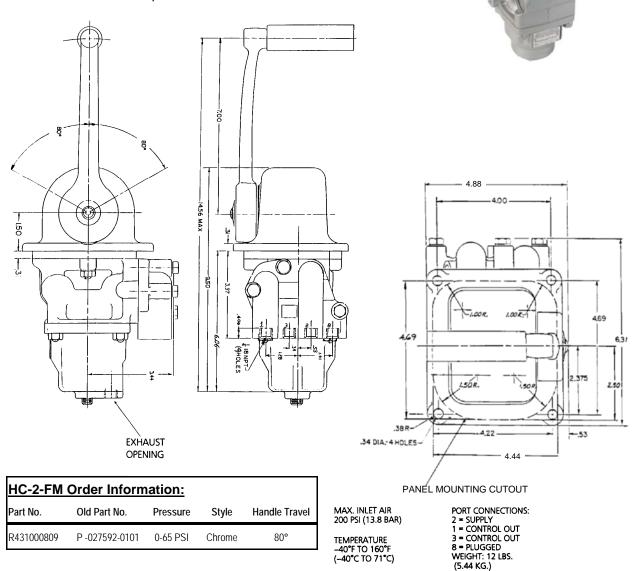

(-40°C TO 71°C)



Model HC-2-FX



The H-2-FX valve is a lever operated, pressure regulation, 4-way directional valve made of anodized die-cast aluminum. It consists of two 3-way directional valves and a 3-way pressure regulating portion. The regulating portion furnishes inlet air to the directional valves. Each directional valve has its own out port.


Initial lever movement from "mid" position selects the out port to be activated. Further lever movement in the same direction controls the outlet pressure at that port. The opposite port remains connected to atmosphere. Lever remains in the position where released. Handle holding friction is adjustable.


Use these valves to control two clutches, a clutch and a brake, two single acting cylinders or a double acting cylinder...wherever you want to selectively control pressure in either of two separate air lines with one lever.


PORT CONNECTIONS: 2 = SUPPLY 1 = CONTROL OUT 3 = CONTROL OUT 8 = PLUGGED WEIGHT: 12 LBS. (5.44 KG.)

MAX. INLET AIR 200 PSI (13.8 BAR)

TEMPERATURE -40°F TO 160°F (-40°C TO 71°C)

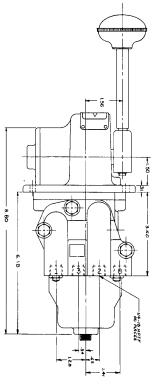

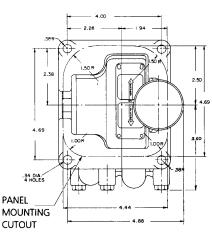

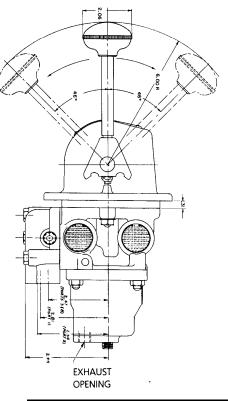

HC-2-FX Order Information:				
Part No.	Old Part No.	Pressure		
R431002839	P -050976-00001	0-65 PSI		
R431002840	P -050976-00002	0-100 PSI		
R431002841	P -050976-00003	0-125 PSI		
R431002842	P -050976-00004	0-150 PSI		
R431002843	P -050976-00008	0-30 PSI		

Maintenance kit R43100652


(Old Part No. P -064894-00002)




Model H-2-FM

The H-2-FM valve is designed for open deck marine service and features handle travel of 78°, plus accurate pressure control and a polished chrome plated bronze cover, handle and grip.

This valve controls engine governor operation permitting the engine to be run at advanced speed for warm-up and check-out without engaging the clutch. After engine warm-up, control is transferred to the bridge.

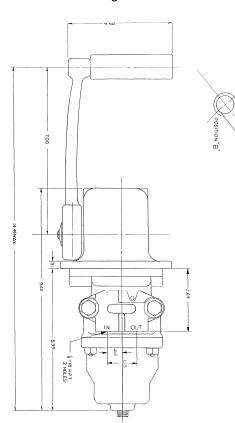

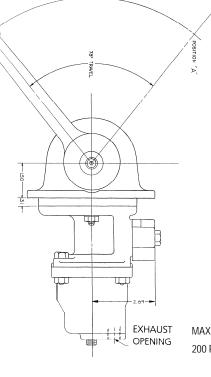

MAX. INLET AIR PORT CONNECTIONS:

200 PSI (13.8 BAR) 2 = SUPPLY

1= CONTROL OUT

TEMPERATURE 3 = CONTROL OUT

-40°F TO 160°F 8= PLUGGED

(-40°C TO 71°C) WEIGHT: 12 LBS.

(5.44 kg.)


H-2-FM Order Information:						
	Delivery Pressure					
Designation	Part No.	Old Part No.	Position A	Position B	Style	
H-2-FM	R431006728	P -065914-00111	65 PSI	10 PSI	Right Hand	
H-2-FM	R431006729	P -065914-00122	150 PSI	10 PSI	Right Hand	
H-2-FM	R431006721	P -065852-00111	10 PSI	65 PSI	Left Hand	
H-2-FM	R431006628	P -065468-00118	30 PSI	70 PSI	Left Hand	
H-2-FM	R431006627	P -065467-00118	70 PSI	30 PSI	Right Hand	


Maintenance kit R431004887 (Old Part No. P -059028-00000)



Model H-2-FX


The H-2-FX CONTROLAIR valve is a lever operated regulating valve used for engine warm-up applications. Installed in the engine room, this valve controls governor operation, permitting the engine to be run at advanced speed for warm-up and check-out without engaging the clutch. After engine warm-up, control is transferred to the fridge. It is made of anodized die-cast aluminum.

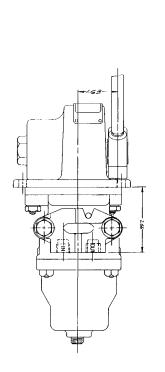

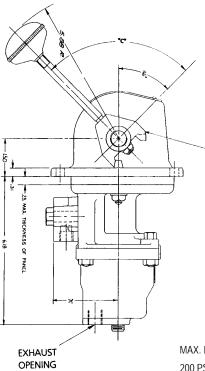



92° YOKE ASSEMBLY AS SHOWN -REVERSE ASSEMBLY FOR 78° HANDLE TRAVEL

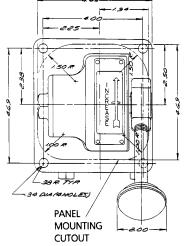

MAX. INLET AIR PORT CONNECTIONS: 200 PSI (13.8 BAR) 2 = SUPPLY

1= CONTROL OUT

**TEMPERATURE** 3 = CONTROL OUT -40°F TO 160°F 8= PLUGGED

(-40°C TO 71°C) WEIGHT: 7 LBS.

(3.17 kg.)

H-2-FX Order Information:						
Part No.	Old Part No.	Pressure	"C" Handle Travel			
R431002643	P -050494-00001	0-65 PSI	92°			
R431002644	P -050494-00002	0-100 PSI	92°			
R431002649	P -050494-00011	10-60 PSI	78°			

Maintenance kit R431004887

(Old Part No. P -059028-00000)



Models H-3 & H-3-G

#### H-3

The H-3 CONTROLAIR Valve is equipped with a roller for operation by a cam or a similar mechanical device. Graduated pressure which is directly proportional to the amount of downward movement of the roller lever is delivered from the OUT port. Total movement is approximately 5/16" (7.9 mm) with the initial 1/16" (1.6 mm) travel used to close the exhaust valve.





Approximate weight 4.5 lbs. (2.04 Kg)


## H-3-G

This design is similar to the H-3 CONTROLAIR except the spring housing area is sealed and a biasing control pressure can be introduced through the tapped lower housing port to the underside of the diaphragm. By varying this signal, the output of the H-3-G CONTROLAIR can be biased or adjusted in proportion. This bias signal must be lower than the output signal.

Approximate weight 5 lbs. (2.27 Kg)

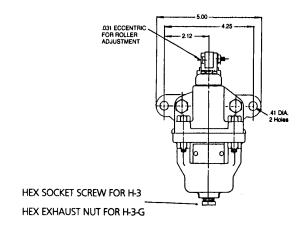

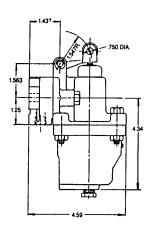

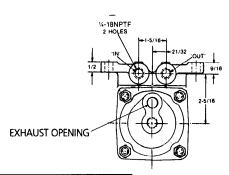

%-18 NPTF (2 PL)	
<b>1 0 0</b>	UT. 50
	2.31
V-18 NPTF (CONTROL PORT)	.938
EXHAUST -	H-3-G

H-3 Order Information:				
Part No.	Old Part No.	Pressure		
R431002626	P -050382-00001	0-65 PSI		
R431002627	P -050382-00002	0-100 PSI		
R431002628	P -050382-00003	0-125 PSI		
R431002629	P -050382-00004	0-150 PSI		
R431002630	P -050382-00006	0-15 PSI		
R431002631	P -050382-00008	0-25 PSI		
R431002632	P -050382-00009	0-75 PSI		

TEMPERATURE -40°F TO 160°F (-40°C TO 71°C)

MAX. INLET AIR 200 PSI (13.8 BAR)

Maintenance kit R431004887 (Old Part No. P -059028-00000)

Maintenance kit R431003896 (Old Part No. P -055687-00002) Maintenance kit R431006648 (Old Part No. P -065636-00000) (Roller ass'y)

Maintenance kit (Roller ass'y.) R431006648 (Old Part No. P -065636-00000)

H-3-G Order Information:			
Part. No.	Old Part No.	Pressure	Ports
R431009131	P -052550-00008	0-30 PSI	1/4-18
R431002981	P -052550-00001	0-65 PSI	1/4-18


## AVENTICS"

## Controlair® Valves

Model SH-3



The SH-3 CONTROLAIR Valve is a pressure graduating valve similar to the H-3 CONTROLAIR Valve, but with a larger, more sensitive diaphragm for minimum hysteresis and maximum sensitivity of pressure graduation for optimum control of positioning devices such as Servo Positioners and applications where very precise control is required. (Hysteresis =  $\pm \frac{3}{4}$  psi.) Weight: 4 lbs. (1.81 Kg)

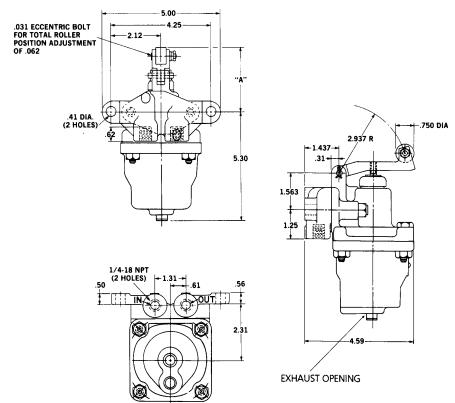

SH-3 Order Information:			"A" I	FACTORY	SETTING*
Part No.	Old Part No.	Pressure	2.718	2.531	2.114
					+5
R431006528	P -064920-00001	10-60 PSI	FULL EXH	10 PSI	60 PSI
					-0
					+2
R431006529	P -064920-00005	3-15 PSI	FULL EXH	3 PSI	15 PSI
					-1/2

MAX. INLET AIR 200 PSI (13.8 BAR) TEMPERATURE -40°F TO 160°F

(-40°C TO 71°C)

WEIGHT: 4 LBS. (1.81 KG.)

Maintenance kit P -065018-00000

<sup>\*</sup>Travel further than this can damage valve mechanism.



Models H-4 and H-4-G

#### H-4

The H-4 CONTROLAIR Valve is a knob operated, 3-way pressure regulating valve. Arranged for panel mounting, this valve gives fine, vernier type pressure control in one delivery line. The knob holds in all positions and has adjustable stops to limit maximum and minimum travel.

Clockwise rotation of the knob increases pressure in the standard models. Opposite knob action is available.

Approximate weight: 5.5 lbs. (2.5 Kg)




#### H-4-G

This design is similar to the H-4 CONTROLAIR except the spring housing area is sealed and a control signal can be introduced under the diaphragm through the tapped lower housing port.

The delivery pressure is then regulated by the applied control signal and can be biased by operation of the control knob to adjust the output pressure approximately 10 psi (0.7 bar). The main use is to balance the RPMs of two or more engines.

Approximate weight: 6 lbs. (2.72 Kg)

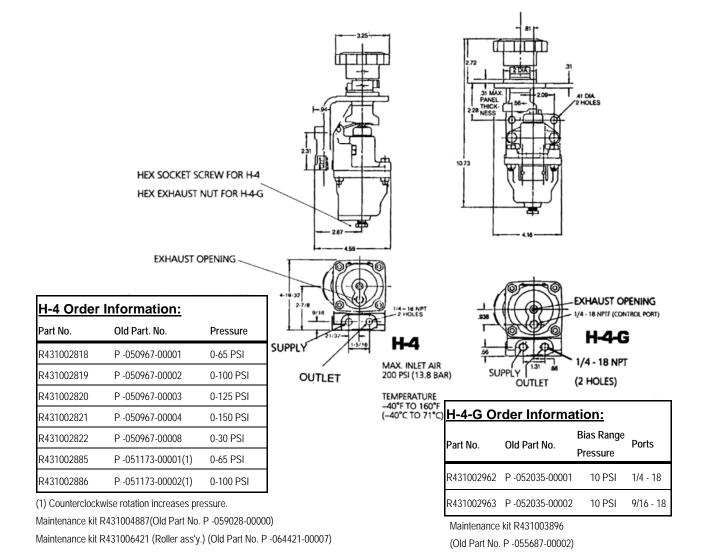

## AVENTICS"

## Controlair® Valves

Model 2A-2A

The 2A-2A valve was designed especially for marine control applications. It provides single -handed control of propulsion direction and engine speed for finger-tip maneuvering control. The large easy-to-operate control handle moves through a "Z" slot, putting the clutch in neutral when the handle is in the middle of crossover portion of the "Z". The handle locks in any position simply by twisting the handle.

The deluxe 2A-2A valves are completely constructed of non-ferrous materials for long, hard service. An attractive and durable polished chrome-plated 303 stainless steel cover and chrome-plated brass handle help preserve the rugged good looks of a bridge console where only the finest is good enough.

- Single handle movement for direction and speed
- "Z" slotted cover to guide the handle movement
- Polished chrome-plated 303 stainless steel cover
- Simplified console installation
- Polished chrome-plated brass handle can be locked in position
- Removable pipe bracket for installation and removal from the panel


#### **Ordering Reference**

Not recommended for exposed weather deck installation due to open cover slot.


2A-2A Controlair Valve

New Part Number	Old Part Number	Pressure Range
R431009268	P -065775-00000	7 - 61 psi (0.5-4.2 bar)
R431009269	P -065775-00001	28 - 71 psi (1.9-4.9 bar)

Installation Drawing DP65775 Weight - 25 lb. 11.34 kg.

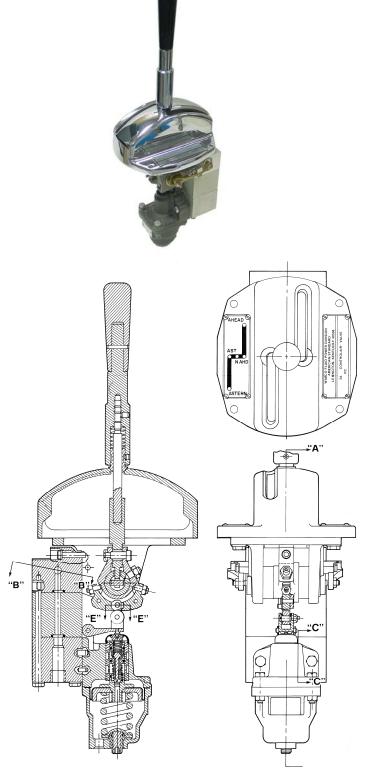



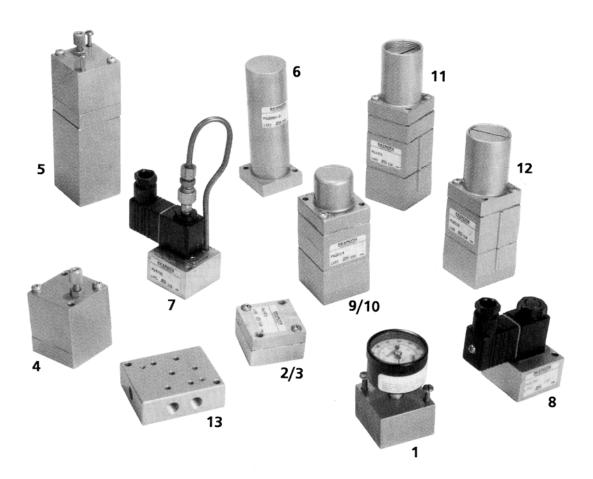

REF.#	DESCRIPTION/Page	PART NO.	OLD PART NO.
1	Gauge Block p. 26	R431006136	P -062885-00000
2	Shuttle Valve , Marine Logic p. 27	R431005928	P -061971-00000
3	Check Valve p. 28	R431009231	P -062988-00002
4	Flow Control Valve p. 29	R431005931	P -061975-00002
5	Timer (Timed Application) p. 30	R431006335	P -064003-00000
5	Timer (Timed Release) p. 30	R431006336	P -064003-00001
6	Volume p. 31	R431006133	P -062880-00003
7	Solenoid Valve (N.O.) p. 32	R431007506	P -069785-00000
8	Solenoid Valve (N.C.) p. 33	R431007507	P -069786-00000
9	Multifunction Pneumatic Valve p. 34	R431005976	P -062016-00000 series
10	Multifunction Hydraulic Valve p. 35	R431005962	P -062014-00000 series
11	Multifunction Adjustable Valve p. 36	R431005932	P -061976-00000 series
12	Pressure Regulator p. 37	R431005985	P -062018-00000
13	Subplate p. 38	R431006017	P -062129-00001



Gauge Block

#### **Gauge Block**

#### Purpose:

To read a pressure in a Logic System.



#### Installation:

Gage may be mounted in any position on a logic panel or subplate. Two (2) mounting screws are provided with the subplate version. Screw part number R431001772 ((Old part No. P -049467-00013) is used for mounting to logic panel (2 required).

#### Maintenance:

Replace air gauge if damaged.

#### Notes:

3. Gauge

1. Working pressure:

150 psi max.

(10.3 bar)

2. Operating temperature:

-40°F to 165 °F (-40°C to 74°C)


0 to 160° psig total graduation 20 psig figure intervals

2 psi graduation marks

Dimensions =

Part Number	Old Part No.	No. Description	
R431006136	P -062885-00000	Gauge Block less Subplate	
R431009166	P -062885-00001*	Gauge Block with Subplate	

<sup>\*</sup> For subject dimensions see Page 36.

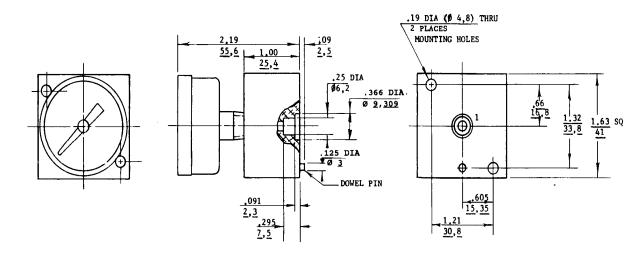



Shuttle Valve, Marine Logic

#### Shuttle Valve, Marine Logic

#### Purpose:

The Shuttle Valve automatically selects and directs the flow of air from one or the other of two controlling devices to a common outlet. It serves to connect two independent lines to a common line without destroying the segregation.

#### Function:


The diaphragm is moved by the higher pressure of the two inlets (ports 1 and 3) to seal off the other and allow the higher pressure to be delivered from port 5. There is always the air connection between the higher pressure inlet and the delivery line (port 5).

#### Installation:

Shuttle valves may be mounted in any position. The valve must be mounted on a logic panel or subplate. Two mounting screws are provided with the subplate version. Order screw number R431001772 (Old Part No. P -049467-00013) for mounting shuttle valve to a logic panel.

#### Maintenance:

Kit part number R431006240 (Old Part No. P -063400-00000)

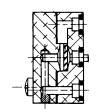

#### Notes:

1. Working Pressure:

125 psi max. (8.6 bar)

2. Operating temperature:


-20°F to 165°F (-28°C to 74°C)

3. Flow rating-flow factor: F = .14


4. Shift differential: 1.0 psi max.


Part Number	Old Part No.	Description
R431005928	P -061971-00000	Valve less Subplate
R431005929	P -061971-00001*	Valve with Subplate

<sup>\*</sup> For subplate dimensions see page 36.

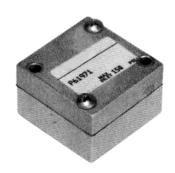

 $\frac{IN}{DIMENSIONS} = mm$ 

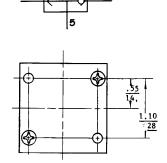

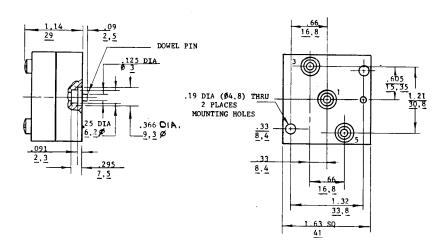

**Check Valve** 

#### **Check Valve**

#### Purpose:

not allowing any reverse flow.

## Maintenance:

Kit part number R431006239 ( old P -063398-00000) The valve allows air to flow freely in one direction, while

#### Notes:

1. Working Pressure:

150 psi max.

(10.3 bar)

2. Operating temperature:

-25°F to 165°F (-32°C to 74°C)

3. Flow rating-flow factor:

F = 0.14

4. Cracking pressure:

3.0 psi (0.21 bar) max.

Part No.	Description	
D/31000231	Check Valve less Subplate	

(old part no. P -062988-00002)

\* For subplate see page 36.



#### Installation:

flow.

Function:


Check valves may be mounted in any position. Pay attention to the direction of airflow. The valve must be mounted on a logic panel or subplate. Two mounting screws are provided with the subplate version. Order screw no. R431001772 (Old Part No. P -049467-00013) (2 required) for mounting logic valve to a logic panel.


In the rest position, the pre-stressed piston cup cuts off the connec-


tion between port 2 and 4. When the pressure at Port 2 exceeds


the pre-stressing of the cup (3 psi or 0.21 bar), air flows to Port 4...


When the pressure at port 4 exceeds the pressure at port 2 (3 psi or 0.21 bar) the piston cup acts as check valve to prevent return

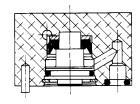

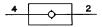

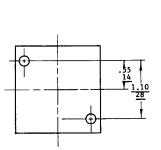

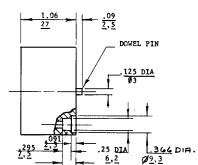

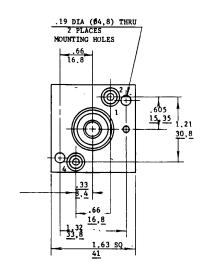



Flow Control Valve

#### **Flow Control Valve**

#### Purpose:

To provide adjustable control of the rate of flow in one direction with unrestricted flow in the opposite direction (i.e., timing of pressure increase for speed setting, fast decrease to idle speed.)

#### Installation:

Flow control valves may be mounted in any position. Pay attention to the direction of airflow. The valve must be mounted on a subplate. For mounting with the Subplate version, two screws are provided. Mounting screws for the logic plate version are part number 431001768 (Old Part No. P –049467-00007) (2 required)

#### Maintenance:

Kit part number R431006224 (Old Part No. P -063393-00000)

#### Function:

Air entering port 3 flows against the flexible check valve seal and must pass through the adjustable orifice to port 4. The rate of flow and timing of pressure increase downstream from port 4 is controlled at a rate determined by the orifice setting. When pressure is released from port 3, the flexible check valve seal allows free flow of the downstream air for rapid response.

#### Notes:

1. Working Pressure: 125 psi max. (8.6 bar)
2. Operating temperature: -25°F to 165°F (-32°C to 74°C)

3. Flow rating-flow factor: F = .14


4. Internal filtering both directions.


Dimensions =  $\frac{IN}{mm}$ 




Part Number Old Part No.		Description
R431005931	P -061975-00002	Flow Control less Subplate
R431009118	P -061975-00001*	Flow Control with Subplate

<sup>\*</sup> For subplate dimension see page 36.

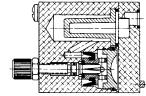

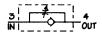

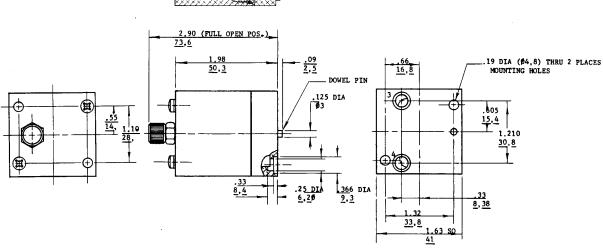





Time Delay With Volume

#### **Time Delay With Volume**



#### IN DIMENSIONS =

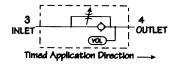

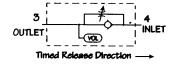

#### Purpose:

To time the sequence of system operations by controlling the rate of pressure increase to or release from a control sequence valve or actuating circuit.

#### Function:

#### (Timed Application)

Inlet air pressure is applied to Port 3, the internal check valve blocks flow, flow is diverted through the adjustable needle orifice and pressure increases at port 4 and the downstream control circuit at a timed rate determined by the orifice setting.

#### (Timed Release)

The charged downstream pressure at port 3 is blocked by the check valve and must be released through the adjustable orifice at a timed rate determined by the orifice setting.

#### Adjustment:

Rotate the adjustment knob clockwise to increase time delay; rotate counter-clockwise to shorten time delay.

#### Installation:

Install the time delay valve with the proper designation according to circuit symbol.

Two mounting screws are included with the subplate version. Order screw no. R431001775 (Old Part No. P -049467-00016) for mounting valve to logic panel (2 required).


#### Notes:


Working Pressure	150 psi max.
	(10.3 bar)
Operating temperature	-25°F to 165°F (-32°C to 74°C)
3. Flow rating-flow factor:	F = .14
4. Volumetric capacity:	2.2 cu. In. (36 cc)

Part Number	Old Part Number	Part Number	Old Part Number	
less Subplate	less Subplate	with Subplate*	with Subplate	Description
R431006335	P -064003-00000	R431009148	P -064003-00002	Timed Application
R431006336	P -064003-00001	R431006337	P -064003-00003	Timed Release

<sup>\*</sup> For subplate dimensions see page 36.

Repair Kit (for all four part numbers) R431006224 (Old Part No. P -063393-00000)

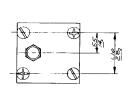

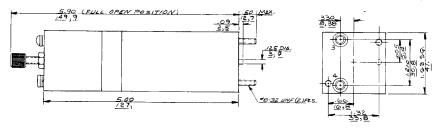



Air Volume

#### **Air Volume**

#### Purpose:

The volume serves as a reservoir which can be used in conjunction with the flow control valve to provide additional capacity for improved or extended timing operations.

#### Installation:

Volumes may be mounted in any position. The volume must be mounted on a logic plate or subplate. Two mounting screws are provided with the subplate version. Order screw part number R431001762 (Old part number P -049467-00004) for mounting valve to logic plate.

#### Maintenance:

Repair by replacement.

#### Notes:

1. Working Pressure:

125 psi max.

(8.6 bar)

2. Operating temperature:

-20°F to 165°F

(-29°C to 74°C)

3. Timing Volume:


3 cu. in. (49 cc)

Part Number	Old Part Number	Description
R431006133	P -062880-00003	Volume less Subplate

<sup>\*</sup> For subplate see page 36.





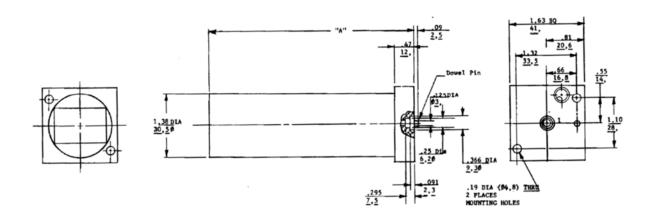





3-Way Solenoid Valve - Normally Open

## 3-Way Normally Open Solenoid Valve



#### Purpose:

The valve provides operational control from remote locations by an electrical signal.

#### Function:

The valve functions as a normally open 3-way valve, single solenoid operator, spring return. Port 3 inlet to port 5 outlet normally open, port 1 to exhaust.

#### Installation:

The valve may be mounted in any position. The valve must be mounted on a subplate or logic plate. Two mounting screws are provided with the subplate . version. Order screw part number R431001772 (Old Part No. P -049467-00013) for mounting the valve to a logic plate.

#### Maintenance:

Kit Part No. P -027420-00000

#### Notes:

Working pressure: 120 psi (8.27 bar) max
 Operating temperature: 25°F to 165°F (-32°C to 74°C)

3. Flow rating-flow factor: F = .14

4 0 11

4. Cracking pressure: 3.0 psi (0.2 bar) max


5. Voltage: 24 vdc

#### Replacement Solenoid Connectors

Part Number	Old Part Number	Description
8941004702	H -894100-4702	Non-Lighted
R432013881	P -067858-00000	Lighted

Part Number	Old Part Number	Part Number	Old Part Number	Connector
less Subplate	less Subplate	with Subplate*	with Subplate	Type
R431007506	P -069785-00000	R431000904	P -028359-00000	Non-Lighted

<sup>\*</sup> For subplate dimensions see page 36

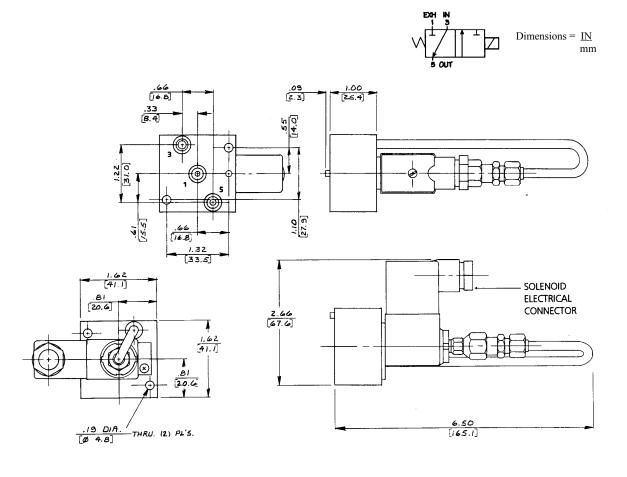



3-Way Solenoid Valve - Normally Closed

#### 3-Way Normally Closed Solenoid Valve

#### Purpose:

The valve provides operational control from remote locations by an electrical signal.

#### Function:

The valve functions as a normally closed 3-way valve, single solenoid operator, spring return. Port 1 inlet normally closed, port 5 outlet normally open to port 3, exhaust.

#### Maintenance:

Kit part number R431000797 (Old part number P -027420-00000)

#### Installation:

The valve may be mounted in any position. The valve must be mounted on a subplate or logic plate. Two mounting screws are provided with  $nensions = \frac{lN}{mm}$ 

N ExH

the subplate version. Order screw part number R431001772 (Old part number P -049467-00013) for mounting the valve to a subplate.

#### Notes:

1. Working pressure: 120 psi (8.27 bar) max

2. Operating temperature: -25°F to 165°F

(-32°C to 74°C)

3. Flow rating-flow factor: F = .14

4. Cracking pressure: 3.0 psi (0.2 bar) max

5. Voltage: 24 vdc




Part Number	mber Old Part Number Part Nu		Old Part Number	r Connector	
less Subplate	less Subplate	with Subplate*	with Subplate	Туре	
R431007507	P -069786-00000	R431000799	P -027423-00000	Non-Lighted	

<sup>\*</sup> For subplate dimensions see page 36

#### Replacement Solenoid Connectors

Part Number	Old Part Number [	Description
8941004702	H -894100-4702	Non-Lighted
R432013881	P -067858-00000	Lighted

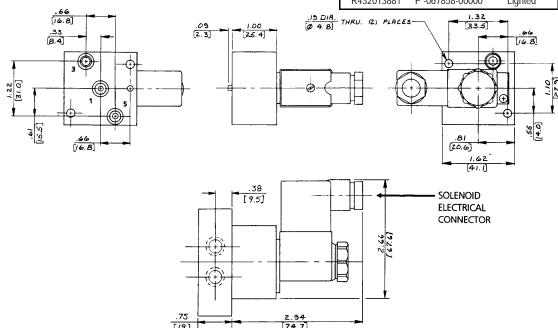



3-Way Multifunction Logic, Pneumatic Signal, Preset Actuation Point

## 3-Way Multifunction Logic Preset Actuation Point

#### Purpose:

The multifunction logic valve is used to sequence and interlock control system operations and can be connected for either normally open or normally closed control operation.

#### Function:

When the control signal at port 2 is less than the present control spring setting, port 3 and 5 are connected and port 1 is closed. When the control signal at port 2 exceeds the control spring setting, the valve is actuated to connect ports 1 and 5 and port 3 is closed.

Port 4 must be connected to exhaust for proper operation. Under proper conditions, port 4 can be used as an override signal.

#### Maintenance:

Kit part number R431006223 (Old part number P -063392-00000)

#### Installation:

The logic valve must be mounted on a subplate or logic plate. The two mounting screws are provided with the subplate version. If the valve is ordered separately for mounting to a logic plate, order mounting screws part no. R431001771 (old part no. (P -049467-00012) (2 required)

#### Notes:

1. Working pressure: 150 psi max

(10.3 bar)


2. Operating temperature: -20°F to 165°F


(-29°C to 74°C)


3. Flow rating-flow factor: F = .14

16,8

19 DIA (#4.8) THRU 2 PLACES MOUNTING HOLES

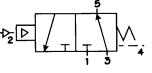

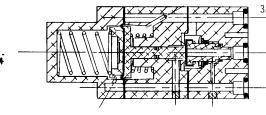

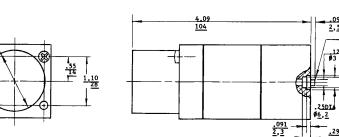

	,				2,3	.295 7,5	8,4 8,4			
	Actuation Pressures - PSI									
Part Number	Old Part No.	Part Number	Old Part No.	N.C.		N.C	).			
less Subplate	less Subplate	with Subplate*	with Subplate*	Max.	Min.	Max.	Min.			
				Increasing	Decreasing	Increasing	Decreas- ing			
				Pilot	Pilot	Pilot	Pilot			
R431005976	P -062016-00000	R431005982	P -062017-00000	18	3	25	10			
R431005977	P -062016-00001			32	16	38	22			
R431005978	P -062016-00002			47	30	53	36			

P -062017-00003

P -062017-00004

P -062017-00005

40

62

78

62

60

82

100

82

4Λ

	1 00000700	0000				00	70
† Valve for use v	vith minimum	differential	pressure betw	een control	pressure	e and supply	pressure.

R431005983

R431005984

R431009173

Eupotion	Dort 1	Dort 2	Dort 2	Dort
66	48	<u> </u>		
88	70			
104	86			
88	70			
66	48			
53	36			

Function	Port 1	Port 2	Port 3	Port 4	Port 5
N0 3 Way	Exhaust	Pilot	Input	Vent	Output
NC 3 Way		Pilot	Exhaust	Vent	Output

Dimensions =

R431005979

R431005980

P -062016-00003

P -062016-00004

P -062016-00005

P -062016-00006†

P -068659-00000+

<sup>\*</sup> For subplate dimensions see page 36.



3-Way Multifunction Logic - Hydraulic Signal

#### 3-Way Multifunction Logic Hydraulic Control Signal

#### Purpose:

The hydraulic control signal multifunction logic valve is used to sequence and control system operations and can be connected for either normally open or normally closed control operation.

#### Function:

When the hydraulic control signal at port 2 is less than the preset control spring setting, port 3 and 5 are connected and port 1 is closed. When the control signal at port 2 exceeds the control spring setting, the valve is actuated to connect ports 1 and 5 and port 3 Is closed.

Port 4 must be connected to exhaust for proper operation. It is recommended that port 4 be connected back to the hydraulic sump as a safety return in case of leakage past the control seal.

-062014-00005

-062014-00008

P -062014-00006



The logic valve must be mounted to a logic plate or subplate. The subplate version includes mounting screws. If the valve is ordered separately for logic plate mounting, order mounting screw part number R431001771 (old part no. P -049467-00012) (2 required)

#### Maintenance:

Kit part number R431006320

(Old Part No. P -063967-00000)



#### Notes

1. Working pressure:

A. Inlet ports - 150 psi max

(10.3 bar)

pneumatic (air)

B. Pilot port #2 - 350 psi max


(24 bar)


hydraulic fluid

2. Operating temperature: -20°F to 165°F

(-29°C to 74°C)

3. Flow rating - flow factor: F = .14

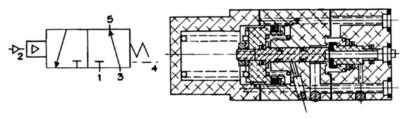

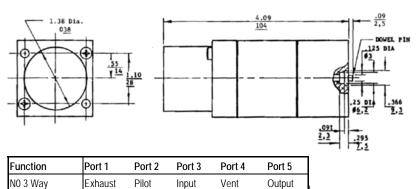

NC 3 Way	Input	Pilot Ex	thaust Vent	Output			
Actuation Pressures - PSI							
Part Number	Old Part No.	Part Number	Old Part No.	N.	C.	N	.0.
less Subplate	less Subplate	with Sub- plate*	with Subplate*	Max.	Min.	Max.	Min.
				Increasing Pilot	Decreasing Pilot	Increasing Pilot	Decreasing Pilot
R431005967	P -062014-00000	R431005973	P -062015-00000	110	70	115	75
R431005968	P -062014-00001	R431005974	P -062015-00001	35	10	40	20
R431009161	P -062014-00002	R431009162	P -062015-00002	20	5	25	10
R431005969	P -062014-00003	R431009163	P -062017-00003	225	180	225	180
	P -062014-00004			150	110	150	110

160

85

77

120


62

50

160

92

86

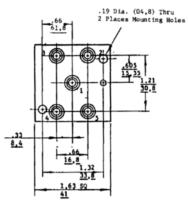

Dimensions =  $\frac{IN}{mm}$ 

120

70

69



3-Way Multifunction - Pneumatic Signal, Adjustable Actuation Point

## 3-Way Multifunction tion Point

#### Purpose:

Logic Adjustable Actua- The adjustable multifunction logic valve is used to sequence The pressure actuation point setting is adjustable by and control system operations and can be connected for either normally open or normally closed control operation.

#### Adjustments:

turning the adjustment screw clockwise for pressure increase, or counter-clockwise for pressure decrease.



#### Function:

When the control signal at port 2 is less than the adjusted control spring setting, port 3 and 5 are connected and port 1 is closed. When the control signal at port 2 exceeds the control spring setting, the valve is actuated to connect ports 1 and 5 and port 3 is closed.

Port 4 must be connected to exhaust for proper operation. Under proper conditions port 4 can be used as an override signal.

Kit part number R431006380

Maintenance:

(Old part number. P -064201-00000)

#### Installation:

The valve may be mounted in any position and must be mounted on a subplate or logic plate.

Mounting screws are provided with each subplate version. The mounting screws for logic plate mounting are part number R431001778 (2 required).

(Old part no. P -049467-00017)

#### Notes:

1. Working pressure: 150 psi max

(10.3 bar)

2. Operating temperature: -20°F to 165°F


(-29°C to 74°C)

3. Flow rating-flow factor:

F = .14

4. Range: Cracking pressure to reseat

R431005932 4 psi (0.28 bar) max R431005933 & R431005934 7 psi (0.48 bar) max

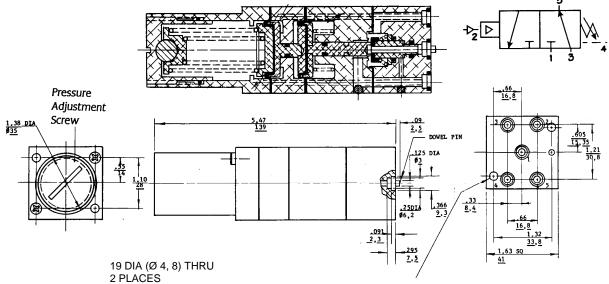

MOUNTING HOLES

Part Number	Old Part No.	Part Number	Old Part No.	Adjustable
less Subplate	less Subplate	with Subplate*	with Subplate	Trip Range psi (bar)
R431005932	P -061976-00000	R431005936	P -061978-00000	5-40 (0.34-2.76)
R431005933	P -061976-00001			40-80 (2.76-5.52)
R431005934	P -061976-00002			80-120 (5.52-8.27)
R431005935	P -061976-00003†			80-120 (5.52-8.27)

Dimensions =

\* For subplate dimensions see page 36.

Function	Port 1	Port 2	Port 3	Port 4	Port 5
N0 3 Way	Exhaust	Pilot	Input	Vent	Output
NC 3 Way	Input	Pilot	Exhaust	Vent	Output

†Valve for use with minimum differential pressure between control pressure and supply pressure.



# Air Logic Valves and Accessories

Pressure Regulating Valve

#### **Pressure Regulator**

#### Purpose:

The pressure regulating valve serves to reduce a primary pressure with a maximum of 150 psi (10.3 bar) to an adjustable outlet pressure within the range of 0 to 140 psi (0 to 9.65 bar) or 0 to 75 psi (0 to 5.2 bar).

#### Function:

The pressure adjusting screw loads the control spring to determine the output pressure setting. The spring load lifts the inlet valve off its seat and supply pressure flows from port 3 out port 5 and below the control diaphragm. When the diaphragm pressure and adjusted spring load reach a balance, the inlet valve closes off the connection between port 3 and port 5, and the delivery pressure is maintained.

The regulator is self-maintaining. If delivery pressure drops, the inlet valve will reopen to deliver additional pressure to balance the adjusting spring load. If delivery pressure increases, the exhaust valve will open to relieve the excess pressure through port 1.

Port 4 must be connected to exhaust for proper operation.

The outlet pressure may be changed by turning the adjusting screw clockwise for pressure increase, or counter-clockwise for pressure decrease.

#### Maintenance:

Kit part number R431006319 (old part number P -063966-00000)

#### Installation:

A pressure regulating valve may be mounted in any position. Pay attention to the direction of air flow. The valve has to be mounted on a subplate or logic plate. Two screws are provided with the subplate version. Order screw part number R431001771 (old part number P -049467-00012) if the valve is ordered separately for mounting to a logic plate.



#### Notes:

Working pressure: 150 psi max inlet (10.3 bar)

2. Operating temperature: -20°F to 165°F (-29°C to 74°C)

3. Flow rating-flow factor: F = .14

4. Flow characteristics :

(Supply pressure @ 100 psi with 50% pressure drop from set pressure)

			pressure and	moni set pressure/	
			SETTING 25 psi 50 psi 75 psi	FLOW (SCFM) 7 14 19	
Pressure			ε	wi_ <del>≤≤</del> ′vewr	
Adjustment				1-1-	
Screw				" [ ] °	
Sciew				11	
1.36 DIA	4,83	25 DJ 366 62.2 2.2	. PIN  19 DIA (64,8)  HBU-2 PLACES  UNITING HULES  2,4	16. 6 16. 6 16. 6 17. 32 16. 6 16. 6 1. 32 1. 63 50 41	1 8

Part No.	Old Part No.	Adjustable
less Subplate	less Subplate	Range psi (bar)
R431005985	P -062018-00000	0-75 (0-5.17)
R431005986	P -062018-00001	0-140 (0-9.65)

<sup>\*</sup> For subplate dimensions see page 36.

Dimensions = 
$$\frac{IN}{mm}$$



# Air Logic Valves and Accessories

Subplate

#### **Purpose:**

For mounting all logic valves.

#### Installation:

Subplate may be mounted in any position. Two (2) mounting holes are provided in the subplate

#### Maintenance:

Replace if damaged.

#### **Notes:**


Working pressure
 Operating temperature

150 psi max. (10.3 bar)

-40°F to 165°F (-40°C to 74°C)

Part Number	Old Part Number	Description
R431006017	P -062129-00001	Subplate

Dimensions = 
$$\frac{IN}{mm}$$

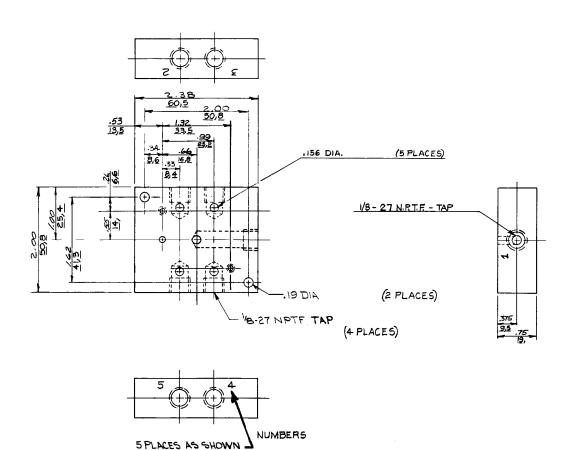



# Air Logic Valves and Accessories

Hydraulic Shuttle Valve

# Hydraulic Shuttle Valve Part Number R431006763 (Old Part No. P -066143-00000)

#### **Purpose:**

The Hydraulic Shuttle Valve automatically connects pressure from one or the other of two input lines and directs the flow to a common outlet. The valve serves to connect two segregated lines to a common line without destroying the segregation.

#### Installation:

The Shuttle Valve can easily be supported by piping alone, but mounting holes are included for installations with vibration or long pipe runs.

#### **Operations:**

Maximum Operating Pressure is 500 psi (34.5 bar). Temperature range is –40°F to 160°F (-40°C to 71°C) with intermittent exposure up to 200°F (93°C).

The Shuttle Valve has 3 ports (¼" NPT) as shown in the assembly view. When pressure of more than 2.5 psi (0.17 bar) is

applied to one inlet port the ball is forced over to seal the opposite inlet port of the valve and fluid flows out the common outlet. The opposite inlet port is sealed from both the outlet and the pressurized inlet port.

#### **Adjustment:**


The Shuttle Valve does not require adjustment. Reference service bulletin B6-104.03H for parts.


#### Maintenance:

Note: A 3/32" hex allen wrench is required. Replace the cover seals if damaged or worn. The valve cartridge is a non-serviceable assembly and should be replaced as a complete unit if required.



Dimensions = 
$$\frac{IN}{mm}$$

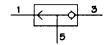

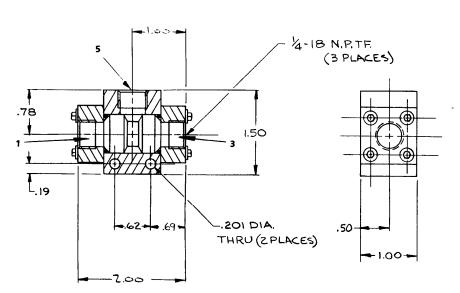



Shuttle Valve, Inline

## NPTF Ports

Supply Pressure 200 psi max. (13.8 bar)

Température range -40°F to 160°F; intermittent 200°F is permissible. (-40°C to 71°C, 93°C intermittent)

Media Air or inert gas

Body Die cast, anodized aluminum

Application data

The Shuttle Valve automatically selects and directs the flow of air from one or the other of two controlling devices to a common outlet. It serves to connect two independent lines to a common line without destroying



	Port (NPTF)	Valve Part No.	Old Part No.	Weight lbs. (kg)	Flow C <sub>v</sub>	Repair Kit
	1/8"	R431003347	P -054350-00001	0.44 (0.20)	1.25	R431005614
1 3	1/4"	R431003348	P -054350-00002	0.44 (0.20)	1.58	R431005614
	3/8"	R431003349	P -054350-00003	1.19 (0.54)	3.61	R431005615
2	1/2"	R431003350	P -054350-00004	1.19 (0.54)	5.12	R431005615

Repair kits include diaphragm and gasket.

#### Operating Characteristics

#### FEATURES-

SIMPLE-Contains only one moving part-an easily replaceable fabric reinforced synthetic rubber

Two body segments, a gasket and four screws complete the assembly.

It has no spring; nothing can bind or stick. Its compact size presents no installation problems. LIGHTWEIGHT-The Shuttle Valve can easily be supported by piping alone.

Mounting feet are included, however, for installations with vibration or long pipe runs.


SENSITIVE-Will seal off the opposite inlet line with less than one psi pressure differential. LONG LIFE-Tests have shown no diaphragm wear after hundreds of thousands of cycles.




To order, refer to port size and part number.

When a pressure differential of one psi or more exists at either inlet port, the higher pressure forces the diaphragm to seal against the opposite

The low (or zero) pressure inlet port is sealed from both the outlet and the opposite inlet port.

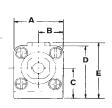

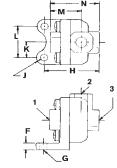

## **DIMENSIONS**

DRYSEAL NPTF Ports		
ALL PORTS	1/8"-27 and 1/4"-18	3/8"-18 and 1/2"-14
A	1 7/8"	2 1/2"
В	15/16"	1 1/4"
С	1 1/2"	1 7/8"
D	2 7/16"	3 1/8"
E	2 5/8"	3 3/4"
F	9/32"	5/16"
G dia.	9/32"	9/32"
Н	2 1/8"	3 1/4"
J radius	9/32"	21/64"
K	21/32"	29/32"
L	1 5/16"	1 13/16"
M	1 7/32"	2 1/8"
N	1 29/32"	3 3/8"



Quick Release Valve, Inline: Aluminum body version, 1/4" - 1" NPT

#### Technical Data

Type Aluminum Body, (die cast, anodized) for inline or right-angle piping Working Pressure 200 psi (13.8 bar) max. on 1/4" and 3/8" 150 psi (10.3 bar) max.

on 1/2" thru 1" sizes

Temperature Range -40°F to 160°F, 200°F intermittent (-40° to 71°C, 93°C intermittent)

Media Air or inert gas
Port Size 1/4" to 1" NPTF




Port (NPT)	Piping	Valve Part No.	Old Part No.	Weight lbs. (kg)	C <sub>v</sub> in to out	C <sub>v</sub> out to exh.	Repair Kit	Old Repair Kit
1/4"	Inline	R431003038	P -052935-00002	0.64 (0.29)	1.77	2.50	R431005410	P -060213-00002
1/4"	Right angle	R431003043	P -052935-00021	0.64 (0.29)	1.77	2.50	R431005410	P -060213-00002
3/8"	Inline	R431003039	P -052935-00003	0.64 (0.29)	2.73	3.08	R431005410	P -060213-00002
3/8"	Right angle	R431003044	P -052935-00031	0.64 (0.29)	2.73	3.08	R431005410	P -060213-00002
1/2"	Inline	R431003040	P -052935-00004	1.44 (0.46)	5.00	5.50	R431005412	P -060214-00002
3/4"	Inline	R431003041	P -052935-00006	2.88 (1.31)	9.70	10.55	R431005414	P -060215-00001
1"	Inline	R431003042	P -052935-00008	3.32 (1.51)	11.95	13.45	R431005414	P -060215-00001


Mounting bracket for 1/4" and 3/8" models: Part no. R431003093 (old part no. P -053067-00000).

Sizes 1/2" through 1" have integral mounting brackets.

Repair kits include diaphragm and gasket.

#### Inch dimensions: QRV-Aluminum (in-line configuration shown)

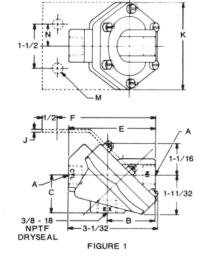

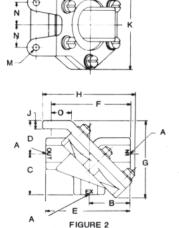

Incl	Inch dimensions: QRV-Aluminum													
Fig. No.	A NPTF Dryseal	В	С	D	E	F	G	Н	J	K	L	M (2 Holes)	N	0
Fig. 1 Fig. 1 Fig. 2	1/4-18 3/8-14 1/2-14	1 3/4 1 3/4 1 3/4	1 11/32 1 11/32 1 11/32	- - 1 1/2	3 3 3 11/16	3 3/8 3 3/8 3 7/16	- - 3 15/32	- - 4 1/8	1/16 1/16 3/8	3 3 3 15/16	- - 3/8 R.	11/32 ∅ 11/32 ∅ 9/32 ∅	3/4 3/4 1	- - 7/8
Fig. 2	3/4-14 1"-11 1 2	2 11/16	2 21/32 2 1/32	2 1/16 2 1/16	5 1/4 5 /4	5 5	4 13/16 4 1 /16	5 1/2 5 /2	7/16 7/16	6 1/2 6 1 2	1/2 R. 1/2 R.	13/32 Ø	1 1/2 1 1 2	1 1/8 1 1/8



Relayair® Valve, Type "H" & "L": Pilot operated sequence valves

#### "H" and "L" Relayair® Valves

Туре Pilot operated sequence valve Supply Pressure 200 PSI Max. (13.8 bar) 140 psi max. (9.7 bar) Control Pressure Temperature range -40°F to 160°F (-40°C to 71°C)

Media

Air or inert gas Port Size:

Control port (port 10), breather port (port 1): 1/4" NPT

All other ports: 3/8" NPTF



#### Operating Characteristics

The Relayair® Valve has three basic uses:

1. As a nongraduated relay to provide a large flow of air from a separate source when piloted by small amount of control media and to stop this flow and exhaust the air to atmosphere when the control pressure is vented.

2. As a pressure-sensitive sequence valve for such circuit functions
3. As a pressure-sensitive sequence valve for such circuit functions

as timing, cycling, etc.



#### Application Notes

RELAYAIR Valves operated by pilot pressures less than 35 psi utilize one control spring while valves operated by pilot pressures greater than 35 psi use two springs. To obtain pilot pressures less than 10 psi, two diaphragms are used in series.

	Pilot	New	Old	Repair Kit	Repair Kit
Model	Pressure	Part No.	Part No.	Metal Parts	Rubber Parts
H-5-D	3	R431005195	P -059567-00003	R431005482	R431005479
H-5-D	12	R431005196	P -059567-00012	R431005482	R431005479
H-5	10	R431004910	P -059155-00010	R431005482	R431005478
H-5*	10	R431004924	P -059156-00010	R431005482	R431005478
H-5	15	R431004911	P -059155-00015	R431005482	R431005478
H-5	20	R431004912	P -059155-00020	R431005482	R431005478
H-5	25	R431004913	P -059155-00025	R431005482	R431005478
H-5	30	R431004914	P -059155-00030	R431005482	R431005478
H-5	35	R431004915	P -059155-00035	R431005482	R431005478
H-5	45	R431004916	P -059155-00045	R431005482	R431005478
H-5	50	R431004917	P -059155-00050	R431005482	R431005478
H-5	60	R431004918	P -059155-00060	R431005482	R431005478
H-5	70	R431004919	P -059155-00070	R431005482	R431005478
H-5	80	R431004920	P -059155-00080	R431005482	R431005478
H-5	90	R431004921	P -059155-00090	R431005482	R431005478
H-5	100	R431004922	P -059155-00100	R431005482	R431005478
H-5	110	R431004923	P -059155-00110	R431005482	R431005478
L-2-A	40	R431006062	P -062482-00040	R431005482	R431006157
L-2-A	70	R431006063	P -062482-00070	R431005482	R431006157
L-2-A	85	R431006064	P -062482-00085	R431005482	R431006157
L-2-A	110	R431006065	P -062482-00110	R431005482	R431006157
L-2-A	135	R431006067	P -062482-00135	R431005482	R431006157
L-2-A	150	R431006068	P -062482-00150	R431005482	R431006157
L-2-A	220	R431006573	P -065215-00000	R431005482	

<sup>\*</sup>Non-magnetic version




Ø7/16


3-1/2

1-3/4

Associated Components
Relayair® Valve, Type "H" & "L": Pilot operated sequence valves

#### H-5 Relayair Valve Dimensions

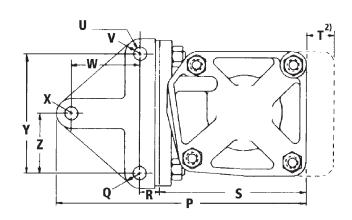

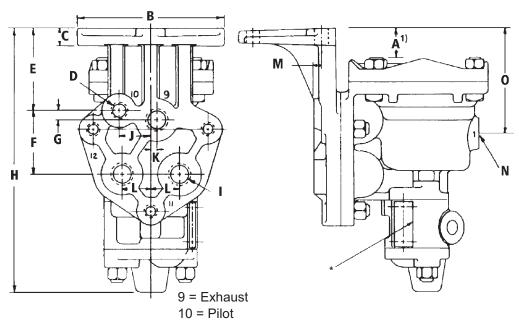

<sup>\*</sup> Nameplate location.

4-3/8

H-5 R	H-5 Relay Dimensions											
<b>A</b> 1)	В	С	D - NPTF	E	F	G	Н	I - NPTF	J	K	L	М
13/16	4-3/8	1/2	1/4-18	2-7/16	1-7/8	9/32	7-3/4	3/8-18	15/16	3/16	27/32	1/4
N - NPT	0	Р	Q	R	S	<b>T</b> <sup>2)</sup>	(3 places)	V	W	X	Y	Z

13/16

13/32

Ø7/16

<sup>11 =</sup> Delivery 12 = Supply

<sup>1/4-18 3-1/8 7-3/8</sup> Ø7/16 9/16 1) H-5 shown. "A" for H-5-D = 1/8"; for L-2-A = 5/16". 2) Clearance required for removal. \* Nameplate location.

Three-Position Cylinder, Spring centered



The three-position cylinder is a fixed position device when controlled by a four-way, three-position, exhaust-center, control valve such as the "A" or "D" PILOTAIR® Valve. The cylinder has a wide range of applications, being particularly suited for shifting transmissions and positioning hydraulic valves. It is corrosion-resistant and constructed of lightweight, die-cast, anodized aluminum heads, pistons and body.

Maximum stroke of the piston rod is one inch on each side of the center position, making a total piston rod travel of two inches. External envelope dimensions of the cylinder do not change, but shorter strokes are available in increments of 1/16-inch for each position. The complete piece number of the cylinder and the piece number of the piston stop will have an identical four-digit suffix. The first digit denotes the stroke in inches; the last three digits show the stroke in thousandths of an inch.

#### **INSTALLATION & ADJUSTMENT**


Because cylinders are installed at the end of an air system, they are vulnerable to dirt and moisture carried through the air lines. Therefore, before installing the three-position cylinder, all air lines in the system should be blown clean. It is recommended that the cylinder mounted with the ports facing down. Gravity can then assist in preventing foreign material from accumulating in the cylinder by removing it through the control valve exhaust.

In providing a mounting for the cylinder, an adjustable link must be included between the piston rod and the lever to which the rod is connected. The cylinder stroke should be checked in its center position when aligned with the lever to be operated. Check for exact register, making sure the clevis pin is free from load in the center position.

This procedure will allow any inaccuracies in leverage ratio or manufacturing tolerance to be absorbed at the extremes of the stroke where exact registration is of least importance. Also, any inaccuracies will be divided between the extreme positions. When alignment is done at one of the extreme positions, inaccuracies are all in the same direction.

#### **OPERATION**

Maximum operating pressure of the three-position cylinder is 150 psi at a temperature range of -40° F to 180° F. The cylinder is held in its center position by a coil spring caged on the piston rod. When air pressure is supplied to the cap-end port, the piston rod moves to its extended position. When pressure is supplied to the head-end port, the piston rod moves to its retracted position.

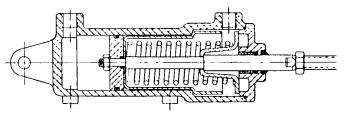

ASSEMBLY VIEW

#### MAINTENANCE

Periodically disassemble the cylinder for cleaning, inspection and lubrication. Clean all metal parts with a nonflammable solvent, and wash all rubber parts with soap and water. Rinse thoroughly and blow dry with a low-pressure air jet. Replace those parts which are damaged or worn.


Reassemble the cylinder, using the exploded and assembly views as reference. No special tools are required. To avoid cutting or nicking the piston O-ring, carefully insert the piston rod assembly into the cylinder bore with the piston tilted at a slight angle. As the assembly proceeds, lubricate all O-rings with Dow Corning 55M grease.

Max. operating pressure: 150 psi (10.3 bar)

Temperature range: -40°F to 180°F (-40°C to 82°C)



# **Associated Components**Three-Position Cylinder, Spring Centered

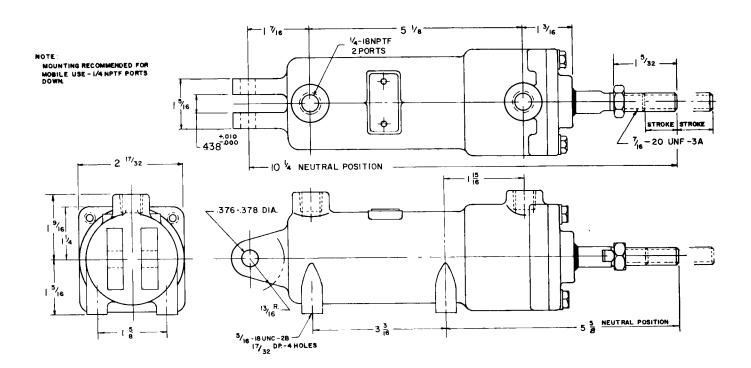

Part No.	Old Part No.	Stroke*
R431004060	P -057378-00312	0.312
R431004053	P -057378-00375	0.375
R431004053	P -057378-00438	0.438
R431004055	P -057378-00500	0.500
R431004056	P -057378-00625	0.625
R431004057	P -057378-00688	0.688
R431004058	P -057378-00750	0.750
R431004059	P -057378-00875	0.875
R431004060	P -057378-01000	1.000
R431004943	P -059211-00000	1.062

<sup>\*</sup>Effective stroke each side of center.

Repair kit part no. R431005249 (old part no. P -059819-K0000)



A-2-H Actuator




Pressure Range psi (bar)	Description	Part No.	Old Part No.
3-15 (0.21 - 1.0)	Less Accessories	R431005216	P -059718-00010
3-15 (0.21 -1.0)	With Accessories	R431005217	P -059718-00011
10-60 (0.69 - 4.14)	Less Accessw/Drain Hole	R431005745	P -061289-00010
10-60 (0.69 - 4.14)	Less Accessories	R431004009	P -057159-00010
10-60 (0.69 - 4.14)	With Accessories	R431004010	P -057159-00011
10-60 (0.69 - 4.14)	With Ball Joint Kit	R431004011	P -057159-00012
15-80 (1.0 - 5.52)	With Accessories	R431004529	P -058430-00011
35-90 (2.41- 6.21)	Less Accessories	R431003983	P -057086-00010
35-90 (2.41- 6.21)	With Accessories	R431003984	P -057086-00011

Force rating: 410 in.-lb. degrees (46.3 Nm)

Nominal stroke: 2" (50.8 mm), adjustable from 1 7/8" to 2 1/4" (47.63 to 57.15 mm)

Weight: 3 lbs. (1.36 kg)

Integral mounting lugs make installation simple and clean

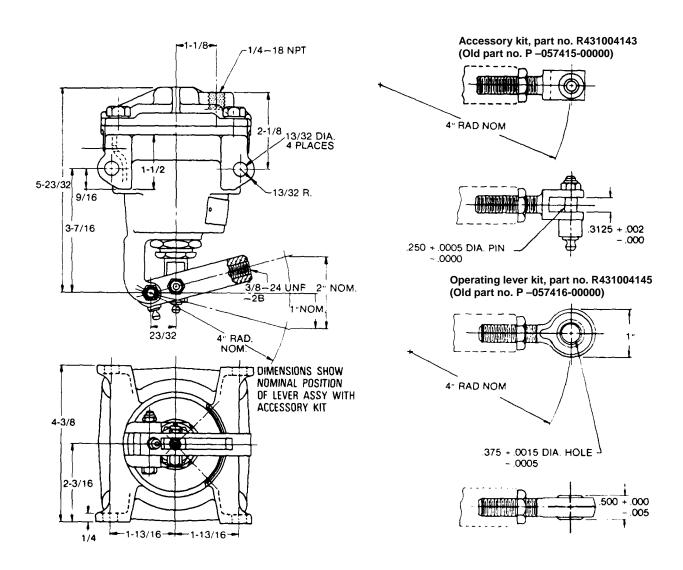



AA-1 Actuator




Description	Part No.	Old Part No.	Weight lbs. (kg)
AA-1, 1/4" rod eye	R431005436	P -060263-00001	8 (3.63)
AA-1, 5/16" rod eye	R431005437	P -060263-00002	8.5 (3.86)
AA-1, 3/8" rod eye	R431005438	P -060263-00003	8.5 (3.86)

Type: diaphragm-lever actuator, single direction Force rating: 1125 in.-lb. degrees (127.1 Nm) Pressure range: 10 to 60 psi (0.69 to 4.14 bar)

Pressure range: 10 to 60 psi (0.69 to 4.14 bar)
Output travel adjustment: from 7/8" to 2 1/4" (22.23 to 57.15 mm)

Weight: 3 lbs. (1.36 kg)

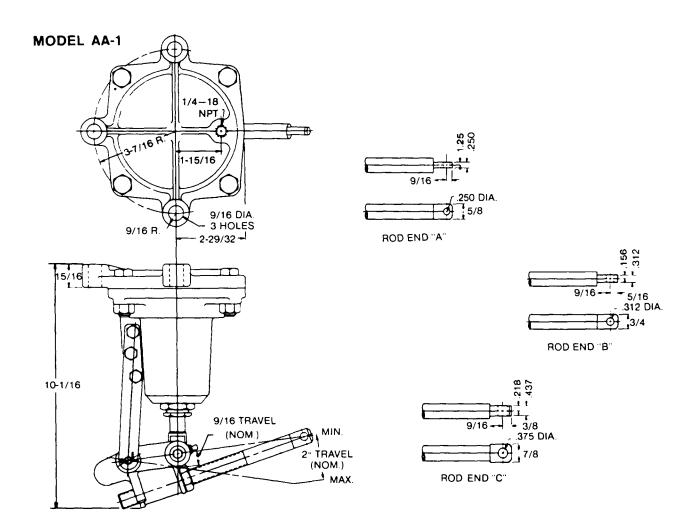




Shuttle Valve Panel: Two Station, Single Engine


**Shuttle Valve Panel Two Station, Single Engine** 

#### Part Number R431007564 (Old Part Number P -090277-00000)

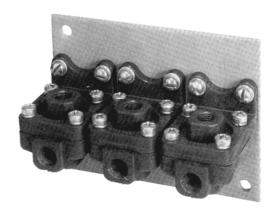

The Shuttle Valve Panel is designed to mount as a single unit the three Shuttle Valves required for interconnecting two single engine control stations to simplify shipboard control system installations.


Standard 1/4" NPT Shuttle Valves part number R431003348 as covered by sales catalog SC-400 and service bulletin SM-400.09 are utilized. All operation and maintenance conditions and procedures covered in these publications should be observed.

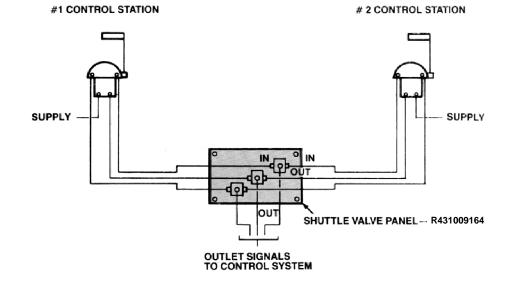




# Associated Components Shuttle Valve Panel: Two Station, Single Engine

# **Outline View Two Station - Single Engine** Shuttle Valve Panel

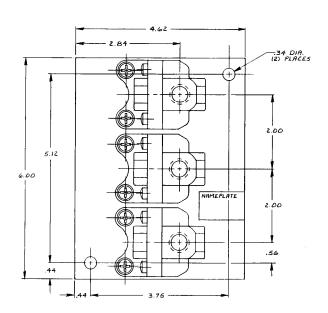

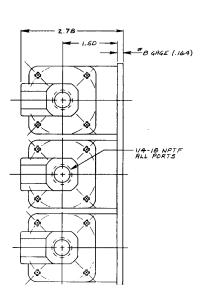

Weight 3.5 lbs (1.6 kg) (Dimensions in inches)

Parts List: R431007564 (Complete Panel)							
Ref. No.	Qty.	Description	Part No.	Old Part No.			
1	3	Shuttle Valve	R431003348	P -054350-00002			
2	6	Screws, ¼-20	R431002261	P -049835-00037			
3	6	Washer, ¼ Lock	R431002345	P -049866-00009			
4	1	Panel	R431000704	P -026892-00001			



Shuttle Valve Panel: Two Station, Twin Engine

#### **Shuttle Valve Panel**


#### Two Station, Twin Engine


#### Part Number R431009153 (Old Part No. P -090278-00000)

The Shuttle Valve Panel is designed to mount as a single unit the six Shuttle Valves required for interconnecting two twin engine control stations to simplify shipboard

control system installations. Standard 1/4" NPT Shuttle Valves part number R431002261 as covered by sales catalog SC-400 and service bulletin SM-400.09

are utilized. All operation and maintenance conditions and procedures covered in these publications should be observed.

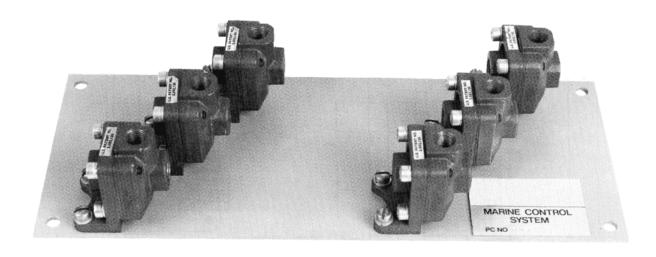


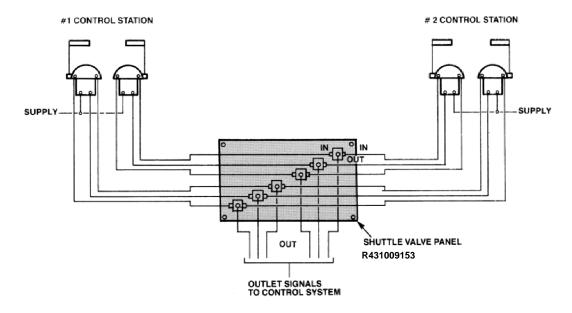



Shuttle Valve Panel: Two Station, Twin Engine

# Outline View Two Station - Twin Engine Shuttle Valve Panel

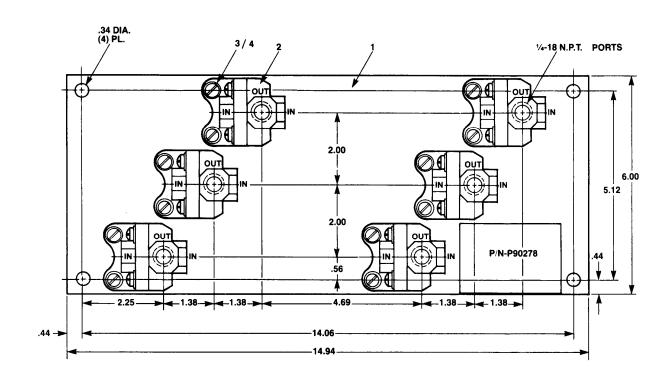

Weight 7 lbs (3.2 kg) (Dimensions in inches)

Parts List: R431009153 (Complete Panel)							
Ref. No.	Qty.	Description	Part No.	Old Part No.			
1	1	Panel	R431009157	P -066987-00000			
2	6	Shuttle Valve, 1/4" NPTF	R431002261	P -054350-00002			
3	6	Screws, ¼ - 20	R431002261	P -049835-00037			
4	6	Washer, ¼ Lock	R431002345	P -049866-00009			

1/2" O.D. COPPER TUBING (-) %" O.D. COPPER TUBING

SUPPLY AIR FROM ENGINE ROOM CONTROL TRANSFER VALVE




# **Associated Components**

**Control Station Transfer Panel** 

#### **Control Station Transfer Panel for Two Stations**


## **Attendance Interlock Function** Part Number R431007566 (Old Part Number P -090281-00000)

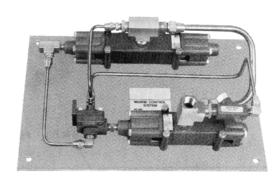

TRANSFER PANEL R431007566


This panel includes the necessary valving mounted as a single unit to provide for attendance interlocked control transfer between the engine room and the above deck control stations. The operation insures that control can not be transferred to the above deck stations unless an operator is in attendance at the receiving station to operate an acknowledge valve and complete the transfer sequence. This insures that control is not inadvertently transferred to an unattended station where the engine control handles may have been left in the operating range. It is the operator's responsibility to check the control handle positions before acknowledging and completing the control transfer operation.

(See page 50 for dimensions.)

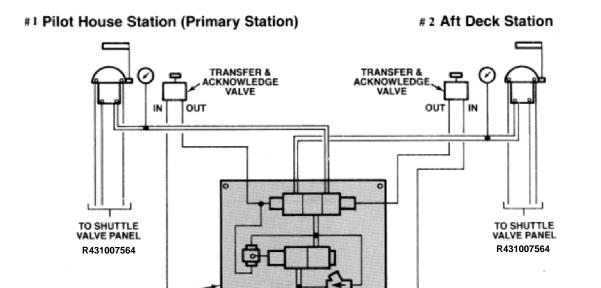

# Associated Components Control Station Transfer Panel

# CONTROL STATION TRANSFER PANEL **OUTLINE VIEW**

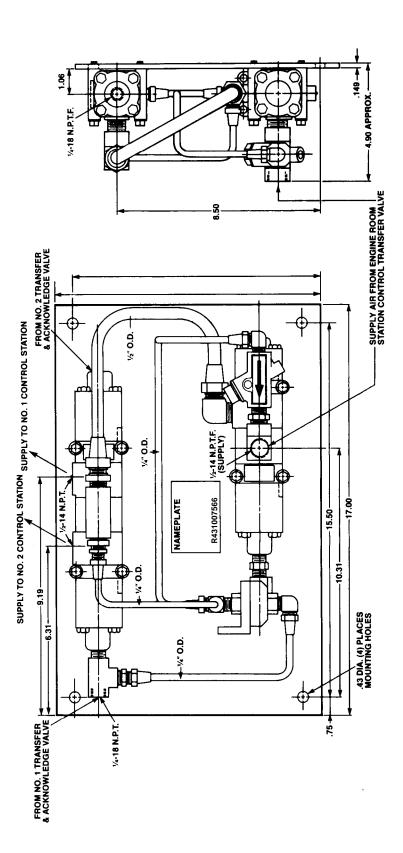

Weight 18 3/4 lbs (8.5 kg) (Dimensions in inches)



## **Electronic Marine Controls**

Overview

In addition, to pneumatic marine controls, AVENTICS has been manufacturing electronic marine controls for many years. The Marex OSIII, our most recent control platform, improves upon its predecessors with a compact design, integrated I/O, and expanded propulsion control capabilities.

With minor software variations, Marex OS III can be used for remote control and monitoring of propulsion plants with; reversing gear, controllable pitch (CP) and Voith-Schneider propellers.

The Marex OSIII has at is heart, a Marine Propulsion Controller (MPC) that is highly customizable. The MPC gives new meaning to control with full programmability of all time delays, speed curves, trolling, engine synchronization, controlled clutch slip, fault diagnostics and easy integration with auxiliary devices/sensors.

Our electronic controls are our "Open System", employing CAN-bus protocol; allowing maintenance free networking and fault monitoring of quick connect, modular, components.

Our electronic controls are growing increasingly popular with OEMs and also those who are retrofitting ships with older pneumatic technology. An obvious cost benefit of a network interface is its ease in expandability and upgradeability without the need for total system re-wiring.



Type 230 controls



Type 240 controls



Type 250 remote control



MPC - Marine Propulsion Controller



Electric actuator

## **NOTICE TO PRODUCT USERS**

#### 1. WARNING: FLUID MEDIA

AVENTICS pneumatic devices are designed and tested for use with filtered, clean, dry, chemical free air at pressures and temperatures within the specified limits of the device. For use with media other than air or for human life support systems, AVENTICS must be consulted. Hydraulic cylinders are designed for operation with filtered, clean, petroleum based hydraulic fluid; operation using fire-resistant or other special types of fluids may require special packing and seals. Consult the factory.

#### 2. WARNING: MATERIAL COMPATIBILITY

Damage to product seals or other parts caused by the use of non-compatible lubricants, oil additives or synthetic lubricants in the air system compressor or line lubrication devices voids the AVENTICS warranty and can result in product failure or other malfunction. See lubrication recommendations below.

AIR LINE LUBRICANTS! In service higher than 18 cycles per minute or with continuous flow of air through the device, an air line lubricator is recommended.\* (Do not use line lubrication with vacuum products.) However, the lubricator must be maintained since the oil will wash out the grease, and lack of lubrication will greatly shorten the life expectancy. The oils used in the lubricator must be compatible with the elastomers in the device. The elastomers are normally BUNA-N, NEOPRENE, VITON, SILICONE and HYTREL. AVENTICS recommends the use of only petroleum based oils without synthetic additives, and with an aniline point between 180° F and 210° F.

**COMPRESSOR LUBRICANTS!** All compressors (with the exception of special "oil free" units) pass oil mist or vapor from the internal crankcase lubricating system through to the compressed air. Since even small amounts of non-compatible lubricants can cause severe seal deterioration (which could result in component and system failure) special care should be taken in selecting compatible compressor lubricants.

#### 3. WARNING: INSTALLATION AND MOUNTING

The user of these devices must conform to all applicable electrical, mechanical, piping and other codes in the installation, operation or repair of these devices.

**INSTALLATION!** Do not attempt to install, operate or repair these devices without proper training in the technique of working on pneumatic or hydraulic systems and devices, unless under trained supervision. Compressed air and hydraulic systems contain high levels of stored energy. Do not attempt to connect, disconnect or repair these products

when a system is under pressure. Always exhaust or drain the pressure from a system before performing any service work. Failure to do so can result in serious personal injury.

**MOUNTING!** Devices should be mounted and positioned in such a manner that they cannot be accidentally operated.

#### 4. WARNING: APPLICATION AND USE OF PRODUCTS

The possibility does exist for any device or accessory to fail to operate properly through misuse, wear or malfunction. The user must consider these possibilities and should provide appropriate safe guards in the application or system design to prevent personal injury or property damage in the event of a malfunction.

#### 5. WARNING: CONVERSION, MAINTENANCE AND REPAIR

When a device is disassembled for conversion to a different configuration, maintenance or repair, the device must be tested for leakage and proper operation after being reassembled and prior to installation.

MAINTENANCE AND REPAIR! Maintenance periods should be scheduled in accordance with frequency of use and working conditions. All AVENTICS products should provide a minimum of 1,000,000 cycles of maintenance free service when used and lubricated as recommended. However, these products should be visually inspected for defects and given an "in system" operating performance and leakage test once a year. Where devices require a major repair as a result of the one million cycles, one year, or routine inspection, the device must be disassembled, cleaned, inspected, parts replaced as required, rebuilt and tested for leakage and proper operation prior to installation. See individual catalogs for specific cycle life estimates.

#### 6. PRODUCT CHANGES

Product changes including specifications, features, designs and availability are subject to change at any time without notice. For critical dimensions or specifications, contact factory.

- \*Many AVENTICS pneumatic valves and cylinders can operate with or without air line lubrication; see individual sales catalogs for details.
- -Refer to the appropriate service manual for parts and service information, most are available for download from www.aventics.com/us/downloads

#### WARRANTIES

- 7.1 Emerson warrants that:
- a) Emerson will transfer title to the Goods (excluding Software and Firmware) to Customer under Clause 4 of our Terms and Conditions of Sale\*;
- b) Goods, Documentation and Services will conform with the Specification;
- c) Goods made by Emerson or its Affiliates will, under normal use and care, be free from defects in materials or workmanship; and
- d) Emerson and its Affiliates' Personnel delivering Services are trained and will use reasonable skill and care.
- 7.2 Warranty Periods. Unless otherwise specified by Emerson, the warranties in Clause 7.1 apply as follows:
- a) Goods: until the earlier of 12 months from the first installation or 18 months from delivery (90 days from delivery in the case of consumables);
- b) Services: for 90 days from completion of the Services;
- c) Goods repaired, replacement items and Services re-performed: from delivery of the replacement or completion of the repair or re-performance, for 90 days or until the end of the original warranty period (if later).
- 7.3 Warranty Procedure. Clause 7.3 applies if, within the warranty period, Customer discovers any non-conformity with a warranty in Clause 7.1, tells Emerson in writing and, in the case of Goods, returns the non-conforming items at Customer's cost, freight and insurance pre-paid, to the repair facility chosen by Emerson. Where this Clause applies, Emerson will, at its sole option, either:
- a) correct any non-conforming Documents and Services; or
- b) repair or replace non-conforming Goods FCA (Incoterms® 2010) at the repair location; or
- c) instead refund the price of the non-conforming item.

#### 7.4 Exclusions from Warranty.

- a) The warranties in Clause 7.1(b), (c) and (d) exclude and Customer will pay the cost of all repairs and replacements caused by any of the following: normal wear and use; inadequate maintenance; unsuitable power sources or environmental conditions; improper handling, storage, installation, or operation; misuse or accident caused by anybody except Emerson; a modification or repair not approved by Emerson in writing; materials or workmanship made, provided or specified by Customer; contamination; the use of unapproved parts, firmware or software; Cyber Attack; any other cause not the fault of Emerson.
- b) Emerson will not pay any costs relating to non-compliance with a warranty in Clause 7.1, except where agreed in writing in advance. Unless accepted in writing by Emerson, Customer will pay:
- (i) all costs of dismantling, freight, reinstallation and the time and expenses of Emerson Personnel for travel under Clause 7; and
- (ii) all costs incurred by Emerson in correcting nonconformities for which Emerson is not responsible under Clause 7 and in examining items that comply with the warranties in Clause 7.1
- c) If Emerson relies on wrong or incomplete information supplied by Customer, all warranties are void unless Emerson agrees otherwise in writing.
- d) Customer alone is responsible for the selection, maintenance and use of the Goods.
- e) Resale Products carry only the warranty given by the original manufacturer. Emerson has no liability for Resale Products beyond making a reasonable commercial effort to arrange procurement and shipping of the Resale Products.
- 7.5 Disclaimer. The limited warranties set out in this Clause 7 are the only warranties made by Emerson and can be changed only with Emerson's signed written agreement. THE WARRANTIES AND REMEDIES IN CLAUSE 7 ARE EXCLUSIVE. THERE ARE NO REPRESENTATIONS OR WARRANTIES OF ANY KIND, EXPRESS OR IMPLIED, ABOUT MERCHANTABILITY, FITNESS FOR PARTICULAR PURPOSE OR ANYTHING ELSE FOR ANY OF THE GOODS, DOCUMENTATION OR SERVICES.

#### **AVENTICS Corporation**

1953 Mercer Road Lexington, KY 40511 Tel 859.254.8031 Fax 800.489.1488 www.aventics.com/us info.us@aventics.com





#### **AVENTICS Incorporated**

5515 North Service Rd Suite #104 Burlington, Ontario L7L 6G4 Tel 905.332.0399 Fax 905.332.8596 www.aventics.com/ca info.ca@aventics.com

#### AVENTICS México, S. de R.L. de C.V.

AV. Paseo de la Reforma 250, Esquina Niza Deleg. Cuauhtémoc 06280 México, D.F. Tel 866.873.0635 www.aventics.com/mx info.mx@aventics.com

Further contacts: www.aventics.com/en/contact

The data specified only serve to describe the product. No statements concerning a certain condition or suitability for a certain application can be derived from our information. The information given does not release the user from the obligation of own judgment and verification. It must be remembered that our products are subject to a natural process of wear and aging.