


Type EZH Working Monitor

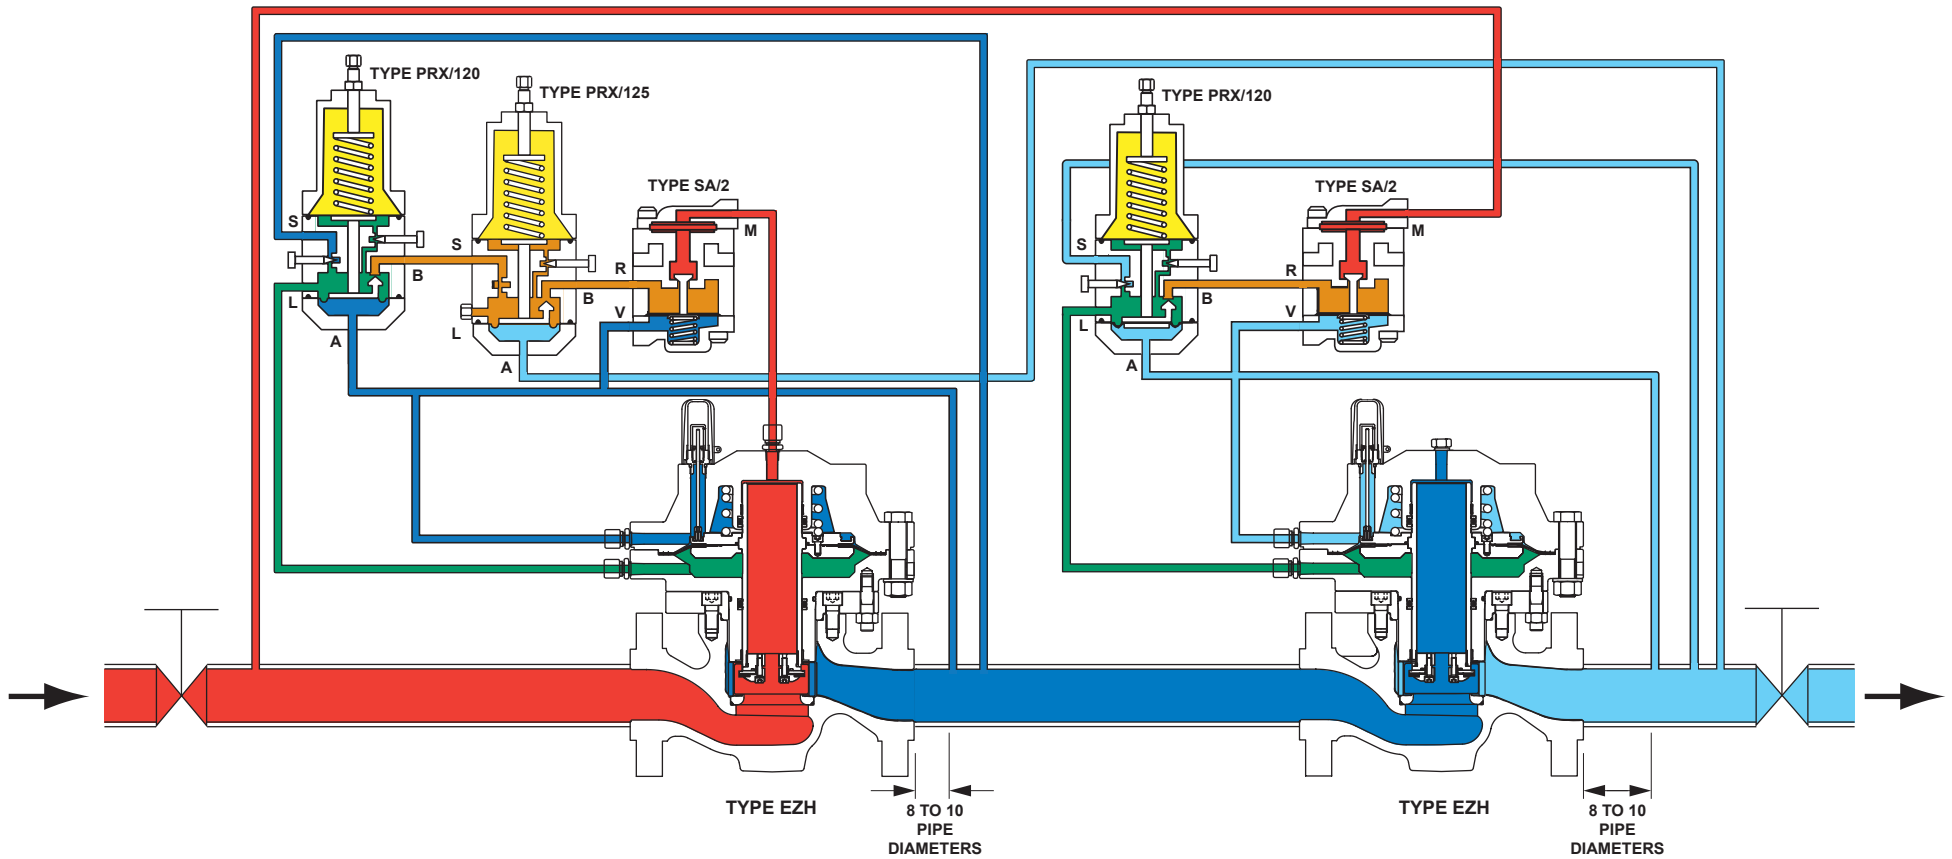

- INLET PRESSURE
- OUTLET PRESSURE
- ATMOSPHERIC PRESSURE
- LOADING PRESSURE
- INTERMEDIATE PRESSURE
- PILOT SUPPLY PRESSURE

E0876