


# Type EZR-PRX Wide-Open Monitor\*

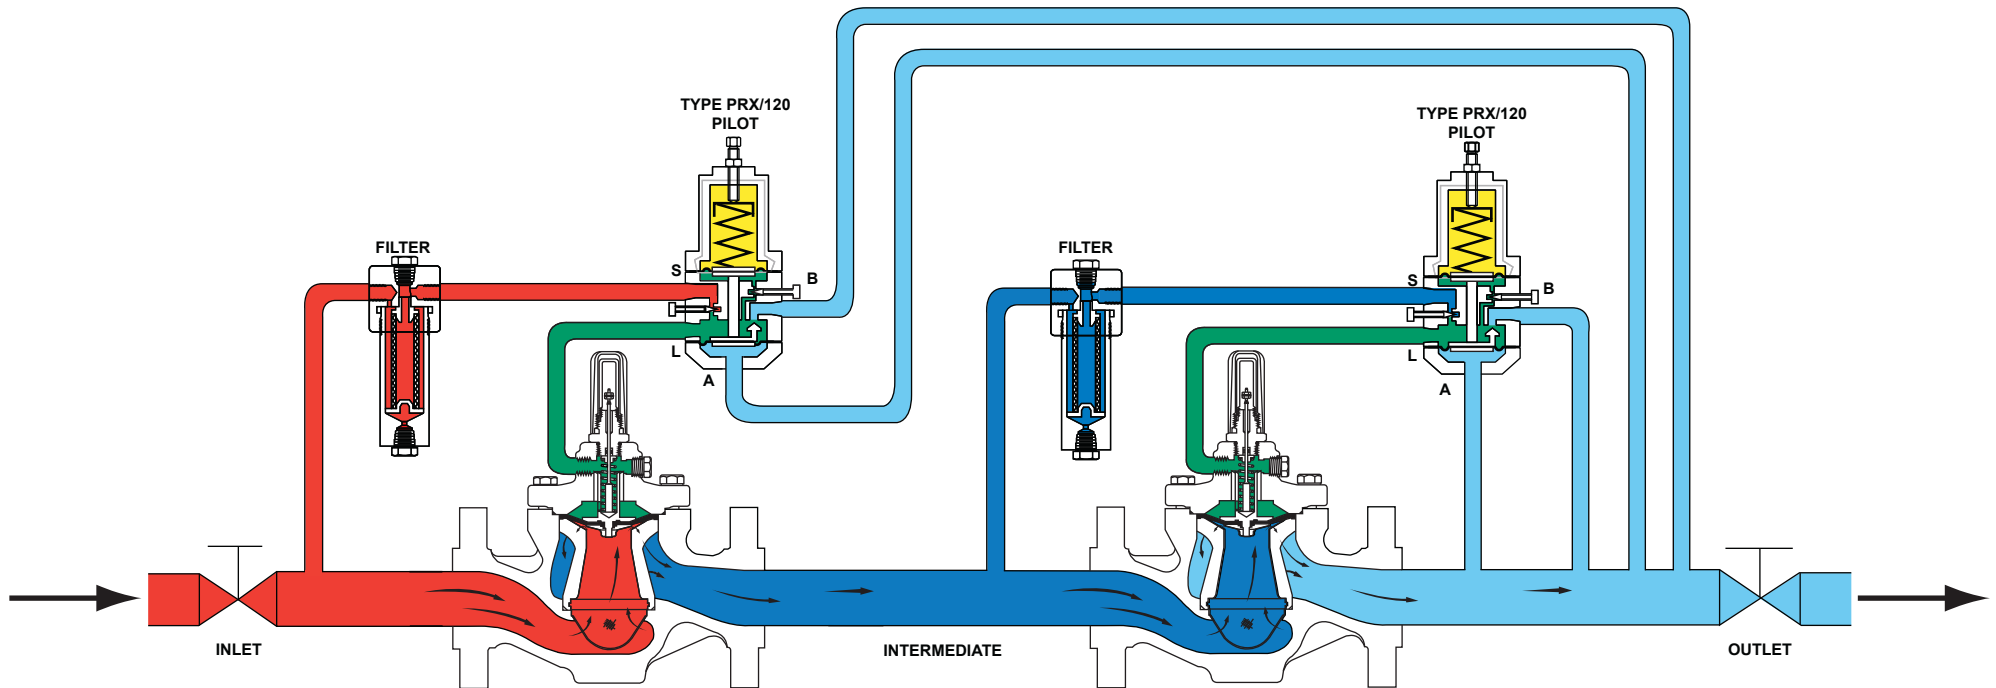

\*LOCKUP PRESSURE WILL BE THE MONITOR PILOT SETPOINT WHEN THIS CONFIGURATION IS USED.

- █ INLET PRESSURE
- █ OUTLET PRESSURE
- █ ATMOSPHERIC PRESSURE
- █ LOADING PRESSURE
- █ INTERMEDIATE PRESSURE