Instruction Manual Type 75A

September 2009

Type 75A Water Pressure Regulator

Application

The Type 75A is designed to reduce domestic or industrial water pressures to a constant pressure, thus protecting plumbing fixtures and meters from high-pressure surges. As shown in Figure 1, it is self-contained, requiring no external control line for operation.

Installation

Check the unit for shipment damage. Clean all foreign material from the pipelines and regulator interior. Install the Type 75A in a horizontal line with the spring case above or below the line, and with flow through the regulator as indicated by the arrow cast on the body. Coat the external threads with pipe compound and draw up the connections tightly but not severely. If a snap-acting valve (solenoid valve) is used in the system, the snap-acting valve should be installed upstream of the Type 75A. The Type 75A may be damaged by high shutoff pressure if a snap-acting valve is installed downstream.

Adjustment

One spring for each size regulator allows operation over an outlet pressure range of 20 to 80 psi (1,4 to 5,5 bar). Maximum inlet pressure is 200 psi (13,8 bar). Minimum operating differential pressure is 5 psi (0,34 bar).

To change the reduced pressure, loosen the adjusting screw locknut (key 9) and turn the adjusting screw (key 8) into the spring case to increase the reduced pressure, or out of the case to decrease it. Re-tighten the locknut.

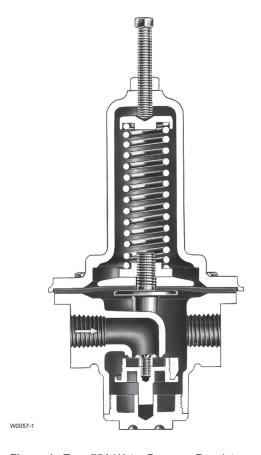


Figure 1. Type 75A Water Pressure Regulator

Maintenance

To replace the valve disk (key 13), unscrew the guide plug (key 3) from the body. The valve disk holder (key 5) may now be unscrewed from the yoke (key 4). Be careful not to twist and rupture the diaphragm (key 12).





Note

A piece of hex bar stock can be drilled out and slipped over the disk holder shaft to fit inside the holder. This simplifies removal of the holder from the yoke.

Use the following sizes of hex bar: NPS 1/2 (DN 15) body – 7/8-inch (22 mm) hex; NPS 3/4 (DN 20) body – 1-inch (25 mm) hex; NPS 1 or 1-1/2 (DN 25 or 40) body – 1-1/4-inch (32 mm) hex; NPS 2 (DN 50) body – 2-inch (51 mm) hex; NPS 2-1/2 (DN 65) body – 2-1/2-inch (63 mm) hex.

To replace valve disk, unscrew the disk retaining screw (key 16), remove old disk (key 13), apply gasket sealer to new disk and install.

To replace the diaphragm, first remove tension of the regulator spring (key 11) by turning out the adjusting screw (key 8). Remove the bolting that holds the spring case (key 2) to the body and lift off the casing and regulator spring. Unscrew the diaphragm nut (key 7) and diaphragm head (key 6). Replace the diaphragm.


Parts Ordering

When corresponding with your local Sales Office or sales representative about this regulator, always reference the type number which is found on the nameplate (key 21).

When ordering replacement parts, reference the key number of each needed part as found in the following parts list.

Parts List

Key	Description	Part Number
1	Body Bronze NPS 1/2 (DN 15) NPS 3/4 (DN 20) NPS 1 (DN 25) NPS 1-1/2 (DN 40)	2A940812012 2D226312012 2V361512012 3D174012012
2	NPS 2 (DN 50) NPS 2-1/2 (DN 65) Spring Case Cast Iron	3D626712012 3E231012012
	NPS 1/2 (DN 15) NPS 3/4 (DN 20) NPS 1 (DN 25) NPS 1-1/2 (DN 40) NPS 2 and 2-1/2 (DN 50 and 65)	1D878619042 00085719042 2A480119042 3V361319042 00132019042

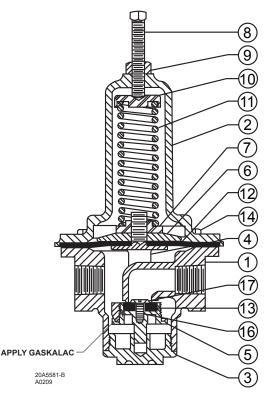

NPS 1/2, 3/4, 1, AND 1-1/2 BODY (DN 15, 20, 25, AND 40)

Figure 2. Type 75A Assemblies

Key	Description	Part Number
3	Guide Plug	
	Bronze	014/000440040
	NPS 1/2 (DN 15)	0W099412012
	NPS 3/4 (DN 20)	1A971912012
	NPS 1 (DN 25)	1A950812012
	NPS 1-1/2 (DN 40) NPS 2 (DN 50)	1A974612012 1A975212012
	NPS 2-1/2 (DN 65)	0D023212012
4	Valve Yoke	00023212012
4	Bronze	
	NPS 1/2 (DN 15)	1A942712012
	NPS 3/4 (DN 20)	1A945512012
	NPS 1 (DN 25)	1A951412012
	NPS 1-1/2 (DN 40)	2V361412012
	NPS 2 (DN 50)	2V361612012
	NPS 2-1/2 (DN 65)	2V361712012
5	Valve Disk Holder	
	Bronze	
	NPS 1/2 (DN 15)	1B590112012
	NPS 3/4 (DN 20)	1B590212012
	NPS 1 (DN 25)	1B867312012
	NPS 1-1/2 (DN 40)	1B867712012
	NPS 2 (DN 50)	1B867912012
	NPS 2-1/2 (DN 65)	1B869812012
6	Diaphragm Head	
	NPS 1/2 (DN 15), Steel	1A941524092
	NPS 3/4 (DN 20), Cast Iron	1A945619042
	NPS 1 (DN 25), Cast Iron	1A950919052
	NPS 1-1/2 (DN 40), Cast Iron	1V361219042
	NPS 2 and 2-1/2 (DN 50 and 65), Cast Iron	1A975819042

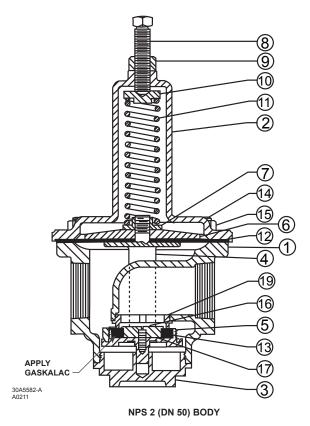


Figure 2. Type 75A Assemblies (continued)

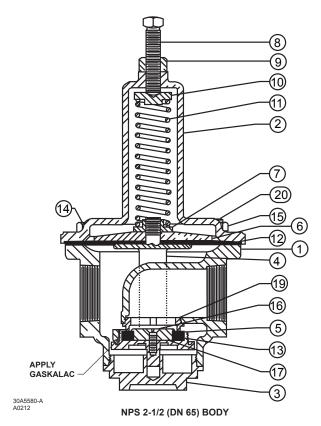


Figure 2. Type 75A Assemblies (continued)

Key	Description	Part Number R	Key	Description	Part Number
7	Diaphragm Nut Steel NPS 1/2 (DN 15) NPS 3/4 (DN 20) NPS 1 (DN 25) NPS 1-1/2 (DN 40) NPS 2 and 2-1/2 (DN 50 and 65)	1A941424092 1E478524092 1V361124092 1A974824092 1A982424092	12*	Diaphragm Neoprene (CR) NPS 1/2 (DN 15) NPS 3/4 (DN 20) NPS 1 (DN 25) NPS 1-1/2 (DN 40) NPS 2 and 2-1/2 (DN 50 and 65)	1A941002112 1A946102112 1A951102112 1A974302112 1A975502112
8	Set Screw Zinc-plated steel NPS 1/2 (DN 15) NPS 3/4 (DN 20) NPS 1 and 1-1/2 (DN 25 and 40) NPS 2 and 2-1/2 (DN 50 and 65)	1 1C216032992 1A514428992 1F575328992 1V360928982	13*	Valve Disk Nitrile (NBR) NPS 1/2 (DN 15) NPS 3/4 (DN 20) NPS 1 (DN 25) NPS 1-1/2 and 2 (DN 40 and 50)	1C158203022 1C158603022 1C158703022 1C158903022
9	Hex Nut Brass NPS 1/2 and 3/4 (DN 15 and 20) NPS 1 and 1-1/2 (DN 25 and 40) NPS 2 and 2-1/2 (DN 50 and 65)	1 1A518014012 1A352414012 1A599314012	14	NPS 2-1/2 (DN 65) Cap Screw Zinc-plated steel NPS 1/2 (DN 15) (6 required) NPS 3/4 (DN 20) (6 required)	1C159803022 1B720924052 1A352624052
10	Spring Seat Steel NPS 1/2 and 3/4 (DN 15 and 20) NPS 1 (DN 25) NPS 1-1/2 to 2-1/2 (DN 40 to 65)	1E478424092 1V361024092 1A975424092 1	15	NPS 1 (DN 25) (8 required) NPS 1-1/2 (DN 40) (8 required) NPS 2 (DN 50) (10 required) NPS 2-1/2 (DN 65) (4 required) Hex Nut	1A368324052 1A353024052 1A569824052 1A582324052
11	Spring Spring wire NPS 1/2 (DN 15) NPS 3/4 (DN 20) NPS 1 (DN 25) NPS 1-1/2 (DN 40) NPS 2 and 2-1/2 (DN 50 and 65)	1V360527022 1V360627142 1V360727142 1V360827142 1C398227042		Zinc-plated steel NPS 1/2 (DN 15) (6 required) NPS 3/4 (DN 20) (6 required) NPS 1 and 1-1/2 (DN 25 and 40) (8 required) NPS 2 (DN 50) (10 required) NPS 2-1/2 (DN 65) (6 required)	1A3915X0022 1A352724122 1A346524122 1A353724122 1A341224122

^{*}Recommended spare part.

Type 75A

Key	Description	Part Number	Key	Description	Part Number
16	Machine Screw		19*	Orifice	
	Brass			Bronze	
	NPS 1/2 (DN 15)	1A8991X0012		NPS 2 (DN 50)	1A980512012
	NPS 3/4 and 1 (DN 20 and 25)	0V070414012		NPS 2-1/2 (DN 65)	1A981012012
	NPS 1-1/2 and 2 (DN 40 and 50)	1D567314012	20	Cap Screw	
	NPS 2-1/2 (DN 65)	J17796X0012		Zinc-plated steel	
17	Disk Retainer Washer			NPS 2-1/2 (DN 65) (6 required)	1A344424052
	Brass		21	Nameplate (not shown)	11B6112X012
	NPS 3/4 (DN 20)	0B078214012	22	Drive Screw (not shown)	1A676728992
	NPS 1 (DN 25)	00147614012			
	NPS 1-1/2 and 2 (DN 40 and 50)	1A975014012			
	NPS 2-1/2 (DN 65)	0D023314012			

Industrial Regulators

Emerson Process Management Regulator Technologies, Inc.

USA - Headquarters McKinney, Texas 75069-1872 USA Tel: 1-800-558-5853 Outside U.S. 1-972-548-3574

Asia-Pacific Shanghai, China 201206 Tel: +86 21 2892 9000

Europe

Bologna, Italy 40013 Tel: +39 051 4190611 Middle East and Africa Dubai, United Arab Emirates

Tel: +971 4811 8100

Natural Gas Technologies

Emerson Process Management Regulator Technologies, Inc.

USA - Headquarters McKinney, Texas 75069-1872 USA Tel: 1-800-558-5853 Outside U.S. 1-972-548-3574

Asia-Pacific

Singapore, Singapore 128461

Tel: +65 6777 8211

Europe

Bologna, Italy 40013 Tel: +39 051 4190611 Gallardon, France 28320 Tel: +33 (0)2 37 33 47 00

TESCOM

Emerson Process Management Tescom Corporation

USA - Headquarters Elk River, Minnesota 55330-2445 USA

Tel: 1-763-241-3238

Europe

Selmsdorf, Germany 23923 Tel: +49 (0) 38823 31 0

For further information visit www.emersonprocess.com/regulators

The Emerson logo is a trademark and service mark of Emerson Electric Co. All other marks are the property of their prospective owners. Fisher is a mark owned by Fisher Controls, Inc., a business of Emerson Process Management.

The contents of this publication are presented for informational purposes only, and while every effort has been made to ensure their accuracy, they are not to be construed as warranties or guarantees, express or implied, regarding the products or services described herein or their use or applicability. We reserve the right to modify or improve the designs or specifications of such products at any time without notice.

Emerson Process Management does not assume responsibility for the selection, use or maintenance of any product. Responsibility for proper selection, use and maintenance of any Emerson Process Management product remains solely with the purchaser.



^{*}Recommended spare part.