



# KEYSTONE F89 PNEUMATIC ACTUATOR

## SAFETY GUIDE

Safety guide (ATEX) for F89 Rack and Pinion Pneumatic Actuators



### 1 SAFETY INSTRUCTIONS

Please read these safety warnings, cautions, and instructions carefully before using the product.

These instructions cannot cover every installation and situation. Do not install, operate, or maintain this product without being fully trained and qualified in valve, actuator, and accessory installation, operation and maintenance.

To avoid personnel injury or property damage, it is important to carefully read, understand, and follow all of the contents of the associated instruction manual, including all safety cautions and warnings. If you have any questions concerning installation, or use of this product, contact your Emerson sales office before proceeding.

#### 1.1 ANSI 534.6 Safety messages

##### **⚠ WARNING**

*Indicates a hazardous situation that, if not avoided, could result in death or serious injury.*

##### **⚠ CAUTION**

*Indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.*

##### **NOTE**

Indicates information considered important, but not hazard-related.

### CONTENTS

<b>1 Safety instructions</b> .....	<b>1</b>
1.1 ANSI 534.6 Safety messages .....	1
<b>2 General information</b> .....	<b>2</b>
2.1 General application .....	2
2.2 Inspection and maintenance schedules ....	2
2.3 Parts ordering.....	2
<b>3 Keystone F89 - Series actuators</b> .....	<b>3</b>
3.1 Installation .....	3
3.2 Operation.....	3
3.3 Maintenance .....	4
<b>4 Actuator accessories</b> .....	<b>5</b>
<b>5 Instructions for use in (potential) explosive areas</b> .....	<b>5</b>
5.1 Intended use .....	5
5.2 Safety instructions.....	5
5.3 Maximum temperatures .....	6

# KEYSTONE F89 PNEUMATIC ACTUATOR

## SAFETY GUIDE

---

### 2 GENERAL INFORMATION

#### 2.1 General application

Keystone Rack and Pinion Pneumatic F89 actuators are intended for the automation and operation of quarter-turn valves like butterfly & ball valve.

Rack and Pinion actuators can also be used to operate venting louvers or any other quarter-turn applications.

This product was intended for a specific range of service conditions: pressure, ambient temperature, operating media, and possibly other specifications. Do not expose the product to service conditions or variables other than those for which the product was intended.

If you are not sure what these conditions or variables are, contact your Emerson sales office for assistance. Provide the product type, size, serial number and all other pertinent information that you have available.

#### 2.2 Inspection and maintenance schedules

Keystone F89 - Series actuators must be inspected periodically and maintained as needed. Refer to the maintenance section of manual VCIOM-03059-EN for more detailed information.

The schedule for inspection can only be determined based on the severity of your service conditions. Your installation might also be subject to inspection schedules set by applicable governmental codes and regulations, industry standards, company standards, or plant standards.

In order to avoid increasing dust explosion risk, periodically clean dust deposits from all equipment.

When equipment is installed in a hazardous area (potentially explosive atmosphere), prevent sparks by proper tool selection and avoiding other types of impact energy.

Proper care must be taken to avoid generation of static electricity on the non-conductive external surfaces of the equipment (e.g. rubbing of surfaces, etc.). The actuator's surface temperature is dependent upon process operating conditions.

#### 2.3 Parts ordering

When ordering parts for older products, always specify the type, size and serial number of the product and provide all other pertinent information that you can, such as part material, age of the product, and general service conditions. If you have reconfigured the product since it was originally purchased, include that information with your request.

#### WARNING - USE GENUINE PARTS

*Use only genuine replacement parts. Components that are not supplied by Emerson should not, under any circumstances, be used in any Keystone F89 product. Use of components not supplied by Emerson may void your warranty, might adversely affect the performance of the product, and could cause personal injury and property damage.*

# KEYSTONE F89 PNEUMATIC ACTUATOR

## SAFETY GUIDE

---

### 3 KEYSTONE F89 - SERIES ACTUATORS

These safety instructions are limited to Keystone F89 - Series actuators which are operating using compressed air. If the application requires use of a flammable or hazardous gas, you must contact your Emerson sales office for assistance.

#### 3.1 Installation

##### **⚠ WARNING - DO NOT EXCEED SPECIFICATION**

To avoid personal injury and property damage caused by bursting of parts and to avoid parts damage, malfunction of control valve, or loss of control of the process caused by excessive pressure, do not exceed the maximum pressures or temperatures for this actuator, as given in the applicable product literature or on the nameplate. Use pressure-limiting or pressure-relieving devices to prevent the actuator pressure from exceeding specified limits. If you cannot determine the limits for this product, contact your Emerson sales office before proceeding.

- To avoid personal injury, always wear protective gloves, clothing and eye wear when performing any installation operation.
- If hoisting the actuator, use a nylon sling to protect the surfaces. Carefully position the sling to prevent damage to the actuator tubing and any accessories. Also, take care to prevent people from being injured in case the hoist or rigging slips. Be sure to use adequately sized hoists and chains or slings to handle the assembly. If an actuator/valve assembly should be lifted, it is strongly recommended to connect the nylon lifting slings in such way that the actuator and valve is supported.
- Check with your process or safety engineer for any additional measures that must be taken to protect against process media.
- If installing into an existing application, also refer to the WARNING in the Maintenance section.
- Do not connect a pressure vessel to the actuator with unrestricted media.
- Do not exceed the MAXIMUM stated operating pressures.
- Applying pressure directly to the actuator can turn the actuator's shaft/valve stem.
- Applying a control signal to the actuator's solenoid can turn the actuator/valve assembly.

##### **⚠ WARNING - MOVING PARTS**

Stay away from moving parts to prevent serious injury. When test cycling the actuator and valve assembly by applying pressure to the A or B port, be aware that there are moving parts like pinion top, actuator to valve coupling and the valve stem, ball, plug, etc.

Isolate the piping system on which an actuator-valve assembly is installed, when removing this assembly, and relieve any media pressure that may be trapped in the valve cavities before removing the actuator for maintenance.

#### 3.2 Operation

##### **⚠ WARNING - MOVING PARTS**

When rotating the actuator stem or shaft with loading pressure applied, use caution to keep hands and tools out of the actuator travel path. Personal injury and property damage is possible if something is caught between the actuator stem and other control valve assembly parts.

##### 3.2.1 Operating media

- Use clean, dry or lubricated air.
- Maximum Operating Pressure (MOP) = 8.3 bar/120 psi (Dynamic)
  - MOP is the pressure required to produce the maximum rated torque at the break position for all actuators.
  - Pressure should not exceed MOP during valve rotation.
  - MOP should be the maximum pressure regulator setting.

##### **⚠ WARNING - DO NOT EXCEED SPECIFICATION**

It can be assured that the housing will not rupture or burst when applying 10 bar (145 psi) of pressure but the cycle function cannot be guaranteed as it totally depends on the time span to which actuator is subjected at 10 bar (145 psi) and the frequency at which these pressure peaks occurs. Every time this peak occurs it will surely have a significantly negative effect on the life expectancy of the actuator.

- Spring stroke of spring-return actuators should not operate pneumatically.
- Dew point at least 10 K below ambient temperature.
- For subzero applications take appropriate measures.
- Mentioned pressure levels are "gauge pressures". Gauge pressure is equal to absolute pressure minus atmospheric pressure.

##### 3.2.2 Operating temperature range

- Using standard seals and greases, the operating temperature range is -20 °C to 80 °C [-4 °F to 176 °F] as is indicated on the product label.
- Other medias and temperatures may be used but consult your local Emerson sales office for confirmation as to suitability.

# KEYSTONE F89 PNEUMATIC ACTUATOR

## SAFETY GUIDE

---

### 3.3 Maintenance

Before mounting or (dis) assembling the actuator consult the relevant sections of the installation, operation and maintenance manual for more detailed maintenance information.

#### **⚠ WARNING**

Avoid personnel injury or property damage from sudden release of process pressure or uncontrolled movement of parts. Before performing any maintenance operations:

- Always wear protective gloves, clothing, and eye wear.
- Disconnect any operating lines providing air pressure, electric power, or a control signal to the actuator. Be sure the actuator cannot suddenly open or close the valve.
- Do not remove the actuator from the valve while the valve is still pressurized.
- Vent any pneumatic pressure from the actuator and relieve any actuator spring pre-compression.
- Use lock-out procedures to be sure that the above measures stay in effect while you work on the equipment.
- Never apply pressure to a partially assembled actuator unless all pressure-retaining parts have been installed properly.
- Check with your process or safety engineer for any additional measures that must be taken to protect against process media.
- Do not remove the pistons from the actuator body by using air pressure when the end caps have been removed.

#### **⚠ CAUTION**

- Do not turn out the travel stops completely when the actuator is pressurized. When adjusting the travel stops and the actuator is still pressurized, the travel stops can "shoot" away when completely turned out.

#### **⚠ CAUTION**

- Spring-return actuators contain springs in a compressed state. Follow these instructions to release the spring force safely. The end caps of spring-return actuators should be free of the spring load after loosening end cap screw evenly (3-5 mm/0.118-0.197 in). If there is still spring load on the end cap, this might indicate a broken spring cartridge. Stop this disassembly procedure immediately. Continuing might cause the end cap to be "shot" away causing serious injury. Retighten the end cap screws and return the unit to factory for service.

Refer to Appendix A of manual VCIOM-03059-EN for the instructions on how to safely remove the spring load before disassembling the end cap from the spring-return actuator.

- A spring-return actuator mounted on a valve, which is stuck in mid-stroke, contains a high spring load which will cause a sudden rotation during disassembly of the actuator versus the valve or valve bracket. This can cause serious injury to personnel or equipment damage. Refer to Appendix A of manual VCIOM-03059-EN for instructions to safely remove the spring load before disassembling the actuator from a valve, which is stuck in mid-stroke.

# KEYSTONE F89 PNEUMATIC ACTUATOR

## SAFETY GUIDE

---

### 4 ACTUATOR ACCESSORIES

---

The actuator may be equipped with components for control and/or feedback. Check the instructions of these components for installation, operation and maintenance instructions.

### 5 INSTRUCTIONS FOR USE IN (POTENTIAL) EXPLOSIVE AREAS

---

#### 5.1 Intended use

The Keystone F89 - Series pneumatic actuators are intended for use in areas in which explosive atmospheres caused by mixtures of air and gases, vapors, mists or by air/dusts are likely to occur. Therefore, it may be used in classified Zones 1, 2 with equipment protection level Gb (Gasses) and/or Zones 21, 22 with equipment protection level Db (Dust).

#### 5.2 Safety instructions

- Assembly, disassembly and maintenance, are only allowed at the actuator, when, at the time of the activity, there are no explosive mixtures.
- Prevent entry of explosive mixtures into the actuator. We suggest utilizing a solenoid with a "breather" function on spring-return actuators when used in potentially explosive atmospheres.
- In order to avoid increasing dust explosion risk, periodically clean dust deposits from all equipment.
- When equipment is installed in a hazardous area location (potentially explosive atmosphere), prevent sparks by proper tool selection and avoiding other types of impact energy.
- Rack and pinion actuators do not have an inherent ignition source due to electrostatic discharge, but explosion hazards may be present due to the discharge of static electricity from other valve assembly components.
  - To avoid personal injury or property damage, make sure that the valve is grounded to the pipeline before placing the valve assembly into service.
  - Use and maintain alternate shaft-to-valve body bonding, such as a shaft-to-body bonding strap assembly.
- Proper care must be taken to avoid generation of static electricity on the non-conductive external surfaces of the equipment (e.g. rubbing of surfaces, etc.).
- The paint protection must not exceed 200 µm if the actuator is used in a group IIC atmosphere. For group IIA or IIB atmospheres the paint protection must not exceed a thickness of 2 mm (0.08 in).

# KEYSTONE F89 PNEUMATIC ACTUATOR

## SAFETY GUIDE

---

### 5.3 Maximum temperatures

#### **⚠ WARNING - SURFACE TEMPERATURE**

The actuator's surface temperature is dependent upon process operating conditions. Personal injury or property damage, caused by fire or explosion, can result if the actuator's surface temperature exceeds the acceptable temperature for the hazardous area classification. To avoid an increase of instrumentation and/or accessory surface temperature due to process operating conditions, ensure adequate ventilation, shielding, or insulation of these actuator components installed in a potentially hazardous or explosive atmosphere.

**TABLE 1- TEMPERATURE RANGE FOR (POTENTIAL) EXPLOSIVE AREAS**

Ambient range	Temperature		Valid for actuator model
	Temperature class	Max. (Surface temperature)	
-20 °C [-4 °F] to 80 °C [176 °F]	T6	85 °C [185 °F]	Standard temperature version
-15 °C [-5 °F] to 150 °C [302 °F]	T3	200 °C [392 °F]	High temperature version
-52 °C [-62 °F] to 65 °C [149 °F]	T6	85 °C [185 °F]	Low temperature version

VCOSI-15795-EN © 2021 Emerson Electric Co. All rights reserved 07/21. Keystone is a mark owned by one of the companies in the Emerson Automation Solutions business unit of Emerson Electric Co. The Emerson logo is a trademark and service mark of Emerson Electric Co. All other marks are the property of their prospective owners.

The contents of this publication are presented for informational purposes only, and while every effort has been made to ensure their accuracy, they are not to be construed as warranties or guarantees, express or implied, regarding the products or services described herein or their use or applicability. All sales are governed by our terms and conditions, which are available upon request. We reserve the right to modify or improve the designs or specifications of such products at any time without notice.

Emerson Electric Co. does not assume responsibility for the selection, use or maintenance of any product. Responsibility for proper selection, use and maintenance of any Emerson Electric Co. product remains solely with the purchaser.

Emerson.com/FinalControl