

Bettis TEC2 Electric Actuator with Model 500 Quick-Start Guide

(Model 500 Discontinued)



BETTIS™



EMERSON.

Welcome to TEC2

The TEC2 actuator's Local Display Module (LDM) and Remote Display Module (RDM) provide easy-to-read actuator information.

The screen graphics will display the mode of operation, valve status, position, torque, and alarm symbols.

The message center will display actuator setup options, data entry feedback, and alarm messages.

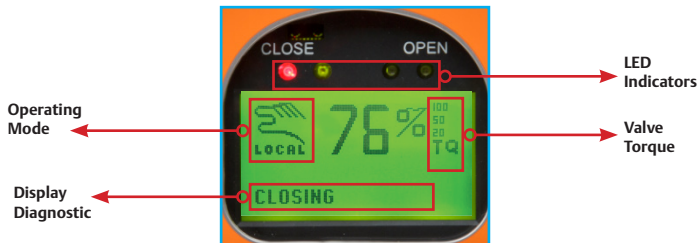

Once you follow the simple steps outlined in this guide, the actuator will be ready for normal operation. The bar graph, position digits, icons, and LEDs will indicate the valve status.



Factory Settings


The actuator has been configured as specified in the order. No further changes should be necessary other than setting the position limits, and, if network controlled, setting a unique network address. If full data was not provided when ordering or if changes are needed, see the TEC2 Installation & Operation Manual (E2K-405-0614), which can be found at www.emerson.com/bettis. Verify the voltage rating on the unit nameplate. Connect power to the unit.

Are Position Limits Set?

Does “**SET LIMITS BEFORE OPERATING**,” “**EE%**,” and the **alarm icon appear**, and is the **yellow LED** blinking? If so, then position limits **have not** been set.




Setting Valve Position Limits Initially

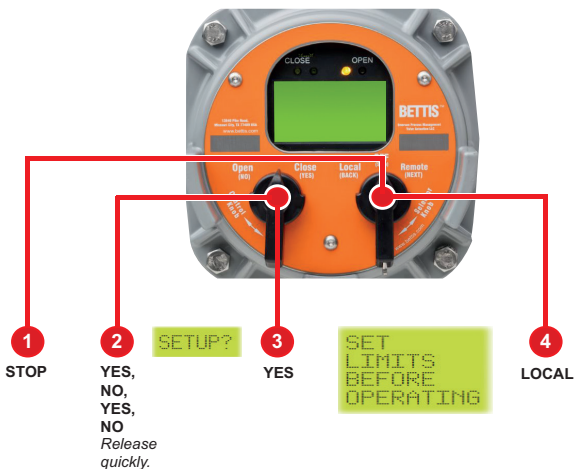

Place the selector knob in the **STOP** position. Then toggle the control knob in rapid succession to **YES**, then **NO**, then **YES**, then **NO** and release. The Setup icon will be displayed on the display module and “**SETUP?**” will be displayed on the message center. Rotate the control knob to “**YES**.” The message center will display “**SET LIMITS BEFORE OPERATING.**” Set position limits as described on the next pages.

Setting Position Limits for Electrical Operation


STEP 1: CLOSED Valve Position

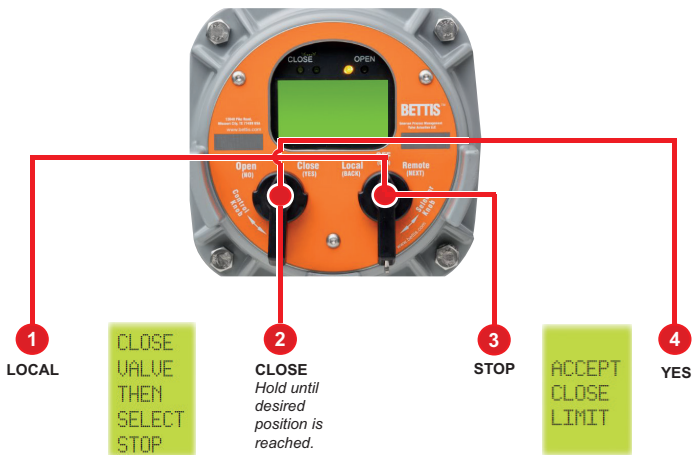

Turn the selector knob to the **“LOCAL”** position. Hold the control knob in the **“CLOSE”** position until desired position is reached. Dis-engage motor drive by setting the declutch lever in **“HAND”** mode. Using handwheel, move the valve in the open direction for one handwheel turn to allow for motor coasting. Re-engage motor drive by setting the declutch lever out of **“HAND”** mode. Return the selector knob to the **“STOP”** position. Select **“YES”** to set new close limit.

Setting Position Limits for Electrical Operation

STEP 2: OPEN Valve Position

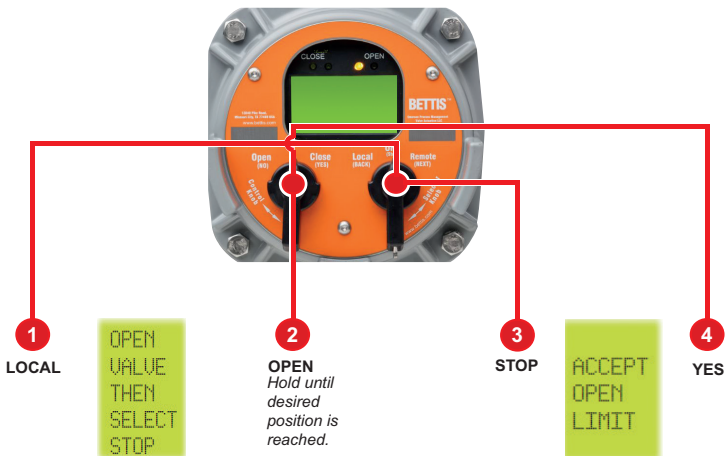

Turn the selector knob to the “LOCAL” position. Hold the control knob in the “OPEN” position until desired position is reached. Dis-engage motor drive by setting the declutch lever in “HAND” mode. Using handwheel, move the valve in the close direction for one handwheel turn to allow for motor coasting. Re-engage motor drive by setting the declutch lever out of “HAND” mode. Return the selector knob to the “STOP” position. Select “YES” to set new open limit.

Setting Position Limits for **Manual** Operation

STEP 1: CLOSED Valve Position




Turn the selector knob to the **LOCAL** position. At the “**CLOSE VALVE THEN SELECT STOP**” prompt, depress the **declutch lever** while rotating the **handwheel** until the clutch is fully engaged. Release the lever. When the valve is fully closed. Return the selector knob to the **STOP** position. At the “**ACCEPT CLOSE LIMIT**” prompt, select “**YES.**”

Advance to the “**SAVE CHANGES?**” prompt and answer **YES** to save the changes.

Setting Position Limits for **Manual** Operation

STEP 2: OPEN Valve Position

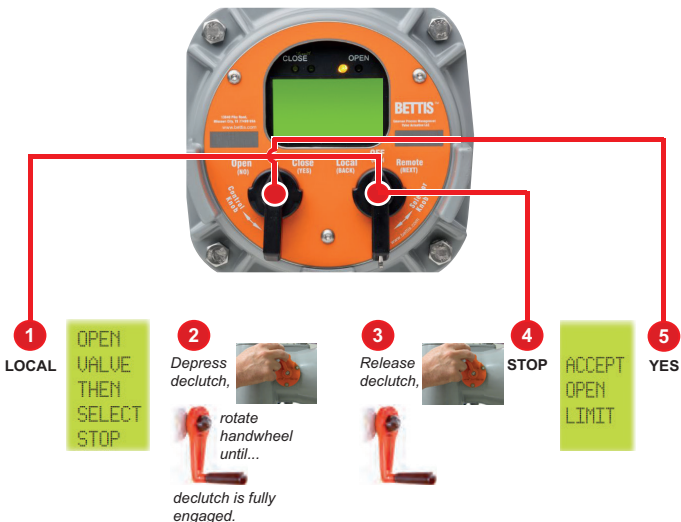

Turn the selector knob to the **LOCAL** position. At the “**OPEN VALVE THEN SELECT STOP**” prompt, depress the **declutch lever** while rotating the **handwheel** until the clutch is fully engaged. Release the lever.

When the valve is fully opened. Return the selector knob to the **STOP** position.

At the “**SAVE LIMITS**” prompt, select “**YES**.”

Advance to the “**SAVE CHANGES?**” prompt and answer **YES** to save the changes.

Check the **Open/Closed Settings**

Valve Closed

As you operate the valve in the close direction, verify that the **green LED** is blinking. When fully closed is reached, verify that the **green LED** stays **ON** and **0%** is displayed.



- 1 When turning to close, green LED blinks.
- 2 When fully closed, green LED remains lit.

0%

Note

It is also configurable to have a **red LED** for **Valve Closed**.

Valve Open

As you operate the valve in the open direction, verify that the **red LED** is blinking. When fully open is reached, verify that the **red LED** stays **ON** and **100%** is displayed.




- 1 When turning to open, red LED blinks.
- 2 When fully open, red LED remains lit.

100%

Note

It is also configurable to have a **green LED** for **Valve Open**.


Changing the Valve Settings

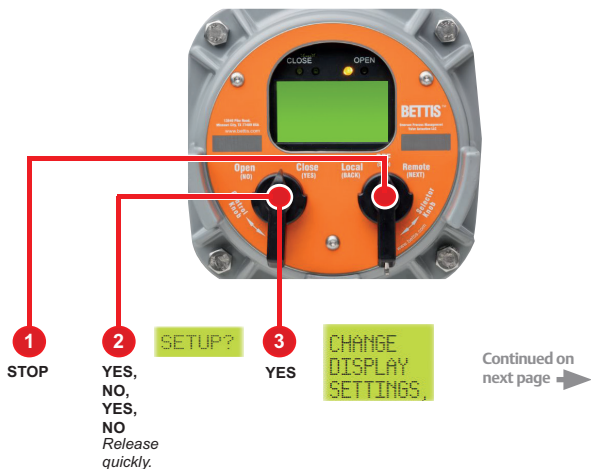

Turn the selector knob to the **STOP** position then toggle the control knob in rapid succession to **YES**, then **NO**, then **YES**, then **NO** and release. The setup icon will be displayed on the display module and "SETUP?" will be displayed on the message center. Rotate the control knob to **YES**. The message center will display "CHANGE DISPLAY SETTINGS".

Changing the Valve Settings

Continued from
previous page →

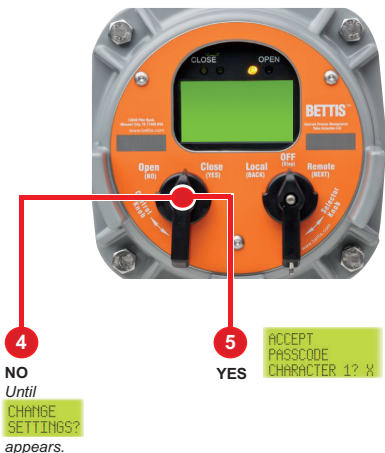

Continued on
next page →

Answer **NO** to the Setup prompts until “**CHANGE SETTINGS?**” appears. Answer **YES**. “**ACCEPT PASSCODE CHARACTER 1? X**” appears. The factory default passcode is **000**. Do not change the password without recording the new password.

Changing the Valve Settings

Enter Passcode

Continued from
previous page →



Continued on
next page →


- 6** OR **7**
- YES**
*If passcode
character is
correct...*
- NO**
*...to advance
to correct
character.*

Use the control knob and answer **YES** if the passcode character is correct. If not, use **NO** to advance incrementally to the correct character. Repeat this process until three passcode characters are entered.

Changing the Valve Settings

Setting Limits


Continued from
previous page →

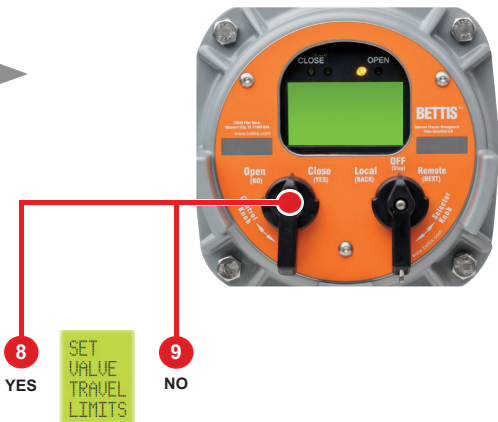

Advance to the “SET VALVE TRAVEL LIMITS” prompt and answer **YES**. Proceed to set limits.


Network Controlled

(CAM and Controlinc® option required)

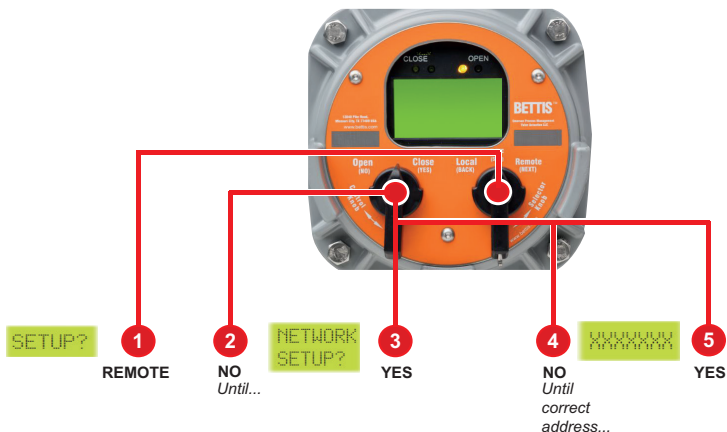

In the **"SETUP"** mode advance to **"NETWORK SETUP?"** using the selector knob in the **REMOTE** position. Answer **YES**. Hold the control knob in the NO position until the correct address appears. Answer **YES**. Unit is now network controlled. If other configuration changes are needed, please see the TEC2 Installation & Operation Manual (E2K-405-0614), which can be found at www.emerson.com/bettis.

Saving the Changes

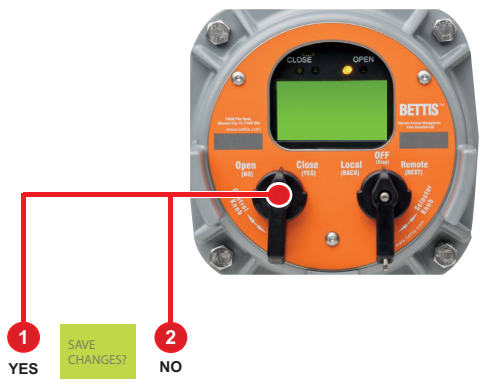

Advance to the “SAVE CHANGES?” prompt and answer **YES** to save the changes.

World Area Configuration Centers (WACC) offer sales support, service, inventory and commissioning to our global customers. Choose the WACC or sales office nearest you:

NORTH & SOUTH AMERICA

19200 Northwest Freeway
Houston TX 77065
USA
T +1 281 477 4100

Av. Hollingsworth
325 Iporanga Sorocaba
SP 18087-105
Brazil
T +55 15 3413 8888

ASIA PACIFIC

No. 9 Gul Road
#01-02 Singapore 629361
T +65 6777 8211

No. 1 Lai Yuan Road
Wuqing Development Area
Tianjin 301700
P. R. China
T +86 22 8212 3300

For complete list of sales and manufacturing sites, please visit www.emerson.com/actuationtechnologieslocations
Or contact us at info.actuationtechnologies@emerson.com

MIDDLE EAST & AFRICA

P. O. Box 17033
Jebel Ali Free Zone
Dubai
T +971 4 811 8100

P. O. Box 10305
Jubail 31961
Saudi Arabia
T +966 3 340 8650

24 Angus Crescent
Longmeadow Business Estate East
P.O. Box 6908 Greenstone
1616 Modderfontein Extension 5
South Africa
T +27 11 451 3700

EUROPE

Holland Faszor 6
Székesfehérvár 8000
Hungary
T +36 22 53 09 50

Strada Biffi 165
29017 Fiorenzuola d'Arda (PC)
Italy
T +39 0523 944 411

www.emerson.com/bettis

©2018 Emerson. All rights reserved.

The Emerson logo is a trademark and service mark of Emerson Electric Co. Bettis™ is a mark of one of the Emerson family of companies. All other marks are property of their respective owners.

The contents of this publication are presented for information purposes only, and while every effort has been made to ensure their accuracy, they are not to be construed as warranties or guarantees, express or implied, regarding the products or services described herein or their use or applicability. All sales are governed by our terms and conditions, which are available on request. We reserve the right to modify or improve the designs or specifications of our products at any time without notice.

BETTIS™



EMERSON.