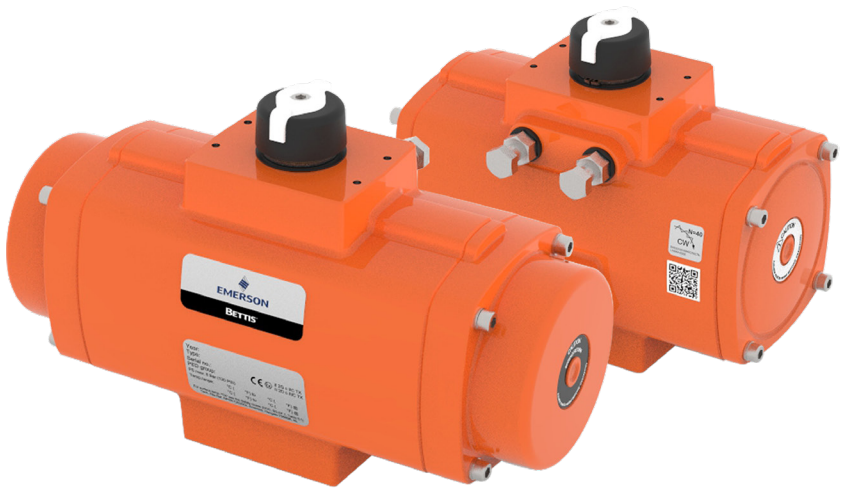


# Bettis RPE-Series

Rack and Pinion Pneumatic Actuators



*This page intentionally left blank.*

# Table of Contents

## **Section 1: Safety Instructions**

1.1 ANSI 534.6 Safety Messages ..... 1

## **Section 2: General Information**

2.1 General Application ..... 2  
2.2 Inspection and Maintenance Schedules ..... 2  
2.3 Parts Ordering ..... 3

## **Section 3: Bettis RPE-Series Actuators**

3.1 Installation ..... 4  
3.2 Operation ..... 5  
    3.2.1 Operating Media ..... 5  
    3.2.2 Operating Temperature Range ..... 6  
3.3 Maintenance ..... 6

## **Section 4: Actuator Accessories**

Actuator Accessories ..... 9

## **Section 5: Safety Instructions for Use in (Potential) Explosive Atmosphere**

5.1 Intended Use ..... 10  
5.2 ATEX Marking ..... 10  
5.3 Safety Instructions ..... 11  
5.4 Maximum Temperatures ..... 14

## **Appendix A: EU Declaration of Conformity**

EU Declaration of Conformity ..... 15

## **Appendix B: UK Declaration of Conformity**

UK Declaration of Conformity ..... 16

*This page intentionally left blank*

# Section 1: Safety Instructions

Please read these safety warnings, cautions, and instructions carefully before using the product.

These instructions cannot cover every installation and situation. Do not install, operate or maintain this product without being fully trained and qualified in valve, actuator and accessory installation, operation and maintenance.

To avoid personal injury or property damage, it is important to carefully read, understand, and follow all of the contents of the associated Installation, Operation and Maintenance Manual, including all safety cautions and warnings. If you have any questions concerning installation, or use of this product, contact your Emerson sales office before proceeding.

## 1.1

### ANSI 534.6 Safety Messages

#### **WARNING**

Indicates a hazardous situation that, if not avoided, could result in death or serious injury.

---

#### **CAUTION**

Indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.

---

#### **NOTE:**

Indicates information considered important, but not hazard-related.

---

## Section 2: General Information

### 2.1 General Application

The Bettis™ RPE-Series Rack and Pinion actuators are intended for the automation and operation of quarter-turn valves like Butterfly, Ball and Plug valves.

Rack and Pinion actuators can also be used to operate venting louvers or any other quarter-turn applications.

This product was intended for a specific range of service conditions: pressure, ambient temperature, operating media, and possibly other specifications. Do not expose the product to service conditions or variables other than those for which the product was intended.

If you are not sure what these conditions or variables are, contact your Emerson sales office for assistance. Provide the product type, size, serial number and all other pertinent information that you have available.

### 2.2 Inspection and Maintenance Schedules

The Bettis RPE-Series Rack and Pinion actuators must be inspected periodically and maintained as needed. Refer to the maintenance section of manual DOC.IOM.BE.EN for more detailed information.

The schedule for inspection can only be determined based on the severity of your service conditions. Your installation might also be subject to inspection schedules set by applicable governmental codes and regulations, industry standards, company standards, or plant standards.

In order to avoid increasing dust explosion risk, periodically clean dust deposits from all equipment.

When equipment is installed in a hazardous area (potentially explosive atmosphere), prevent sparks by proper tool selection and avoiding other types of impact energy.

Proper care must be taken to avoid generation of static electricity on the non-conductive external surfaces of the equipment (e.g., rubbing of surfaces, etc.). The actuator's surface temperature is dependent upon process operating conditions.

## 2.3 Parts Ordering

When ordering parts for older products, always specify the type, size and serial number of the product and provide all other pertinent information that you can, such as part material, age of the product, and general service conditions. If you have reconfigured the product since it was originally purchased, include that information with your request.

### **WARNING**

Use only genuine replacement parts. Components that are not supplied by Emerson should not, under any circumstances, be used in any Bettis product. Use of components not supplied by Emerson may void your warranty, might adversely affect the performance of the product, and could cause personal injury and property damage.

---

## Section 3: Bettis RPE-Series Actuators

These safety instructions are limited to Bettis RPE-Series actuators which are operating using air or inert gas. If the application requires use of a flammable or hazardous gas, you must contact your Emerson sales office for assistance.

### 3.1 Installation

#### **WARNING**

To avoid personal injury and property damage caused by bursting of parts and to avoid parts damage, malfunction of control valve, or loss of control of the process caused by excessive pressure, do not exceed the maximum pressures or temperatures for this actuator, as given in the applicable product literature or on the nameplate. Use pressure-limiting or pressure-relieving devices to prevent the actuator pressure from exceeding specified limits. If you cannot determine the limits for this product, contact your Emerson sales office before proceeding.

- To avoid personal injury, always wear protective gloves, clothing and eye wear when performing any installation operation.
- If hoisting the actuator, use a nylon sling to protect the surfaces. Carefully position the sling to prevent damage to the actuator tubing and any accessories. Also, take care to prevent people from being injured in case the hoist or rigging slips. Be sure to use adequately sized hoists and chains or slings to handle the assembly. If an actuator/valve assembly should be lifted, it is strongly recommended to connect the nylon lifting slings in such way that the actuator and valve is supported.
- Check with your process or safety engineer for any additional measures that must be taken to protect against process media.
- If installing into an existing application, also refer to the WARNING in the Maintenance section.
- Do not connect a pressure vessel to the actuator with unrestricted media.
- Do not exceed the MAXIMUM stated operating pressures.
- Applying pressure directly to the actuator can turn the actuator's shaft/valve stem.
- Applying a control signal to the actuator's solenoid can turn the actuator/valve assembly.



### WARNING

Stay away from moving parts to prevent serious injury. When test cycling the actuator and valve assembly by applying pressure to the A or B port, be aware that there are moving parts like pinion top, actuator to valve coupling and the valve blade, ball, plug, etc. Isolate the piping system on which an actuator-valve assembly is installed, when removing this assembly, and relieve any media pressure that may be trapped in the valve cavities before removing the actuator for maintenance.

---

## 3.2 Operation

### WARNING

When rotating the actuator stem or shaft with loading pressure applied, use caution to keep hands and tools out of the actuator travel path. Personal injury and property damage is possible if something is caught between the actuator stem and other control valve assembly parts.

---

### 3.2.1 Operating Media

1. Use clean, dry or lubricated air or inert gas.
2. **Maximum Operating Pressure (MOP) = 8.3 barg / 120 psig**, MOP is the pressure required to produce the maximum rated torque at the break position for all actuators. Pressure should not exceed MOP during valve rotation. MOP should be the maximum pressure regulator setting.

### WARNING

It can be assured that the housing will not rupture or burst when applying 10 bar of pressure but the cycle function cannot be guaranteed as it totally depends on the time span to which actuator is subjected at 10 bar and the frequency at which these pressure peaks occurs. Every time this peak occurs will, for sure, have a significantly negative effect on the life expectancy of the actuator.

---

3. Refer to below table on applications where the spring stroke of spring-return actuators is pneumatically operated.

**Table 1. Maximum Pressure on Spring Stroke of Spring-Return Actuators**

Spring set	Maximum pressure on spring stroke of spring-return actuators
N=10	7 barg / 101.5 psig
N=20	6 barg / 87.0 psig
N=30	5 barg / 72.5 psig
N=40	4 barg / 58.0 psig
N=50	3 barg / 43.5 psig
N=60	2 barg / 29.0 psig

4. Dew point at least 10 K below ambient temperature.
5. For subzero applications take appropriate measures.
6. Mentioned pressure levels are “gauge pressures”. Gauge pressure is equal to absolute pressure minus atmospheric pressure.

### 3.2.2 Operating Temperature Range

1. Using standard seals and greases the operating temperature range is -20 to +80 °C / -4 to +176 °F as is indicated on the product label.
2. Other medias and temperatures may be used but consult your local Emerson sales office for confirmation as to suitability.

## 3.3 Maintenance

Before mounting or (dis)assembling the actuator consult the relevant sections of the installation, operation and maintenance manual for more detailed maintenance information.

** WARNING**

Avoid personnel injury or property damage from sudden release of process pressure or uncontrolled movement of parts. Before performing any maintenance operations:

- Always wear protective gloves, clothing, and eye wear.
- Disconnect any operating lines providing air pressure, electric power, or a control signal to the actuator. Be sure the actuator cannot suddenly open or close the valve.
- Do not remove the actuator from the valve while the valve is still pressurized.
- Vent any pneumatic pressure from the actuator and relieve any actuator spring pre-compression.
- Use lock-out procedures to be sure that the above measures stay in effect while you work on the equipment.
- Never apply pressure to a partially assembled actuator unless all pressure-retaining parts have been installed properly.
- Check with your process or safety engineer for any additional measures that must be taken to protect against process media.
- Do not remove the Pistons from the actuator body by using air pressure when the end caps have been removed.

** CAUTION**

Do not turn out the travel stops completely when the actuator is pressurized. When adjusting the travel stops and the actuator is still pressurized, the travel stops can “shot” away when completely turned out.

** CAUTION**

- Spring-return actuators contain springs in a compressed state. Follow these instructions to release the spring force safely. The end caps of spring-return actuators sizes 25 to 600 should be free of the spring load after 10 full turns (crosswise relaxing) of the end cap screws. If there is still spring load on the end cap, this might indicate a broken spring cartridge. Stop this disassembly procedure immediately. Continuing might cause the end cap to be “shot” away causing serious injury. Spring-return actuator size 950 to 4000 have long end cap screws to release the spring load safely. Refer to Appendix A of manual DOC.IOM.BE.EN for the instructions on how to safely remove the spring load before disassembling the end cap from the spring-return actuator.
  - A spring-return actuator mounted on a valve, which is stuck in mid stroke, contains a high spring load which will cause a sudden rotation during disassembly of the actuator versus the valve or valve bracket. This can cause serious injury to personnel or equipment damage.
  - Refer to Appendix A of manual DOC.IOM.BE.EN for instructions to safely remove the spring load before disassembling the actuator from a valve, which is stuck in mid stroke.
-

## Section 4: Actuator Accessories

The actuator may be equipped with components for control and/or feedback. Check the instructions of these components for installation, operation and maintenance instructions.

## Section 5: Safety Instructions for Use in (Potential) Explosive Atmosphere

### 5.1 Intended Use

The Bettis RPE-Series pneumatic actuators are designed to comply with the explosion safety requirements in the Ex-standards EN IEC 60079-0:2018, EN ISO 80079-36, EN ISO 80079-37:2016 and EN 1127-1:2019. These standards contain the requirements for non-electrical equipment in potentially explosive atmospheres.

The actuators comply with the constructional safety type “c” requirements. The actuators are designed for gas group IIB or IIC and dust group IIIC applications and are applicable in temperature classes T6 to T4 depending on model. The Equipment Protection Level is Gb for gas and Db for dust, so the actuators can be used in Ex classified hazardous zones 1/21 and 2/22.

### 5.2 ATEX Marking

#### Complete ATEX Marking:

  II 2 G Ex h IIB or IIC TX Gb  
II 2 G Ex h IIIC TX Db

For surface temperature “TX”, refer to Table 3 in Maximum Temperatures Section.

#### Ambient Temperature Ranges ( $T_{amb}$ ):

Standard Temperature: -20 to 80 °C / -4 to 176 °F

Low Temperature: -40 to 80 °C / -40 to 176 °F

High Temperature: -10 to 120 °C / -14 to 250 °F

## 5.3 Safety Instructions

1. Before the installation, please carefully read the service instructions. Emerson is not responsible for damages caused by operations not complying with the instructions contained in such manuals.
2. All the operations shall be done by a trained and qualified operator. All maintenance operations must be performed in accordance with the instructions detailed in the maintenance manual.
3. The assembly cannot be installed and used in classified areas as zone 0 to 20, mines (group I).
4. The equipment shall be installed in a place where the risk of lightning is covered by the relevant industrial code of practice.
5. Assembly, disassembly and maintenance, is only allowed at the actuator, when, at the time of the activity, there are no explosive mixtures.
6. During maintenance operations, the user must take all appropriate measures to prevent risks related to the toxicity of substances, using appropriate protective equipment (e.g., gloves, goggles, face mask), according to the extent provided the technical and organizational point of use and the recommendations provided in the specifications of the used substances.
7. All the mechanical components do not have ignition sources during the normal working process. The user shall check periodically the vibration presences and/or abnormal noises and it must stop the unit immediately, check the causes and contact the manufacturer.
8. Actuators do not have an inherent ignition source due to electrostatic discharge, but explosion hazards may be present due to the discharge of static electricity from other valve assembly components.
  - i. To avoid personal injury or property damage, make sure that the valve is grounded to the pipeline before placing the valve assembly into service.
  - ii. Use and maintain alternate shaft-to-valve body bonding, such as a shaft-to-body bonding strap assembly.

- iii. The equipment must be earthed through an anti-loosening and anti-rotation device. The user must regularly check the effectiveness of the ground connection.
  - iv. A warning is present into the label: "Potential Electrostatic Charging Hazard".
9. When equipment is installed in a hazardous area location (potentially explosive atmosphere), prevent sparks by proper tool selection and avoiding other types of impact energy.
10. It is under end user responsibility to avoid the explosive mixture inside the actuator. We suggest utilizing a solenoid with a "breather" function on spring-return actuators when used in potentially explosive atmospheres.
11. To avoid increasing dust explosion risk, periodically clean dust deposits from all equipment.
12. Proper care must be taken to avoid generation of static electricity on the non-conductive external surfaces of the equipment (e.g., rubbing of surfaces, etc.).
13. The paint protection must not exceed 200  $\mu\text{m}$  if the actuator is used in a group IIC atmosphere. For group IIA or IIB atmospheres the paint protection must not exceed a thickness of 2 mm / 0.08 in.
14. For single acting actuators, it is necessary using safe air and to convey by a piping inlet/exhaust of the cylinder outside of the Ex-zone (safe area).
15. After maintenance operations carry out perform a few actuator operations to check that its movement is regular and that there is no air/oil leakage through the seals/gaskets.
16. It is under end user responsibility to make sure the electrical equipment installed on the actuators have a separated ATEX evaluation and they are designed according to the ATEX directive and they are suitable for the installation zone, group of gas, temperature class, maximum surface temperature, EPL and range of temperature.



- 17. The plastic position indicator can cause an ignition due to electrostatic discharge. Therefore, the plastic position indicators are only approved for use in certain potentially explosive (Ex) gas group areas, without additional warning on the equipment of Electrostatic hazard. Each indicator is shipped with an "Electrostatic Hazard Warning Sticker" which must be applied to the equipment according below schedule.

**Table 2.**

Actuator Sizes	Ex Gas Group		
	IIA	IIB	IIC
Small indicator (actuator sizes up to size 350)	OK to use without warning sticker	OK to use without warning sticker	Apply the Electrostatic Hazard Warning sticker
Larger indicator (actuator sizes 600 up to 4000)	Apply the Electrostatic Hazard Warning sticker	Apply the Electrostatic Hazard Warning sticker	Apply the Electrostatic Hazard Warning sticker

- 18. It is forbidden to use this equipment in a different way, if it is not included in the instruction manual. Emerson is not responsible for damages caused by an improper and/or dangerous use.

## 5.4 Maximum Temperatures

**⚠ WARNING**

The actuator’s surface temperature is dependent upon process operating conditions. Personal injury or property damage, caused by fire or explosion, can result if the actuator’s surface temperature exceeds the acceptable temperature for the hazardous area classification. To avoid an increase of instrumentation and/or accessory surface temperature due to process operating conditions, ensure adequate ventilation, shielding, or insulation of these actuator components installed in a potentially hazardous or explosive atmosphere.

**Table 3. Temperature Range for (Potential) Explosive Area**

Temperature			Valid for actuator model
Ambient range	Temperature class	TX (surface temperature)	
-20 to 75 °C / -4 to 167 °F	T6	T85 °C / 185 °F	S = Standard Temperature
-20 to 80 °C / -4 to 176 °F	T5	T90 °C / 194 °F	
-10 to 90 °C / 14 to 194 °F	T5	T100 °C / 212 °F	H = High Temperature
-10 to 120 °C / 14 to 250 °F	T4	T130 °C / 266 °F	
-40 to 75 °C / -40 to 167 °F	T6	T85 °C / 185 °F	L = Low Temperature
-40 to 80 °C / -40 to 176 °F	T5	T90 °C / 194 °F	







**Notes:**

1. The actual maximum surface temperature depends not on the equipment itself, but mainly on operating conditions like e.g., the temperature of the supply media.
2. The specified values are valid with condition: maximum cycle frequency of the actuator is 1 Hz at a maximum of 50 cycles per hour and at maximum load.

# Appendix A: EU Declaration of Conformity

	Legal representative entity for the European Union: Emerson S.R.L., Company No. J12/88/2006, Emerson 4 street, Parcul Industrial Tetarom II, Cluj-Napoca 400638, Romania Regulatory Compliance Shared Services Department Email: europeproductcompliance@emerson.com Phone: +40 374 132 035	ROC no 11020 Rev. 8 
We hereby declare, that the products specified below meet the basic health and safety requirements of the below mentioned European Directives.		
<p><b>Product Description:</b>                  Bettis™ RPE-Series - Pneumatic Actuator  <b>Actuator Type and Sizes:</b>                  • Identifier double-acting types: RPED                  • Identifier spring-return types: RPES                  • Sizes 25, 40, 65, 100, 150, 200, 350, 600, 950, 1600, 2500 or 4000  <b>Product Variations:</b>                  • Product variations of the above mentioned types are still covered by the listed directives and are CE marked.</p>	<p><b>Serial Number:</b>                  • Each actuator has an identifiable serial number.  <b>Manufacturer:</b>                  • Emerson Process Management                  Valve Automation (M) Sdn. Bhd.                  Lot 13112, Mukim Labu,                  Kawasan Perindustrian Nilai,                  71807 Nilai, Negeri Sembilan                  Malaysia</p>	
<p><b>EU Declaration of Conformity</b>                  Issued in accordance with the:</p>	<p><b>Declaration of Incorporation of Partly Completed Machinery</b>                  Issued in accordance with the:</p>	
<p><b>Pressure Equipment Directive (PED) 2014/68/EU</b>                  • For Gas Group 2 (see Safety Guide DOC.SG.BE.EN, Section 3.2.1, Operating Media), Bettis RPE-Series pneumatic actuators are excluded from the requirements of the Pressure Equipment Directive 2014/68/EU based on Article 1, Section 2(f) of the directive.                  • For Gas Group 1 pressure media, first consult engineering to check compatibility of pressure media with the actuator.                  • The below listed limited range of Bettis RPE-Series actuator sizes are rated "Sound-Engineering-Practice" or Module A (Internal production control) and are available on request for use with Gas Group 1 media.                  • Double-acting types: RPED 25, 40, 65, 100, 150, 200, 350, 600 or 950                  • Single acting types: RPES 25, 40, 65, 100, 150, 200, 350, 600 or 950</p>	<p><b>Machinery Directive 2006/42/EC, Appendix IIb</b>                  Essential requirements applied and complied with:                  • 1.1.2, 1.1.3, 1.1.5, 1.3.2, 1.3.4, 1.3.7, 1.5.2, 1.5.3, 1.5.4, 1.5.7, 1.6.1, 1.7.1, 1.7.3, 1.7.4.                  • Technical documentation is drafted in compliance with Appendix VII, Section B.                  • Before the actuator is put into operation, the machine into or onto which the actuator will be installed, must comply with the stipulations of the machinery directive.                  • The relevant information concerning the machine or part will be available in the event of a motivated request from national authorities.</p>	
<p><b>EU Declaration of Conformity</b>                  Issued in accordance with the:</p>	<p><b>Applicable Standards:</b>                  • EN IEC 60079-0:2018 EN ISO 80079-36:2016                  EN ISO 80079-37:2016 EN 1127-1:2019</p>	
<p><b>ATEX Directive 2014/34/EU</b>  <b>ATEX Marking:</b>                  •  II 2G Ex h IIC TX Gb                  •  II 2D Ex h IIIC TX Db                  • For maximum temperature limits and classifications, see Safety Guide: DOC.SG.BE.EN, Section 5, Safety Instructions for Use in (Potential) Explosive Atmosphere.</p>	<p>Signed:                   Name: Bharat Shirolikar                  Position: Director, Global Product Engineering                  Date: 2023-10-01                  Place: Houston TX, U.S.A.</p>	
VCCAQ-15650-EN		

# Appendix B: UK Declaration of Conformity

	Legal representative entity for the GB Market: Emerson Process Management Limited, Company No. 00671801, Meridian East, Leicester LE19 1UX, United Kingdom Regulatory Compliance Department Email: ukproductcompliance@emerson.com Phone: +44 11 6282 23 64	VCCAQ-16887-EN Rev. 1 
This declaration of conformity is issued under the sole responsibility of the manufacturer. The products specified below meet the basic health and safety requirements of the below mentioned UK legislations.		
<p><b>Product Description:</b></p> <ul style="list-style-type: none"> <li>• Bettis™ RPE-Series - Pneumatic Actuator</li> </ul> <p><b>Actuator Types and Sizes:</b></p> <ul style="list-style-type: none"> <li>• Identifier double-acting types: RPED</li> <li>• Identifier spring-return types: RPES</li> <li>• Sizes 25, 40, 65, 100, 150, 200, 350, 600, 950, 1600, 2500 or 4000</li> </ul> <p><b>Product Variations:</b></p> <ul style="list-style-type: none"> <li>• Product variations of the above mentioned types are still covered by the listed regulations and are UKCA marked.</li> </ul>	<p><b>Serial Number:</b></p> <ul style="list-style-type: none"> <li>• Each actuator has an identifiable serial number.</li> </ul> <p><b>Manufacturer:</b></p> <ul style="list-style-type: none"> <li>• Emerson Process Management Valve Automation (M) Sdn. Bhd. Lot 13112, Mukim Labu, Kawasan Perindustrian Nilai, 71807 Nilai, Negeri Sembilan Malaysia</li> </ul>	
<p><b>UK Declaration of Conformity</b>                  Issued in accordance with the:</p>	<p><b>Declaration of Incorporation of Partly Completed Machinery</b>                  Issued in accordance with the:</p>	
<p><b>UK Regulation 2016 – UK SI 2016 No. 1105</b></p> <ul style="list-style-type: none"> <li>• For Gas Group 2, (see Safety Guide DOC.SG.BE.EN, Section 3.2.1, Operating Media). Bettis RPE-Series pneumatic actuators are excluded from the requirements of the Pressure Equipment (Safety) Regulations 2016, UK Statutory Instrument 2016 No. 1105, as amended by the Product Safety and Metrology etc. (Amendment etc.) (EU Exit) Regulations 2019, UK Statutory Instrument 2019 No. 696 based on SCHEDULE 1, Paragraph 1(f) of the regulation.</li> <li>• For Gas Group 1 pressure media, first consult engineering to check compatibility of pressure media with the actuator.</li> <li>• The below listed limited range of Bettis RPE-Series actuator sizes are rated “Sound-Engineering-Practice” or Module A (Internal production control) and are available on request for use with Gas Group 1 media.                         <ul style="list-style-type: none"> <li>• Double-acting types: RPED 25, 40, 65, 100, 150, 200, 350, 600 or 950</li> <li>• Single acting types: RPES 25, 40, 65, 100, 150, 200, 350, 600 or 950</li> </ul> </li> </ul>	<p><b>UK Regulation 2008 – UK SI 2008 No. 1597 SCHEDULE 2, Annex II(B)</b></p> <p>Essential requirements applied and complied with:</p> <ul style="list-style-type: none"> <li>• 1.1.2, 1.1.3, 1.1.5, 1.3.2, 1.3.4, 1.3.7, 1.5.2, 1.5.3, 1.5.4, 1.5.7, 1.6.1, 1.7.1, 1.7.3, 1.7.4.</li> <li>• Technical documentation is drafted in compliance with Annex VII, Section B of the Regulation.</li> <li>• Before the actuator is put into operation, the machine into or onto which the actuator will be installed, must comply with the stipulations of the machinery regulation.</li> <li>• The relevant information concerning the machine or part will be available in the event of a motivated request from national authorities.</li> </ul> <p><b>Applicable Standards:</b></p> <ul style="list-style-type: none"> <li>• BS EN ISO 12100:2010</li> </ul>	
<p><b>UK Declaration of Conformity</b>                  Issued in accordance with the:</p>		
<p><b>UK Regulation 2016 – UK SI 2016 No. 1107 Marking of the Product:</b></p> <ul style="list-style-type: none"> <li>•  II 2G Ex h IIC TX Gb</li> <li>•  II 2D Ex h IIIC TX Db</li> </ul> <p>• For maximum temperature limits and classifications see Safety Guide: DOC.SG.BE.EN, Section 5, Safety Instructions for Use in (Potential) Explosive Atmosphere.</p> <p><b>Applicable Standards:</b></p> <ul style="list-style-type: none"> <li>• BS EN IEC 60079-0:2018    BS EN ISO 80079-36:2016</li> <li>• BS EN ISO 80079-37:2016    BS EN 1127-1:2019</li> </ul>	<p style="text-align: right;">Signed: </p> <p>Name: Bharat Shirolikar                  Position: Director, Global Product Engineering                  Date: 2023-11-01                  Place: Houston TX, U.S.A.</p> <div style="text-align: right;">  </div>	

*This page intentionally left blank.*

[www.emerson.com/bettis](http://www.emerson.com/bettis)

VCSGD-13978-EN © 2024 Emerson. All rights reserved.

The Emerson logo is a trademark and service mark of Emerson Electric Co. Bettis™ is a mark of one of the Emerson family of companies. All other marks are property of their respective owners.

The contents of this publication are presented for informational purposes only, and while every effort has been made to ensure their accuracy, they are not to be construed as warranties or guarantees, express or implied, regarding the products or services described herein or their use or applicability. All sales are governed by our terms and conditions, which are available upon request. We reserve the right to modify or improve the designs or specifications of such products at any time without notice.

**BETTIS™**

