

Rosemount™ 5400 Series

Superior Performance Two-Wire
Non-Contacting Radar Level Transmitter



1.0 About this guide

This Quick Start Guide provides basic guidelines for installation and configuration of Rosemount 5400 Series Transmitters. Refer to the Rosemount 5400 Series [Reference Manual](#) for more instructions. Manuals are available electronically on EmersonProcess\Rosemount.com.

⚠ WARNING

Failure to follow safe installation and service guidelines could result in death or serious injury.

- Make sure the transmitter is installed by qualified personnel and in accordance with applicable code of practice.
- Use the equipment only as specified in this Quick Start Guide and the Reference Manual. Failure to do so may impair the protection provided by the equipment.
- Do not perform any services other than those contained in this manual unless you are qualified.
- Any substitution of non-authorized parts or repair, other than exchanging the complete transmitter head or antenna assembly, may jeopardize safety and is prohibited.

Explosions could result in death or serious injury.

- Verify that the operating environment of the transmitter is consistent with the appropriate hazardous locations specifications. See “[Product Certifications](#)” on page 21.
- To prevent ignition of flammable or combustible atmospheres, disconnect power before servicing.
- Before connecting a HART®, FOUNDATION™ Fieldbus, or Modbus® based communicator in an explosive atmosphere, make sure the instruments in the loop are installed in accordance with intrinsically safe or non-incendive field wiring practices.
- To avoid process leaks, only use O-rings designed to seal with the corresponding flange adapter.

Electrical shock can result in death or serious injury.

- Avoid contact with the leads and terminals. High voltage that may be present on leads can cause electrical shock.
- Make sure the main power to the Rosemount 5400 Series Transmitter is off and the lines to any other external power source are disconnected or not powered while wiring the transmitter.
- Ground device on non-metallic tanks (e.g. fiberglass tanks) to prevent electrostatic charge build-up.

Antennas with non-conducting surfaces.

Antennas with non-conducting surfaces (e.g. Rod antenna and Process Seal antenna) may generate an ignition-capable level of electrostatic charge under certain extreme conditions. Therefore, when the antenna is used in a potentially explosive atmosphere, appropriate measures must be taken to prevent electrostatic discharge.

Contents

Confirm system readiness (4-20 mA only)	page 3
Mount the transmitter head/antenna	page 4
Connect the wiring	page 11
Configure	page 19
Safety Instrumented Systems (4-20 mA only)	page 21
Product Certifications	page 21

2.0 Confirm system readiness (4-20 mA only)

2.1 Confirm HART revision capability

This transmitter can be configured for either HART Revision 5 or 7. If using HART-based control and asset management systems, confirm the HART capability of those systems prior to transmitter installation. Not all systems are capable of communicating with the HART Revision 7 protocol.

2.2 Confirm correct Device Driver

- Verify the latest Device Driver (DD/DTM™) is loaded on your systems to ensure proper communication. See Table 1.
- Download the latest Device Driver from www.rosemount.com/LevelSoftware

Table 1. Rosemount 5400 Device Revisions and Files

Firmware version ⁽¹⁾	Find Device Driver	
	HART universal revision	Device revision ⁽²⁾
2A0 and later	7	3
	5	2
1C0 - 1D0	5	2

1. Firmware version is printed on the transmitter head label, e.g. SW 2C.0.

2. Device revision is printed on the transmitter head label, e.g. HART Dev Rev 3.

2.3 Switch HART revision mode

If the HART configuration tool is not capable of communicating with HART Revision 7, the device will load a generic menu with limited capability.

To switch the HART revision mode from the generic menu:


- Go to **Manual Setup > Device Information > Identification > Message**.
- In the *Message* field, enter "HART5" or "HART7".

3.0 Mount the transmitter head/antenna


3.1 Cone antenna with flange

Step 1: Lower transmitter with antenna and flange into the nozzle

Tighten bolts and nuts with sufficient torque for the flange and gasket choice.

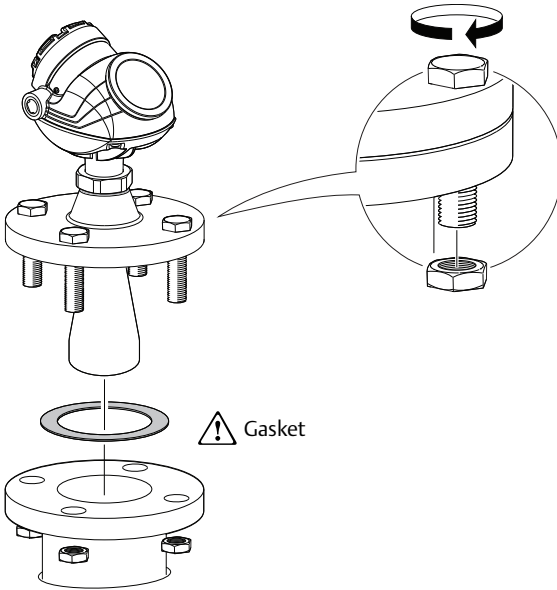


Step 2: Adjust display orientation (optional)

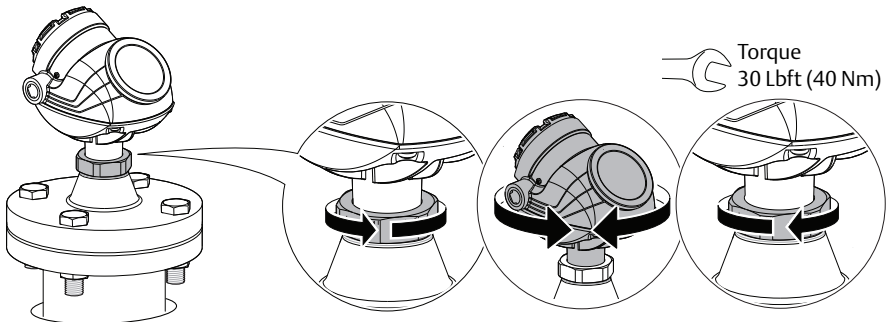


3.2 Process seal antenna with flange⁽¹⁾

Step 1: Place antenna on top of the nozzle and mount flange

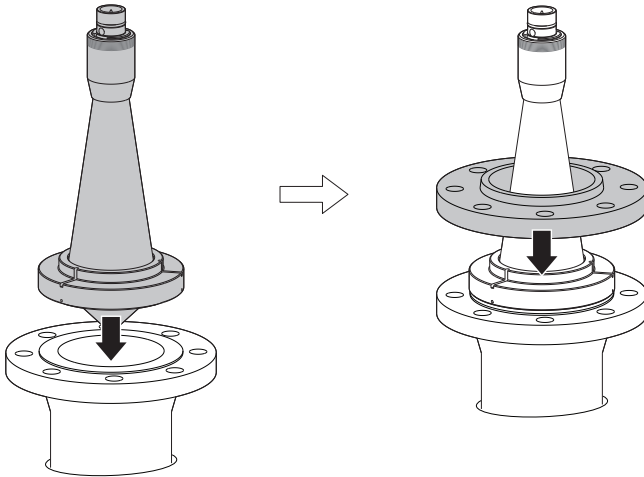

Step 2: Tighten bolts cross-wise


For torque information, see table.

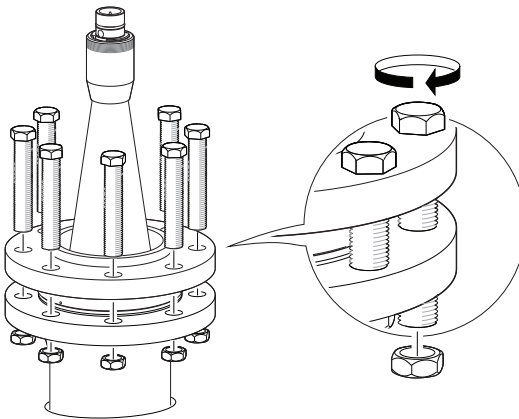

Process seal flange	Torque	
	(Nm)	(Lbft)
2 in., 150 lb.	40	30
2 in., 300 lb.	40	30
3 in., 150 lb.	60	44
3 in., 300 lb.	60	44
4 in., 150 lb.	50	37
4 in., 300 lb.	50	37
DN 50 PN 40	40	30
DN 80 PN 40	60	44
DN 100 PN 16	50	37
DN 100 PN 40	50	37
50A 10K	40	30
80A 10K	60	44
100A 10K	50	37
150A 10K	50	37

1. The mounting information applies to the updated Process Seal antenna design, released in February 2012. Antennas manufactured before this date have wetted O-rings and require a different installation procedure.

Step 3: Mount transmitter head and tighten nut

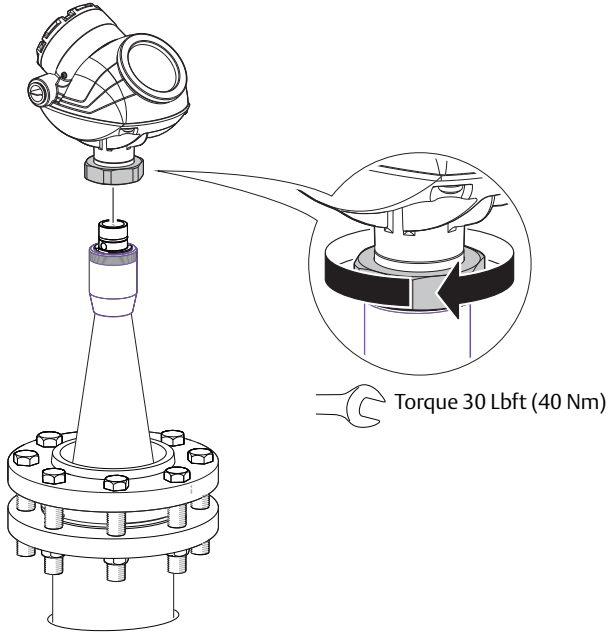


Step 4: Re-tighten flange bolts after 24 hours


3.3 Rod antenna with threaded connection

Step 1: Lower transmitter with antenna into the tank


Tank connections with NPT threads require a sealant for pressure-tight joints.

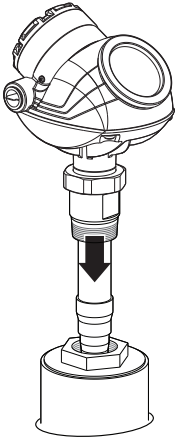

Step 2: Turn tank seal adapter until properly secured in the process connection

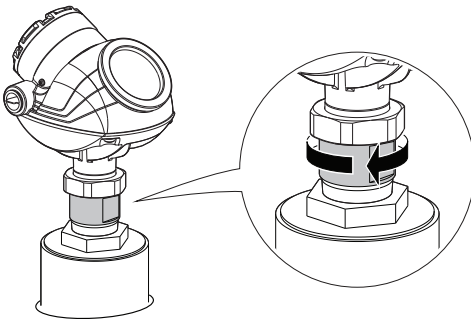


Step 3: Adjust display orientation (optional)

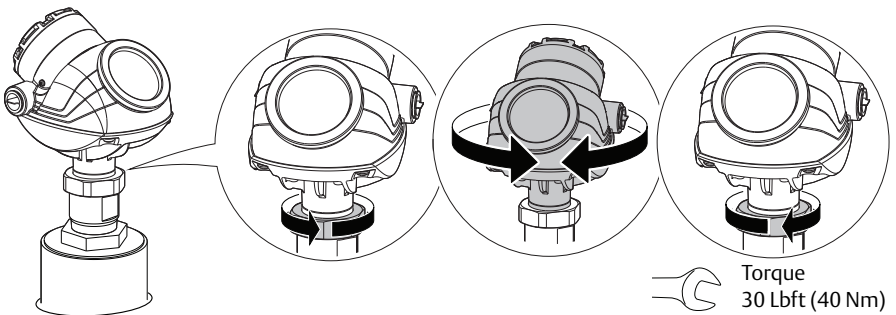


3.4 Rod antenna with flange


Step 1: Lower transmitter with antenna and flange into the tank nozzle

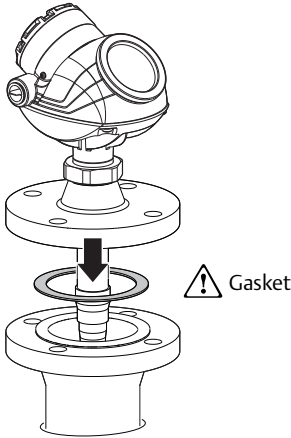

Step 2: Tighten bolts and nuts with sufficient torque for the flange and gasket choice

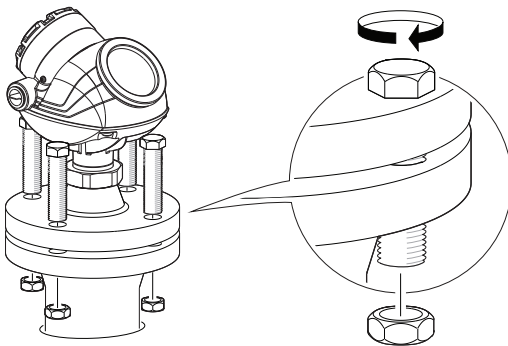


Step 3: Adjust display orientation (optional)

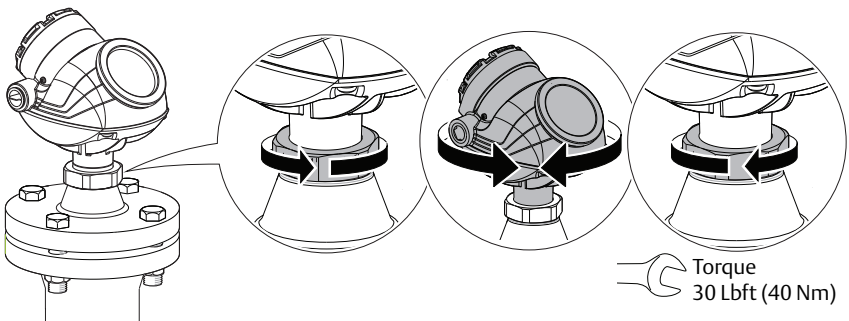


3.5 Tri Clamp tank connection


Step 1: Lower transmitter with antenna into the tank

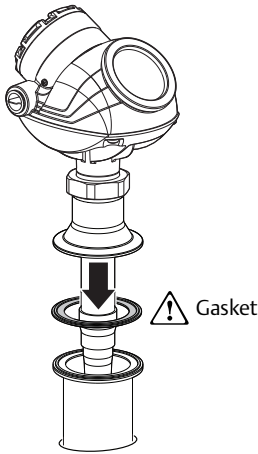

Step 2: Fasten Tri Clamp to the tank with a clamp

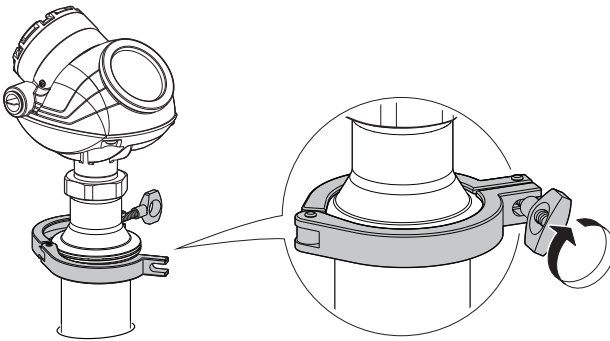

Step 3: Adjust display orientation (optional)

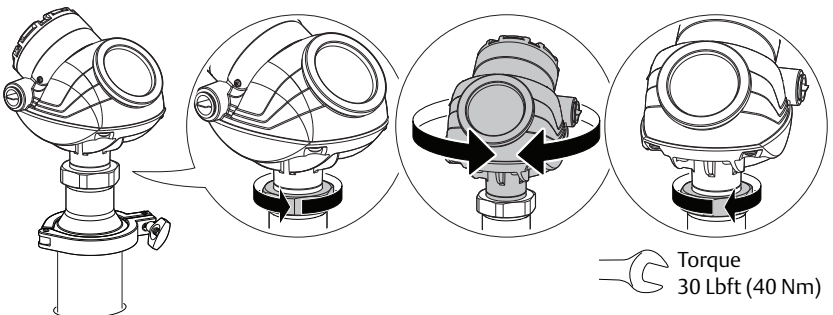


3.6 Bracket mounting

Step 1: Mount bracket to the pipe/wall


On pipe

Horizontal pipe

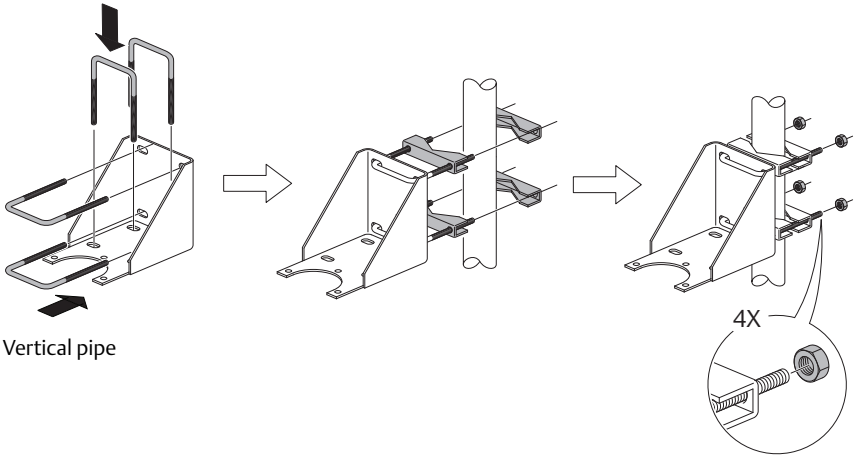


On wall

Use screws suitable for the purpose.

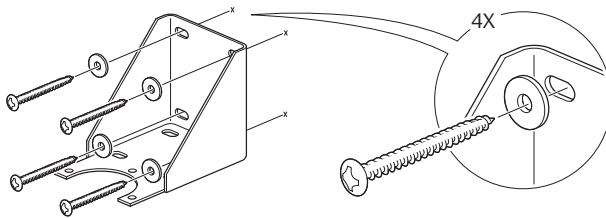

Step 2: Mount transmitter with antenna to the bracket

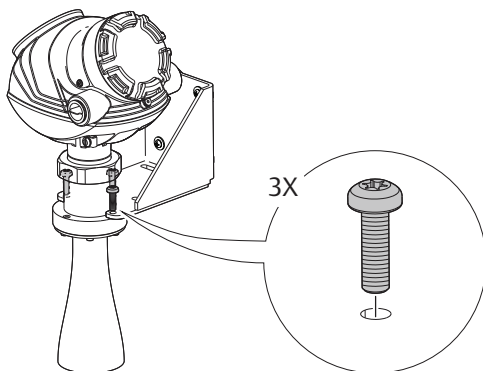

4.0 Connect the wiring

4.1 Cable selection

Use shielded twisted pair wiring (18-12 AWG).

For the RS-485 bus, use shielded twisted pair wiring, preferably with an impedance of 120 Ω (typically 24 AWG).

4.2 Cable gland/conduit

For explosion-proof/ flameproof installations, only use cable glands or conduit entry devices certified explosion-proof or flameproof.


4.3 Power supply (Vdc)

Approval type	HART	FOUNDATION Fieldbus	RS-485 with Modbus
None	16 - 42.4	9 - 32	8-30 (max. rating)
Non-sparking/Energy limited	16 - 42.4	9 - 32	N/A
Intrinsically safe	16 - 30	9 - 30	N/A
FISCO	N/A	9 - 17.5	N/A
Explosion-proof/Flameproof	20 - 42.4	16 - 32	8-30 (max. rating)


4.4 Procedure

Step 1: Verify the power supply is disconnected


Step 2: Remove the cover

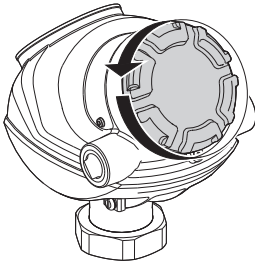


Step 3: Remove the plastic plugs

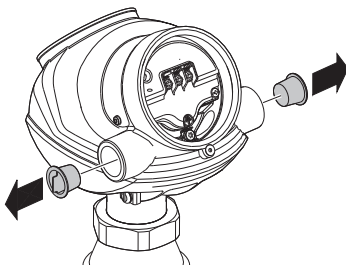

Step 4: Pull the cable through cable gland/conduit

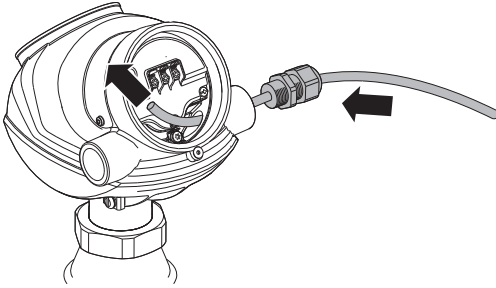

Adapters are required if M20 glands are used.



Step 5: Connect the cable wires

See the wiring diagrams on [page 15](#) to [18](#).

Step 6: Ensure proper grounding


Make sure grounding is done (including IS ground inside Terminal compartment) according to Hazardous Locations Certifications, national and local electrical codes.

Transmitter housing grounding

The most effective transmitter housing grounding method is a direct connection to earth ground with minimal ($< 1 \Omega$) impedance.

There are two grounding screw connections provided (see [Figure 1](#)).

Figure 1. Ground Screws

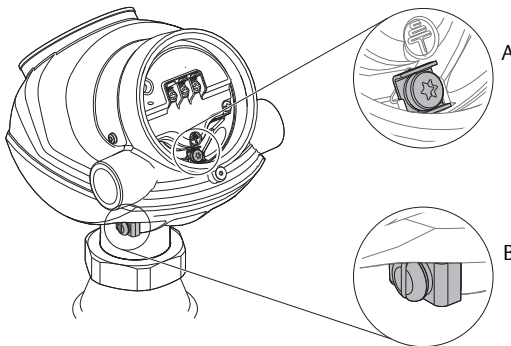


- A. Internal ground screw
- B. External ground screw

Signal cable shield grounding

Make sure the instrument cable shield is:

- trimmed close and insulated from touching the transmitter housing.
- continuously connected throughout the segment.
- connected to a good earth ground at the power supply end.


Figure 2. Cable Shield

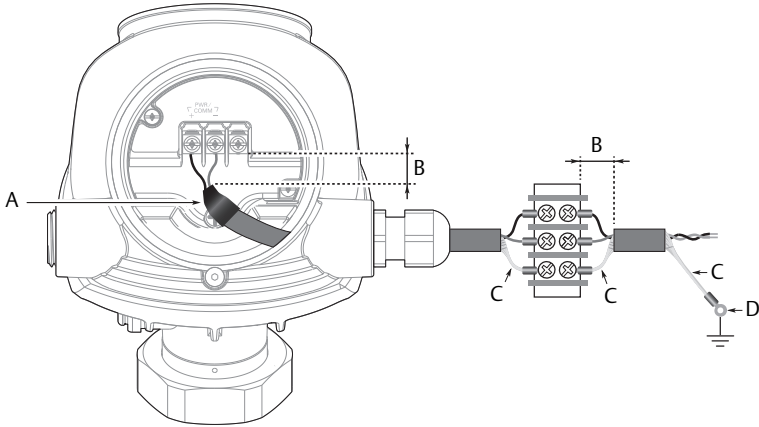

- A. Insulate shield
- B. Minimize distance
- C. Trim shield and insulate
- D. Connect shield back to the power supply ground


Step 7: Seal any unused port with enclosed metal plug

Apply PTFE tape or other sealant to the threads.

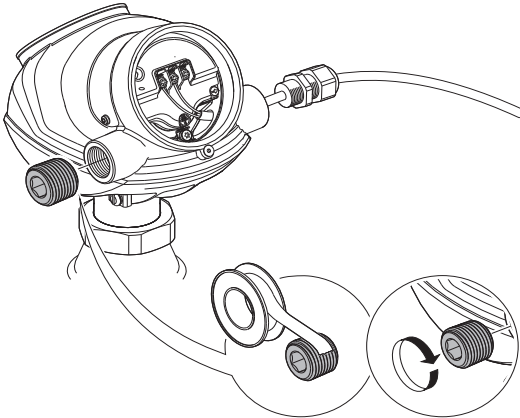


Step 8: Tighten cable glands

Apply PTFE tape or other sealant to the threads.

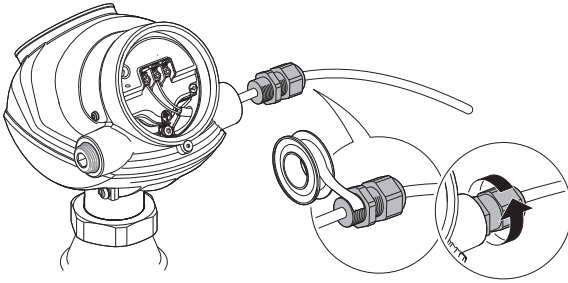


Note

Make sure to arrange the wiring with a drip loop.

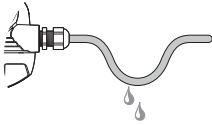


Step 9: Mount the cover

Make sure it is fully engaged to meet Explosion-proof requirements.

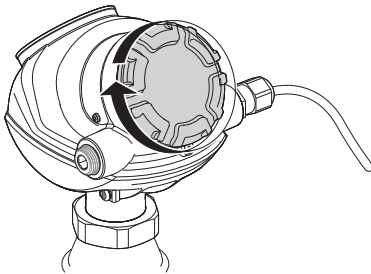

Step 10: Lock the cover with the locking screw


Required for ATEX, IECEx, NEPSI, INMETRO, and TIIS installations only.

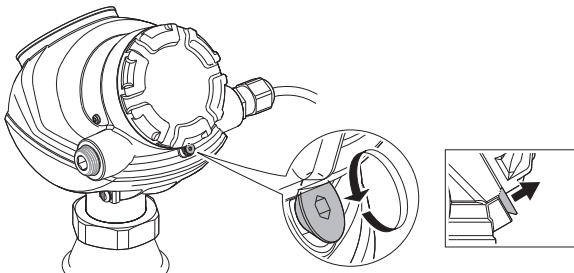

Step 11: Connect the power supply

4.5 HART communication

Figure 3. Wiring Diagram

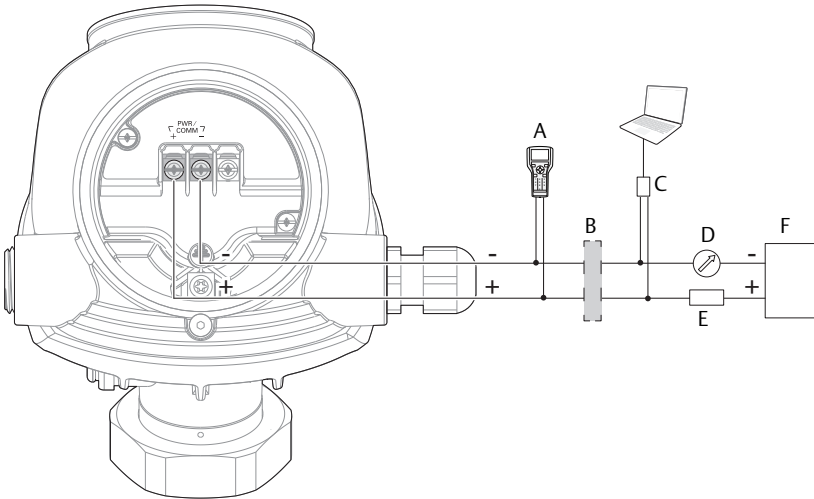

- A. Field Communicator
- B. Approved IS barrier (for Intrinsically Safe installations only)
- C. HART modem
- D. Current meter
- E. Load resistance ($\geq 250 \Omega$)
- F. Power supply

Note


Rosemount 5400 Series Transmitters with Flameproof/Explosion-proof output have a built-in barrier; no external barrier needed.

Load limitations


For HART communication, a minimum load resistance of 250 Ω is required. For maximum load resistance, see Figure 4.

Figure 4. Maximum Loop Resistance


Intrinsically safe installations

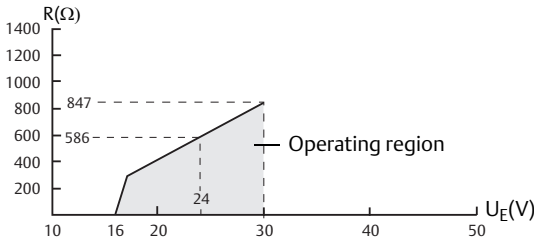

Non-hazardous and Non-sparking/energy limited installations

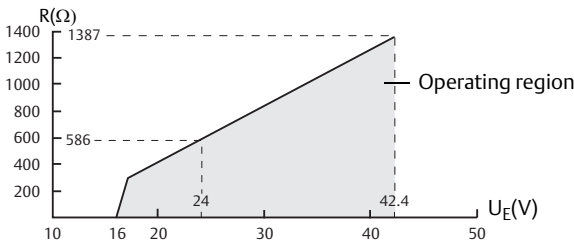

Explosion-proof/flameproof (Ex d) installations

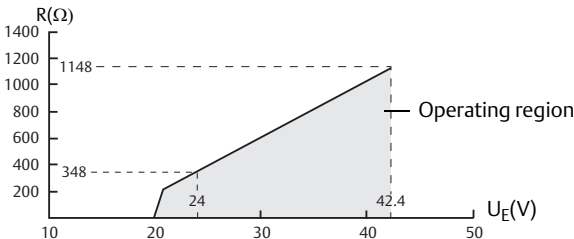


$R(\Omega)$: Maximum Load Resistance
 $U_E(V)$: External Power Supply Voltage

Note

For the Ex d case, the diagram is only valid if the HART load resistance is at the + side and if the - side is grounded, otherwise the load resistance value is limited to 435 Ω.

4.6 FOUNDATION Fieldbus

Figure 5. Wiring Diagram

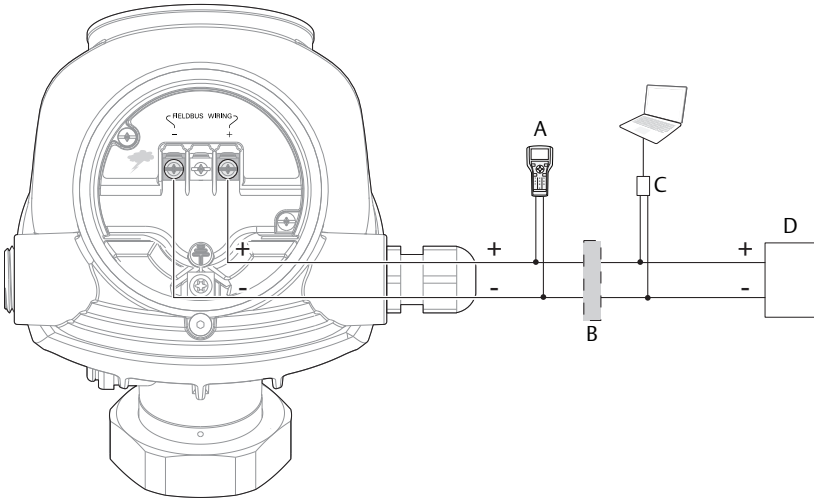

- A. Field Communicator
- B. Approved IS barrier (for Intrinsically Safe installations only)
- C. FOUNDATION Fieldbus modem
- D. Power supply

Note

Rosemount 5400 Series Transmitters with Flameproof/Explosion-proof output have a built-in barrier; no external barrier needed.

4.7 RS-485 with Modbus communication power supply


See the Rosemount 5300/5400 Series with HART to Modbus Converter Manual supplement (document number 00809-0500-4530) for details.

Power consumption

< 0.5 W (with HART address = 1)

< 1.2 W (including four HART slaves)

Figure 6. Wiring Diagram

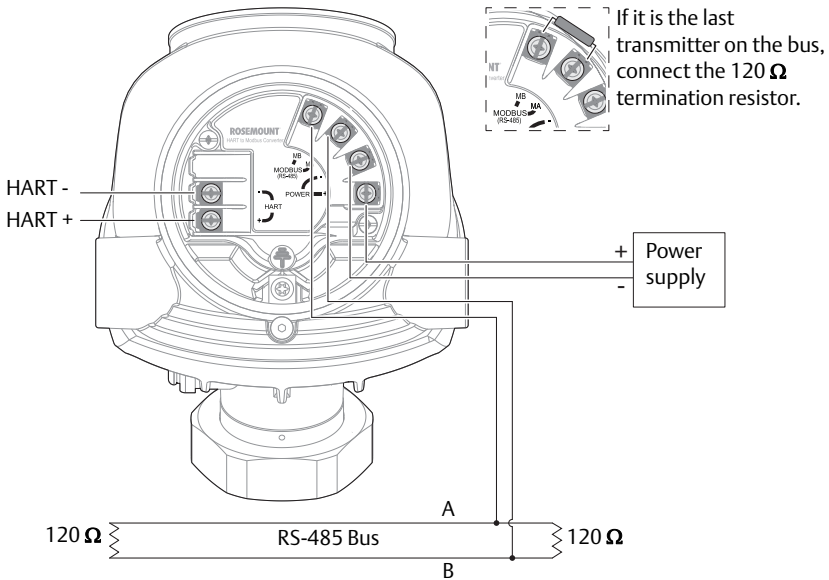

Note


Rosemount 5400 Series Transmitters with Flameproof/Explosion-proof output have a built-in barrier; no external barrier needed.

5.0 Configure

Basic configuration can easily be done either with Rosemount Radar Master, a Field Communicator, the AMS™ Suite, DeltaV™, DTM, or any other DD (Device Description) or DTM compatible host system. For advanced configuration features, Rosemount Radar Master (RRM) is recommended.

5.1 RRM

1. Start RRM.
2. Connect to the desired transmitter.
3. In the *Guided Setup* window, select **Run Wizard for guided setup** and follow the instructions.

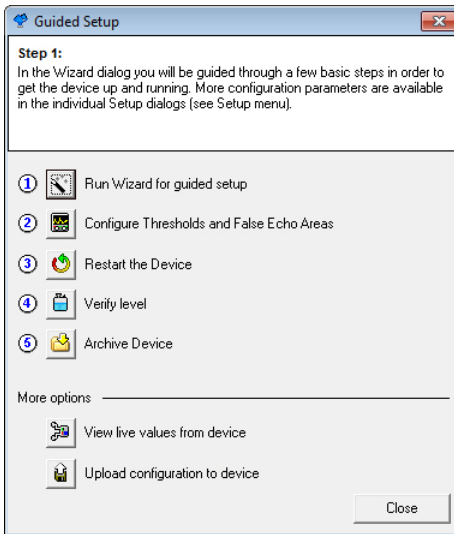

4. Select **Configure Thresholds and False Echo Areas**.
5. Select **Restart the Device**.
6. Select **Verify level**.
7. Select **Archive Device**.
8. Select **View live values from device** to verify the transmitter works correctly.

5.2 AMS Device Manager or Field Communicator

Step 1: Connect to device

AMS Device Manager

1. Start AMS Device Manager.
2. Select **View > Device Connection View**.
3. In the *Device Connection View*, double-click the modem icon.
4. Double-click the device icon.

Field Communicator

1. Turn on the Field Communicator.
2. From the *Main menu*, tap the HART or Fieldbus symbol.
The Field Communicator now connects to the device.

Step 2: Configure device

HART Device Revision 2

1. Select **Configure/Setup > Basic Setup**.
2. Configure steps 1-5 in the Basic Setup.
(Variable Mapping, Geometry, Environment, Volume and Analog Out)
3. Select **Finish**.
4. Run **Measure and Learn**.
5. Select **Restart Device**.

HART Device Revision 3

1. Select **Configure > Guided Setup**.
2. Select **Level Measurement Setup** and follow the instructions.
3. Run **Verify Level** to check your level measurement.
4. Consider optional setup, such as **Volume** and **Display**.

FOUNDATION Fieldbus

1. Select **Configure > Guided Setup**.
2. Select **Level Measurement Setup** and follow the instructions.
3. Optional: Select **Volume Calculation Setup**.
4. Run **Measure and Learn**.
5. Select **Restart Measurement**.

Table 2. FOUNDATION Fieldbus Parameters

Function	FOUNDATION Fieldbus parameters
Tank Type	TRANSDUCER_1100>GEOM_TANK_TYPE
Tank Bottom Type	TRANSDUCER_1100>GEOM_TANK_BOTTOM_TYPE
Tank Height	TRANSDUCER_1100>GEOM_TANK_HEIGHT
Still-pipe/Bridle Measurement (enable function)	TRANSDUCER_1100>SIGNAL_PROC_CONFIG
Pipe Inner Diameter	TRANSDUCER_1100>ANTENNA_PIPE_DIAM
Process Condition	TRANSDUCER_1100>ENV_ENVIRONMENT
Product Dielectric Constant	TRANSDUCER_1100>ENV_DIELECTR_CONST
Volume Calculation Method	TRANSDUCER_1300>VOLUME_CALC_METHOD
Diameter	TRANSDUCER_1300>VOL_IDEAL_DIAMETER
Length	TRANSDUCER_1300>VOL_IDEAL_LENGTH
Volume Offset	TRANSDUCER_1300>VOL_VOLUME_OFFSET

6.0 Safety Instrumented Systems (4-20 mA only)

For Safety Certified installations, refer to the Rosemount 5400 Series [Reference Manual](#).

7.0 Product Certifications

Rev 3.0

7.1 European Directive Information

A copy of the EU Declaration of Conformity can be found at the end of the Quick Start Guide. The most recent revision of the EU Declaration of Conformity can be found at EmersonProcess.com/Rosemount.

7.2 Ordinary Location Certification

As standard, the transmitter has been examined and tested to determine that the design meets the basic electrical, mechanical, and fire protection requirements by a nationally recognized test laboratory (NRTL) as accredited by the Federal Occupational Safety and Health Administration (OSHA).

7.3 Telecommunication compliance

FCC

This device complies with Part 15C of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Certificate: K8C5401 for Model 5401
K8C5402 for Model 5402

IC

This device complies with RSS210-5.

This device complies with Industry-Canada license-exempt RSS standard. Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Certificate: 2827A-5401
2827A-5402

R&TTE

This device complies with ETSI EN 302 372 and EN 62479. EU directive 99/5/EC.

7.4 Installing Equipment in North America

The US National Electrical Code (NEC®) and the Canadian Electrical Code (CEC) permit the use of Division marked equipment in Zones and Zone marked equipment in Divisions. The markings must be suitable for the area classification, gas, and temperature class. This information is clearly defined in the respective codes.

7.5 USA

E5 Explosionproof (XP), Dust-Ignitionproof (DIP)

Certificate: FM 3020497

Standards: FM Class 3600 – 2011; FM Class 3610 – 2010; FM Class 3611 – 2004; FM Class 3615 – 2006; FM Class 3810 – 2005; ANSI/ISA 60079-0 – 2013; ANSI/ISA 60079-11 – 2012; ANSI/NEMA 250 – 2003

Markings: XP CL I, DIV 1, GP B, C, D; DIP CLII/III, DIV 1, GP E, F, G; T4 Ta=60°C and 70°C; Type 4X

Special Conditions for Safe Use (X):

1. Potential Electrostatic Charging Hazard – The enclosure contains non-metallic material. To prevent the risk for electrostatic sparking the plastic surface should only be cleaned with a damp cloth.
2. WARNING – The apparatus enclosure contains aluminum and is considered to constitute a potential risk of ignition by impact or friction. Care must be taken into account during installation and use to prevent impact or friction.

I5 Intrinsic Safety (IS), Nonincendive (NI)

Certificate: FM 3020497

Standards: FM Class 3600 – 2011; FM Class 3610 – 2010; FM Class 3611 – 2004; FM Class 3615 – 2006; FM Class 3810 – 2005; ANSI/ISA 60079-0 – 2013; ANSI/ISA 60079-11 – 2012; ANSI/NEMA 250 – 2003;

Markings: IS CL I, II, III, DIV 1, GP A, B, C, D, E, F, G in accordance with control drawing 9150079-905; IS (Entity) CL I, Zone 0, AEx ia IIC T4 in accordance with control drawing 9150079-905, NI CL I, II, DIV 2, GP A, B, C, D, F, G; Suitable for use in CL III DIV 2, indoor and outdoor, T4 Ta=60 °C and 70°C; Type 4X

Special Conditions for Safe Use (X):

1. Potential Electrostatic Charging Hazard - The enclosure contains non-metallic material. To prevent the risk for electrostatic sparking the plastic surface should only be cleaned with a damp cloth.
2. WARNING - The apparatus enclosure contains aluminum and is considered to constitute a potential risk of ignition by impact or friction. Care must be taken into account during installation and use to prevent impact or friction.

	Ui	li	Pi	Ci	Li
Entity parameters HART	30 V	130 mA	1 W	7.26 nF	0
Entity parameters Fieldbus	30 V	300 mA	1.3 W	0	0

IE FISCO

Certificate: FM 302049

Standards: FM Class 3600 – 2011; FM Class 3610 – 2010; FM Class 3611 – 2004; FM Class 3615 – 2006; FM Class 3810 – 2005; ANSI/ISA 60079-0 – 2013; ANSI/ISA 60079-11 – 2012; ANSI/NEMA 250 – 2003;

Markings: IS CL I, II, III, DIV 1, GP A, B, C, D, E, F, G in accordance with control drawing 9150079-905; IS (Entity) CL I, Zone 0, AEx ia IIC T4 in accordance with control drawing 9150079-905, NI CL I, II, DIV 2, GP A, B, C, D, F, G; Suitable for use in CL III DIV 2, indoor and outdoor, T4 Ta=60 °C and 70°C; Type 4X

Special Conditions for Safe Use (X):

1. Potential Electrostatic Charging Hazard – The enclosure contains non-metallic material. To prevent the risk for electrostatic sparking the plastic surface should only be cleaned with a damp cloth.

2. **WARNING** – The apparatus enclosure contains aluminum and is considered to constitute a potential risk of ignition by impact or friction. Care must be taken into account during installation and use to prevent impact or friction.

	Ui	Ii	Pi	Ci	Li
FISCO parameters	17.5 V	380 mA	5.32 W	0	0

7.6 Canada

E6 Explosionproof, Dust-Ignitionproof

Certificate: 1514653

Standards: CSA C22.2 No.0-M91, CSA C22.2 No.25-1966, CSA C22.2 No.30-M1986, CSA C22.2 No.94-M91, CSA C22.2 No.142-M1987, CSA C22.2 157-92, CAN/CSA C22.2 No. 60529:05, ANSI/ISA 12.27.01-2003

Markings: Explosionproof CL I, DIV 1, GP B, C, D; Dust-Ignitionproof CL II, DIV 1 and 2, GP E, F, G and coal dust, CL III, DIV 1, Type 4X/IP66/IP67

I6 Intrinsically Safe and Non-Incendive Systems

Certificate: 1514653

Standards: CSA C22.2 No.0-M91, CSA C22.2 No.25-1966, CSA C22.2 No.30-M1986, CSA C22.2 No.94-M91, CSA C22.2 No.142-M1987, CSA C22.2 157-92, CAN/CSA C22.2 No. 60529:05, ANSI/ISA 12.27.01-2003

Markings: CL I, DIV 1, GP A, B, C, D, T4 see installation drawing 9150079-906; Non-Incendive Class III, DIV 1, Haz-loc CL I DIV 2, GP A, B, C, D, Maximum Ambient Temperature +60°C for Fieldbus and FISCO and +70 °C for HART, T4, Type 4X/IP66/IP67, Maximum Working Pressure 5000 psi, Dual Seal.

	Ui	Ii	Pi	Ci	Li
Entity parameters HART	30 V	130 mA	1 W	7.26 nF	0
Entity parameters Fieldbus	30 V	300 mA	1.3 W	0	0

IF FISCO

Certificate: 1514653

Standards: CSA C22.2 No.0-M91, CSA C22.2 No.25-1966, CSA C22.2 No.30-M1986, CSA C22.2 No.94-M91, CSA C22.2 No.142-M1987, CSA C22.2 157-92, CAN/CSA C22.2 No. 60529:05, ANSI/ISA 12.27.01-2003

Markings: CL I, DIV 1, GP A, B, C, D, T4 see installation drawing 9150079-906; Non-Incendive Class III, DIV 1, Haz-loc CL I DIV 2, GP A, B, C, D, Maximum Ambient Temperature +60°C for Fieldbus and FISCO and +70 °C for HART, T4, Type 4X/IP66/IP67, Maximum Working Pressure 5000 psi, Dual Seal.


	Ui	Ii	Pi	Ci	Li
FISCO parameters	17.5 V	380 mA	5.32 W	0	0

7.7 Europe

E1 ATEX Flameproof

Certificate: Nemko 04ATEX1073X

Standards: EN 60079-0:2012, EN 60079-1:2014, EN 60079-11:2012, EN 60079-26:2015, EN 60079-31:2014

Markings:  II 1/2 G Ex db ia IIC T4 Ga/Gb, (-40°C ≤ Ta ≤ +60°C / +70°C)
II 1 D Ex ta IIIC T69°C/T79°C Da, (-40°C ≤ Ta ≤ +60°C / +70°C)
Um = 250 V


Special Conditions for Safe Use (X):

1. The intrinsically safe circuits do not withstand the 500V AB test as specified in EN 60079-11:2012 clause 6.4.13.
2. Potential ignition hazards by impact or friction need to be considered according to EN 60079-0:2012 clause 8.3 (for EPL Ga and EPG Gb), when the transmitter enclosure and antennas exposed to the exterior atmosphere of the tank, is made with light metals containing aluminium or titanium.
The end user shall determine the suitability with regard to avoid hazards from impact and friction.
3. The antennas for type 5400 are non-conducting and the area of the non-conducting part exceeds the maximum permissible areas for Group IIC, according to EN 60079-0:2012 clause 7.4: 20 cm² for EPL Gb and 4 cm² for EPL Ga. Therefore, when the antenna is used in a potentially explosive atmosphere, appropriate measures must be taken to prevent electrostatic discharge.
4. Parts of the rod-antennas, for type 5400 are non-conducting material covering metal surfaces. The area of the non-conducting part exceeds the maximum permissible areas for Group III according to EN 60079-0 .2012 clause 7.4:3 Therefore, when the antenna is used in a potentially explosive atmosphere group III, EPL Da, appropriate measures must be taken to prevent electrostatic discharge.
5. The Ex ia version of model 5400 may be supplied by an “Ex ib” certified safety barrier. The whole circuit shall then be regarded type “Ex ib”. The preferred type “ia” or “ib” shall be indicated on the marking label as specified in the instructions for the transmitter. The antenna part, located in the process vessel, is classified EPL Ga and electrically separated from the “Ex ia” or “ib” circuit.
6. 1/2” NPT threads need to be sealed for dust and water ingress protection, IP 66, IP 67 or “Ex t”, EPL Da or Db is required.

II ATEX Intrinsic Safety

Certificate: Nemko 04ATEX1073X

Standards: EN 60079-0:2012, EN 60079-1:2014, EN 60079-11:2012,
EN 60079-26:2015, EN 60079-31:2014

Markings:  II 1G Ex ia IIC T4 Ga (-50°C ≤ Ta ≤ +60°C /+70°C)
II 1/2G Ex ib IIC T4 Ga/Gb (-50°C ≤ Ta ≤ +60°C /+70°C)
II 1D Ex ia IIIC T69°C/T79°C Da, (-50°C ≤ Ta ≤ +60°C /+70°C)
II 1D Ex ib IIIC T69°C/T79°C Da/Db, (-50°C ≤ Ta ≤ +60°C /+70°C)

Special Conditions for Safe Use (X):

1. The intrinsically safe circuits do not withstand the 500V AB test as specified in EN 60079-11:2012 clause 6.4.13.
2. Potential ignition hazards by impact or friction need to be considered according to EN 60079-0:2012 clause 8.3 (for EPL Ga and EPG Gb), when the transmitter enclosure and antennas exposed to the exterior atmosphere of the tank, is made with light metals containing aluminium or titanium.
The end user shall determine the suitability with regard to avoid hazards from impact and friction.
3. The antennas for type 5400 are non-conducting and the area of the non-conducting part exceeds the maximum permissible areas for Group IIC, according to EN 60079-0:2012 clause 7.4: 20 cm² for EPL Gb and 4 cm² for EPL Ga. Therefore, when the antenna is used in a potentially explosive atmosphere, appropriate measures must be taken to prevent electrostatic discharge.


4. Parts of the rod-antennas, for type 5400 are non-conducting material covering metal surfaces. The area of the non-conducting part exceeds the maximum permissible areas for Group III according to EN 60079-0 .2012 clause 7.4:3 Therefore, when the antenna is used in a potentially explosive atmosphere group III, EPL Da, appropriate measures must be taken to prevent electrostatic discharge.
5. The Ex ia version of model 5400 may be supplied by an “Ex ib” certified safety barrier. The whole circuit shall then be regarded type “Ex ib”. The preferred type “ia” or “ib” shall be indicated on the marking label as specified in the instructions for the transmitter. The antenna part, located in the process vessel, is classified EPL Ga and electrically separated from the “Ex ia” or “ib” circuit.
6. 1/2” NPT threads need to e sealed for dust and water ingress protection, IP 66, IP 67 or “Ex t”, EPL Da or Db is required.

	Ui	Ii	Pi	Ci	Li
Entity parameters HART	30 V	130 mA	1 W	7.26 nF	0
Entity parameters Fieldbus	30 V	300 mA	1.5 W	4.95 nF	0

IA ATEX FISCO

Certificate: Nemko 04ATEX1073X

Standards: EN 60079-0:2012, EN 60079-1:2014, EN 60079-11:2012, EN 60079-26:2015, EN 60079-31:2014

Markings:  II 1G Ex ia IIC T4 Ga (-50°C ≤ Ta ≤ +60°C)
 II 1/2G Ex ib IIC T4 Ga/Gb (-50°C ≤ Ta ≤ +60°C)
 II 1D Ex ia IIIC T69°C Da, (-50°C ≤ Ta ≤ +60°C)
 II 1D Ex ib IIIC T69°C Da/Db, (-50°C ≤ Ta ≤ +60°C)

Special Conditions for Safe Use (X):

1. The intrinsically safe circuits do not withstand the 500V AB test as specified in EN 60079-11:2012 clause 6.4.13.
2. Potential ignition hazards by impact or friction need to be considered according to EN 60079-0:2012 clause 8.3 (for EPL Ga and EPG Gb), when the transmitter enclosure and antennas exposed to the exterior atmosphere of the tank, is made with light metals containing aluminium or titanium. The end user shall determine the suitability with regard to avoid hazards from impact and friction.
3. The antennas for type 5400 are non-conducting and the area of the non-conducting part exceeds the maximum permissible areas for Group IIC, according to EN 60079-0:2012 clause 7.4: 20 cm² for EPL Gb and 4 cm² for EPL Ga. Therefore, when the antenna is used in a potentially explosive atmosphere, appropriate measures must be taken to prevent electrostatic discharge.
4. Parts of the rod-antennas, for type 5400 are non-conducting material covering metal surfaces. The area of the non-conducting part exceeds the maximum permissible areas for Group III according to EN 60079-0 .2012 clause 7.4:3 Therefore, when the antenna is used in a potentially explosive atmosphere group III, EPL Da, appropriate measures must be taken to prevent electrostatic discharge.
5. The Ex ia version of model 5400 may be supplied by an “Ex ib” certified safety barrier. The whole circuit shall then be regarded type “Ex ib”. The preferred type “ia” or “ib” shall be indicated on the marking label as specified in the instructions for the transmitter. The antenna part, located in the process vessel, is classified EPL Ga and electrically separated from the “Ex ia” or “ib” circuit.


6. 1/2" NPT threads need to be sealed for dust and water ingress protection, IP 66, IP 67 or "Ex t", EPL Da or Db is required.

	Ui	Ii	Pi	Ci	Li
FISCO parameters	17.5 V	380 mA	5.32 W	4.95 nF	<1 μH

N1 ATEX Type N

Certificate: Nemko 10ATEX1072X

Standards: EN 60079-0:2012, EN 60079-11:2012, EN 60079-15:2010,
EN 60079-21:2013

Markings:  II 3G Ex nA IIC T4 Gc (-50°C ≤ Ta ≤ +60°C /+70°C)
II 3G Ex ic IIC T4 Gc (-50°C ≤ Ta ≤ +60°C /+70°C)
II 3D Ex tc IIIC T69°C/T79°C Dc (-50°C ≤ Ta ≤ +60°C /+70°C)

Special Conditions for Safe Use (X):

- The transmitter circuits does not withstand 500V AC dielectric strength test according to EN 60079-11 clause 6.3.13 due to earth connected transient suppressing devices. Appropriate measures have to be considered by installation.
- The antennas for type 5400, are non-conducting and the area of the non-conducting part exceeds the maximum permissible areas for Group IIC and according to EN 60079-0:2012 clause 7.4: 20 cm² / 80 cm² for EPL Gc. Therefore, when the antenna is used in a potentially explosive atmosphere, appropriate measures must be taken to prevent electrostatic discharge.

	Ui	Ii	Pi	Ci	Li
Safety parameters HART	42.4 V	23 mA	1 W	7.25 nF	Negligible
Safety parameters Fieldbus	32 V	21 mA	0.7 W	4.95 nF	Negligible

7.8 International

E7 IECEx Flameproof

Certificate: IECEx NEM 06.0001X

Standards: IEC 60079-0:2011, IEC 60079-1:2014-06, IEC 60079-11:2011;
IEC 60079-26:2014, IEC 60079-31:2013

Markings: Ex db ia IIC T4 Ga/Gb (-40°C ≤ Ta ≤ +60°C /+70°C),
Ex ta IIIC T69°C/T79°C Da (-40°C ≤ Ta ≤ +60°C /+70°C)
Um=250 VAC, IP66/IP67

Special Conditions for Safe Use (X):

- The intrinsically safe circuits do not withstand the 500V AB test as specified in EN 60079-11:2012 clause 6.4.13.
- Potential ignition hazards by impact or friction need to be considered according to EN 60079-0:2012 clause 8.3 (for EPL Ga and EPG Gb), when the transmitter enclosure and antennas exposed to the exterior atmosphere of the tank, is made with light metals containing aluminium or titanium.
The end user shall determine the suitability with regard to avoid hazards from impact and friction.
- The antennas for type 5400 are non-conducting and the area of the non-conducting part exceeds the maximum permissible areas for Group IIC, according to EN 60079-0:2012 clause 7.4: 20 cm² for EPL Gb and 4 cm² for EPL Ga. Therefore, when the antenna is used in a potentially explosive atmosphere, appropriate measures must be taken to prevent electrostatic discharge.

4. Parts of the rod-antennas, for type 5400 are non-conducting material covering metal surfaces. The area of the non-conducting part exceeds the maximum permissible areas for Group III according to EN 60079-0 .2012 clause 7.4:3 Therefore, when the antenna is used in a potentially explosive atmosphere group III, EPL Da, appropriate measures must be taken to prevent electrostatic discharge.
5. The Ex ia version of model 5400 may be supplied by an “Ex ib” certified safety barrier. The whole circuit shall then be regarded type “Ex ib”. The preferred type “ia” or “ib” shall be indicated on the marking label as specified in the instructions for the transmitter. The antenna part, located in the process vessel, is classified EPL Ga and electrically separated from the “Ex ia” or “ib” circuit.
6. 1/2” NPT threads need to e sealed for dust and water ingress protection, IP 66, IP 67 or “Ex t”, EPL Da or Db is required.

17 IECEx Intrinsic Safety

Certificate: IECEx NEM 06.0001X

Standards: IEC 60079-0:2011, IEC 60079-1:2014-06, IEC 60079-11:2011;
IEC 60079-26:2014, IEC 60079-31:2013

Markings: Ex ia IIC T4 Ga (-50°C ≤ Ta ≤ +60°C /+70°C)
Ex ib IIC T4 Ga/Gb (-50°C ≤ Ta ≤ +60°C /+70°C)
Ex ia IIIC T69°C/79°C Da (-50°C ≤ Ta ≤ +60°C /+70°C)
Ex ib IIIC T69°C/79°C Da/Db (-50°C ≤ Ta ≤ +60°C /+70°C)

Special Conditions for Safe Use (X):

1. The intrinsically safe circuits do not withstand the 500V AB test as specified in EN 60079-11:2012 clause 6.4.13.
2. Potential ignition hazards by impact or friction need to be considered according to EN 60079-0:2012 clause 8.3 (for EPL Ga and EPG Gb), when the transmitter enclosure and antennas exposed to the exterior atmosphere of the tank, is made with light metals containing aluminium or titanium. The end user shall determine the suitability with regard to avoid hazards from impact and friction.
3. The antennas for type 5400 are non-conducting and the area of the non-conducting part exceeds the maximum permissible areas for Group IIC, according to EN 60079-0:2012 clause 7.4: 20 cm² for EPL Gb and 4 cm² for EPL Ga. Therefore, when the antenna is used in a potentially explosive atmosphere, appropriate measures must be taken to prevent electrostatic discharge.
4. Parts of the rod-antennas, for type 5400 are non-conducting material covering metal surfaces. The area of the non-conducting part exceeds the maximum permissible areas for Group III according to EN 60079-0 .2012 clause 7.4:3 Therefore, when the antenna is used in a potentially explosive atmosphere group III, EPL Da, appropriate measures must be taken to prevent electrostatic discharge.
5. The Ex ia version of model 5400 may be supplied by an “Ex ib” certified safety barrier. The whole circuit shall then be regarded type “Ex ib”. The preferred type “ia” or “ib” shall be indicated on the marking label as specified in the instructions for the transmitter. The antenna part, located in the process vessel, is classified EPL Ga and electrically separated from the “Ex ia” or “ib” circuit.
6. 1/2” NPT threads need to e sealed for dust and water ingress protection, IP 66, IP 67 or “Ex t”, EPL Da or Db is required.

	Ui	li	Pi	Ci	Li
Entity parameters HART	30 V	130 mA	1 W	7.26 nF	0 mH
Entity parameters Fieldbus	30 V	300 mA	1.5 W	4.95 nF	0 mH

IG IECEx FISCO

Certificate: IECEx NEM 06.0001X

Standards: IEC 60079-0:2011, IEC 60079-1:2014-06, IEC 60079-11:2011;
IEC 60079-26:2014, IEC 60079-31:2013Markings: Ex ia IIC T4 Ga (-50°C ≤ Ta ≤ +60°C)
Ex ib IIC T4 Ga/Gb (-50°C ≤ Ta ≤ +60°C)
Ex ia IIIC T69°C/79°C Da (-50°C ≤ Ta ≤ +60°C)
Ex ib IIIC T69°C/79°C Da/Db (-50°C ≤ Ta ≤ +60°C)**Special Conditions for Safe Use (X):**

1. The intrinsically safe circuits do not withstand the 500V AB test as specified in EN 60079-11:2012 clause 6.4.13.
2. Potential ignition hazards by impact or friction need to be considered according to EN 60079-0:2012 clause 8.3 (for EPL Ga and EPG Gb), when the transmitter enclosure and antennas exposed to the exterior atmosphere of the tank, is made with light metals containing aluminium or titanium.
The end user shall determine the suitability with regard to avoid hazards from impact and friction.
3. The antennas for type 5400 are non-conducting and the area of the non-conducting part exceeds the maximum permissible areas for Group IIC, according to EN 60079-0:2012 clause 7.4: 20 cm² for EPL Gb and 4 cm² for EPL Ga. Therefore, when the antenna is used in a potentially explosive atmosphere, appropriate measures must be taken to prevent electrostatic discharge.
4. Parts of the rod-antennas, for type 5400 are non-conducting material covering metal surfaces. The area of the non-conducting part exceeds the maximum permissible areas for Group III according to EN 60079-0:2012 clause 7.4:3 Therefore, when the antenna is used in a potentially explosive atmosphere group III, EPL Da, appropriate measures must be taken to prevent electrostatic discharge.
5. The Ex ia version of model 5400 may be supplied by an “Ex ib” certified safety barrier. The whole circuit shall then be regarded type “Ex ib”. The preferred type “ia” or “ib” shall be indicated on the marking label as specified in the instructions for the transmitter. The antenna part, located in the process vessel, is classified EPL Ga and electrically separated from the “Ex ia” or “ib” circuit.
6. 1/2” NPT threads need to be sealed for dust and water ingress protection, IP 66, IP 67 or “Ex t”, EPL Da or Db is required.

	Ui	Ii	Pi	CI	Li
FISCO parameters	17.5 V	380 mA	5.32 W	4.95 nF	<1 μH

N7 IECEx Type N

Certificate: IECEx BAS 10.0005X

Standards: IEC 60079-0:2011, IEC 60079-11:2011, IEC 60079-15:2010,
IEC 60079-31:2010Markings: Ex nA IIC T4 Gc (-50°C ≤ Ta ≤ +60°C / +70°C)
Ex ic IIC T4 Gc (-50°C ≤ Ta ≤ +60°C / +70°C)
Ex tc IIIC T69°C / T79°C (-50°C ≤ Ta ≤ +60°C / +70°C)**Special Conditions for Safe Use (X):**

1. The transmitter circuits does not withstand 500V AC dielectric strength test according to EN 60079-11 clause 6.3.13 due to earth connected transient suppressing devices. Appropriate measures have to be considered by installation.

	Ui	Ii	Pi	Ci	Li
Safety parameters HART	42.4 V	23 mA	1 W	7.25 nF	Negligible
Safety parameters Fieldbus	32 V	21 mA	0.7 W	4.95 nF	Negligible

7.9 Brazil

E2 INMETRO Flameproof

Certificate: NCC 11.2256 X

Standards: ABNT NBR IEC 60079-0:2013, ABNT NBR IEC 60079-1:2009 + Errata 1:2011, ABNT NBR IEC 60079-11:2009, ABNT NBR IEC 60079-26:2008 + Errata 1:2009, ABNT NBR IEC 60079-27:2010, ABNT NBR IEC 60079-31:2011

Markings: Ex d ia IIC T4 Ga/Gb (- 40°C ≤ T_{amb} ≤ +60°C /+70°C)
 Ex ta IIIC T69 °C/T79 °C (- 50°C/-40°C ≤ T_{amb} ≤ +60°C /+70°C)
 IP 66/IP67

Special Conditions for Safe Use (X):

1. See certificate for special conditions.

I2 INMETRO Intrinsic Safety

Certificate: NCC 14.2256 X

Standards: ABNT NBR IEC 60079-0:2013, ABNT NBR IEC 60079-1:2009 + Errata 1:2011, ABNT NBR IEC 60079-11:2009, ABNT NBR IEC 60079-26:2008 + Errata 1:2009, ABNT NBR IEC 60079-27:2010, ABNT NBR IEC 60079-31:2011

Markings: Ex ia IIC T4 Ga (- 50°C ≤ T_{amb} ≤ + 60°C /+ 70°C)
 Ex ib IIC T4 Ga/Gb (- 50°C ≤ T_{amb} ≤ + 60°C /+ 70°C)
 Ex ta IIIC T69 °C/T79 °C (- 50°C ≤ T_{amb} ≤ +60°C /+70°C)

Special Conditions for Safe Use (X):

1. See certificate for special conditions.

	Ui	Ii	Pi	Ci	Li
Entity parameters HART	30 V	130 mA	1 W	7.26 nF	0 μH
Entity parameters Fieldbus	30 V	300 mA	1.5 W	4.95 nF	0 μH

IB INMETRO FISCO

Certificate: NCC 14.2256 X

Standards: ABNT NBR IEC 60079-0:2013, ABNT NBR IEC 60079-1:2009 + Errata 1:2011, ABNT NBR IEC 60079-11:2009, ABNT NBR IEC 60079-26:2008 + Errata 1:2009, ABNT NBR IEC 60079-27:2010, ABNT NBR IEC 60079-31:2011

Markings: Ex ia IIC T4 Ga (- 50°C ≤ T_{amb} ≤ + 60°C)
 Ex ib IIC T4 Ga/Gb (- 50°C ≤ T_{amb} ≤ + 60°C)
 Ex ta IIIC T69 °C (- 50°C ≤ T_{amb} ≤ +60°C)

Special Conditions for Safe Use (X):

1. See certificate for special conditions.

	Ui	Ii	Pi	Ci	Li
FISCO parameters	17.5 V	380 mA	5.32 W	4.95 nF	<1 μH

7.10 China

E3 China Flameproof

Certificate: GYJ16.1094X

Standards: GB3836.1/2/4/20-2010, GB12476.1/5-2013, GB12476.4-2010

Markings: Ex d ia IIC T4 Ga/Gb
Ex tD A20 IP66/67 T69°C / T79°C

Special Conditions for Safe Use (X):

1. See certificate for special conditions.

I3 China Intrinsic Safety

Certificate: GYJ16.1094X

Standards: GB3836.1/2/4/20-2010, GB12476.1/5-2013, GB12476.4-2010

Markings: Ex ia IIC T4 Ga
Ex ib IIC T4 Ga/Gb
Ex iaD 20 T69°C / T79°C
Ex ibD 20/21 T69°C / T79°C

Special Conditions for Safe Use (X):

1. See certificate for special conditions.

	Ui	Ii	Pi	Ci	Li
Entity parameters HART	30 V	130 mA	1 W	7.26 nF	0 mH
Entity parameters Fieldbus	30 V	300 mA	1.5 W	4.95 nF	0 mH

IC China FISCO

Certificate: GYJ16.1094X

Standards: GB3836.1/2/4/20-2010, GB12476.1/5-2013, GB12476.4-2010

Markings: Ex ia IIC T4 Ga
Ex ib IIC T4 Ga/Gb
Ex iaD 20 T69°C
Ex ibD 20/21 T69°C

Special Conditions for Safe Use (X):

1. See certificate for special conditions.

	Ui	Ii	Pi	Ci	Li
FISCO parameters	17.5 V	380 mA	5.32 W	4.95 nF	<0.001 mH

N3 China Type N

Certificate: CNEx13.1930X

Standards: GB 3836.1-2010, GB 3836.8-2003

Markings: Ex nA nL IIC T4 Gc
Ex nA IIC T4 Gc
Ex nL IIC T4 Gc
IP66/IP67

Special Conditions for Safe Use (X):

1. See certificate for special conditions.

	Ui	Ii	Pi	Ci	Li
Maximum input parameters for Ex nL HART	42.4 V DC	23 mA	1 W	7.25 nF	0
Maximum input parameters for Ex nL Fieldbus	32 V DC	21 mA	0.7 W	4.95 nF	0

7.11 Technical Regulations Customs Union (EAC)

EM Technical Regulations Customs Union (EAC) Flameproof

Certificate: RU C-SE.AA87.B.00108

Markings: Ga/Gb Ex d ia IIC T4 X, (-40°C ≤ Ta ≤ +60°C/+70°C)

Special Conditions for Safe Use (X):

1. See certificate for special conditions.

IM Technical Regulations Customs Union (EAC) Intrinsic Safety

Certificate: RU C-SE.AA87.B.00108

Markings: 0Ex ia IIC T4 Ga X, (-50°C ≤ Ta ≤ +60°C/+70°C)

Ga/Gb Ex ib IIC T4 X, (-50°C ≤ Ta ≤ +60°C/+70°C)

Special Conditions for Safe Use (X):

1. See certificate for special conditions.

	Ui	Ii	Pi	Ci	Li
Entity parameters HART	30 V	130 mA	1 W	7.26 nF	0 mH
Entity parameters Fieldbus	30 V	300 mA	1.5 W	4.95 nF	0 mH

7.12 Japan

E4 Flameproof 5401 HART Rod

Certificate: TC20109

Markings: Ex d [ia] IIC T4 X

Ex ia IIC T4 X

Special Conditions for Safe Use (X):

1. See certificate for special conditions.

E4 Flameproof 5401 HART Cone

Certificate: TC20109

Markings: Ex d [ia] IIC T4 X

Ex ia IIC T4 X

Special Conditions for Safe Use (X):

1. See certificate for special conditions.

E4 Flameproof 5402 HART

Certificate: TC20111

Markings: Ex d [ia] IIC T4 X

Ex ia IIC T4 X

Special Conditions for Safe Use (X):

1. See certificate for special conditions.

E4 Flameproof 5401 Fieldbus Rod

Certificate: TC 20244

Markings: Ex d [ia] IIC T4 X

Ex ia IIC T4 X

Special Conditions for Safe Use (X):

1. See certificate for special conditions.

- E4** Flameproof 5401 Fieldbus Cone
Certificate: TC 20245
Markings: Ex d [ia] IIC T4 X
Ex ia IIC T4 X

Special Conditions for Safe Use (X):

1. See certificate for special conditions.

- E4** Flameproof 5402 Fieldbus
Certificate: TC 20246
Markings: Ex d [ia] IIC T4 X
Ex ia IIC T4 X

Special Conditions for Safe Use (X):

1. See certificate for special conditions.

7.13 India

- Flameproof
Certificate: P333021/1
Markings: Ex ia d IIC T4

Special Conditions for Safe Use (X):

1. See certificate for special conditions.

- Intrinsically safe
Certificate: P314493/1
Markings: Ex ia IIC T4 Ga/Gb
Ex ia/ib IIC T4

Special Conditions for Safe Use (X):

1. See certificate for special conditions.

7.14 Ukraine

- Flameproof, Intrinsically Safe
Certificate: UA.TR.047.C.0352-13
Markings: 1 Ex de IIC T4X
1 Ex de ib ia IIC T4 X
1 Ex de ia IIC T6 X

Special Conditions for Safe Use (X):

1. See certificate for special conditions.

7.15 Republic of Korea

- EP** Flameproof HART
Certificate: 13-KB4BO-0018X
Markings: Ex ia/d ia IIC T4 Ga/Gb

Special Conditions for Safe Use (X):

1. See certificate for special conditions.

- EP** Flameproof Fieldbus
Certificate: 13-KB4BO-0017X
Markings: Ex ia/d ia IIC T4 Ga/Gb

Special Conditions for Safe Use (X):

1. See certificate for special conditions.

7.16 Combinations

KG Combination of E1, E5 and E6

KH Combination of IA, IE and IF

KI Combination of I1, I5 and I6

7.17 Additional Certifications

SBS American Bureau of Shipping (ABS) Type Approval

Certificate: 15-LD1345569-PDA

Intended Use: Use on ABS Classed Vessels and Offshore Facilities in accordance with the listed ABS rules and International Standards.

SBV Bureau Veritas (BV) Type Approval

Certificate: 22379_B0 BV

Requirements: Bureau Veritas Rules for the Classification of Steel Ships

Application: Approval valid for the ships intended to be granted with the following additional class notations: AUT-UMS, AUT-CCS, AUT-PORT and AUT-IMS.

SDN Det Norske Veritas (DNV) Type Approval

Certificate: A-14117

Intended Use: Det Norske Veritas ´ Rules for Classification of Ships, High Speed and Light Craft and Det Norske Veritas ´ Offshore Standards.

Application:

Location Classes	
Temperature	D
Humidity	B
Vibration	A
EMC	B
Enclosure	C

SLL Lloyds Register (LR) Type Approval

Certificate: 15/20045

Application: Marine applications for use in environmental categories ENV1, ENV2, ENV3 and ENV5.

U1 Overfill prevention

Certificate: Z-65.16-475

Application: TÜV tested and approved by DIBt for overfill prevention according to the German WHG regulations.

7.18 Pattern Approval

GOST Belarus

Certificate: RB-03 07 2765 10

GOST Kazakhstan

Certificate: KZ.02.02.03473-2013

GOST Russia
Certificate: SE.C.29.010.A

GOST Uzbekistan
Certificate: 02.2977-14

China Pattern Approval
Certificate: CPA 2012-L136

7.19 Conduit plugs and adapters

IECEx Flameproof and Increased Safety
Certificate: IECEx FMG 13.0032X
Standards: IEC60079-0:2011, IEC60079-1:2007, IEC60079-7:2006-2007
Markings: Ex de IIC Gb


ATEX Flameproof and Increased Safety
Certificate: FM13ATEX0076X
Standards: EN60079-0:2012, EN60079-1:2007, IEC60079-7:2007
Markings:  II 2 G Ex de IIC Gb

Table 3. Conduit Plug Thread Sizes

Thread	Identification Mark
M20 x 1.5	M20
½ - 14 NPT	½ NPT

Table 4. Thread Adapter Thread Sizes

Male Thread	Identification Mark
M20 x 1.5 – 6g	M20
½- 14 NPT	½ - 14 NPT
¾- 14 NPT	¾- 14 NPT
Female Thread	Identification Mark
M20 x 1.5 - 6H	M20
½ - 14 NPT	½ - 14 NPT
G1/2	G1/2

Special Conditions for Safe Use (X):

1. When the thread adapter or blanking plug is used with an enclosure in type of protection increased safety “e” the entry thread shall be suitably sealed in order to maintain the ingress protection rating (IP) of the enclosure. See certificate for special conditions.
2. The blanking plug shall not be used with an adapter.
3. Blanking Plug and Threaded Adapter shall be either NPT or Metric thread forms. G½ thread forms are only acceptable for existing (legacy) equipment installations.

7.20 EU Declaration of Conformity

Figure 7. Rosemount 5400 EU Declaration of Conformity




EU Declaration of Conformity

No: 5400

We,

Rosemount Tank Radar AB
Layoutvägen 1
S-435 33 MÖLNLYCKE
Sweden

declare under our sole responsibility that the product,

Rosemount 5400 Series Radar Level Transmitter

manufactured by,

Rosemount Tank Radar AB
Layoutvägen 1
S-435 33 MÖLNLYCKE
Sweden

is in conformity with the provisions of the European Community Directives, including the latest amendments, as shown in the attached schedule.

Presumption of conformity is based on the application of the harmonized standards, normative documents or other documents and, when applicable or required, a European Community notified body certification, as shown in attached schedule.



(signature)

Dajana Prastalo
(name - printed)

Manager Product Approvals

(function name - printed)

2016-05-06
(date of issue)



ROSEMOUNT

**Schedule
No: 5400**

EMC Directive (2014/30/EU)

EN 61326-1:2013

ATEX Directive (2014/34/EU)**Nemko 04ATEX1073X****Intrinsic Safety (Hart@ 4-20mA):**

Equipment Group II, Category 1G, Ex ia IIC T4 Ga
 Equipment Group II, Category 1/2 G, Ex ib IIC T4 Ga/Gb
 Equipment Group II, Category 1D, Ex ia IIIC T79° Da
 Equipment Group II, Category 1/2 D, Ex ib IIIC T79°C Da/Db

Intrinsic Safety (Foundation ® Fieldbus):

Equipment Group II, Category 1G, Ex ia IIC T4 Ga
 Equipment Group II, Category 1/2 G, Ex ib IIC T4 Ga/Gb
 Equipment Group II, Category 1D, Ex ia IIIC T69° Da
 Equipment Group II, Category 1/2 D, Ex ib IIIC T69°C Da/Db

Intrinsic Safety (Foundation ® Fieldbus FISCO):

Equipment Group II, Category 1G, Ex ia IIC T4 Ga
 Equipment Group II, Category 1/2G, Ex ia IIC T4 Ga/Gb
 Equipment Group II, Category 1D, Ex ia IIIC T69° Da
 Equipment Group II, Category 1/2D, Ex ib IIIC T69° Da/Db

Flameproof (Hart@ 4-20mA, Modbus RS-485):

Equipment Group II, Category 1/2G, Ex db ia IIC T4 Ga/Gb
 Equipment Group II, Category 1D, Ex ta IIIC T79° Da

Flameproof (Foundation ® Fieldbus):

Equipment Group II, Category 1/2G, Ex db ia IIC T4 Ga/Gb
 Equipment Group II, Category 1D, Ex ta IIIC T69° Da

EN 60079-0:2012; EN 60079-1:2014; EN 60079-11:2012; EN 60079-26:2015;
 EN 60079-31:2014

ROSEMOUNT

**Schedule
No: 5400**

Nemko 10ATEX1072

Type of protection N, Non-sparking (Hart@ 4-20mA):

Equipment Group II, Category 3G, Ex nA IIC T4 Gc
Equipment Group II, Category 3D, Ex tc IIIC T79° Dc

Type of protection N, Non-sparking (Foundation ® Fieldbus):

Equipment Group II, Category 3G, Ex nA IIC T4 Gc
Equipment Group II, Category 3D, Ex tc IIIC T69° Dc

Intrinsic Safety (Hart@ 4-20mA):

Equipment Group II, Category 3G, Ex ic IIC T4 Gc
Equipment Group II, Category 3D, Ex tc IIIC T79° Dc

Intrinsic Safety (Foundation ® Fieldbus):

Equipment Group II, Category 3G, Ex ic IIC T4 Gc
Equipment Group II, Category 3D, Ex tc IIIC T69° Dc

EN60079-0:2012; EN60079-11:2012; EN60079-15:2010; EN60079-31:2013

Low Voltage Directive (2014/35/EU)

IEC 61010-1:2010

R&TTE Directive (99/5/EC) *This Directive is valid until 12 June 2016.*
RE Directive (2014/53/EU) *This Directive is valid from 12 June 2016*

ETSI EN 302372:2011; EN 62479:2010

ROSEMOUNT



**Schedule
No: 5400**

ATEX Notified Body for EU Type Examination Certificates and Type Examination Certificates

Nemko AS [Notified Body Number: 0470]
P.O.Box 73 Blindern
0314 OSLO
Norway

ATEX Notified Body for Quality Assurance

DNV Nemko Presafe AS [Notified Body Number: 2460]
Veritasveien 1
1322 HØVIK
Norway



List of Model Parts with China RoHS Concentration above MCVs
含有China RoHS管控物质超过最大浓度限值的部件型号列表

Part Name 部件名称	Hazardous Substances / 有害物质					
	Lead 铅 (Pb)	Mercury 汞 (Hg)	Cadmium 镉 (Cd)	Hexavalent Chromium 六价铬 (Cr +6)	Polybrominated biphenyls 多溴联苯 (PBB)	Polybrominated diphenyl ethers 多溴联苯醚(PBDE)
Electronics Assembly 电子组件	X	O	O	O	O	O
Housing Assembly 壳体组件	O	O	O	X	O	O

This table is proposed in accordance with the provision of SJ/T11364

本表格系依据SJ/T11364的规定而制作。

O: Indicate that said hazardous substance in all of the homogeneous materials for this part is below the limit requirement of GB/T 26572.

O: 意为该部件的所有均质材料中该有害物质的含量均低于GB/T 26572所规定的限量要求。

X: Indicate that said hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement of GB/T 26572.

X: 意为在该部件所使用的均质材料里，至少有一类均质材料中该有害物质的含量高于GB/T 26572所规定的限量要求。



Global Headquarters

Emerson Process Management

6021 Innovation Blvd.
Shakopee, MN 55379, USA
+1 800 999 9307 or +1 952 906 8888
+1 952 949 7001
RFQ.RMD-RCC@EmersonProcess.com

North America Regional Office

Emerson Process Management

8200 Market Blvd.
Chanhassen, MN 55317, USA
+1 800 999 9307 or +1 952 906 8888
+1 952 949 7001
RMT-NA.RCCRFQ@Emerson.com

Latin America Regional Office

Emerson Process Management

1300 Concord Terrace, Suite 400
Sunrise, FL 33323, USA
+1 954 846 5030
+1 954 846 5121
RFQ.RMD-RCC@EmersonProcess.com

Europe Regional Office

Emerson Process Management Europe GmbH

Neuhofstrasse 19a P.O. Box 1046
CH 6340 Baar
Switzerland
+41 (0) 41 768 6111
+41 (0) 41 768 6300
RFQ.RMD-RCC@EmersonProcess.com

Asia Pacific Regional Office

Emerson Process Management Asia Pacific Pte Ltd

1 Pandan Crescent
Singapore 128461
+65 6777 8211
+65 6777 0947
Enquiries@AP.EmersonProcess.com

Middle East and Africa Regional Office

Emerson Process Management

Emerson FZE P.O. Box 17033,
Jebel Ali Free Zone - South 2
Dubai, United Arab Emirates
+971 4 8118100
+971 4 8865465
RFQ.RMTMEA@Emerson.com



Linkedin.com/company/Emerson-Process-Management



Twitter.com/Rosemount_News



Facebook.com/Rosemount



Youtube.com/user/RosemountMeasurement



Google.com/+RosemountMeasurement

Standard Terms and Conditions of Sale can be found at

www.Emerson.com/en-us/pages/Terms-of-Use.aspx

The Emerson logo is a trademark and service mark of Emerson Electric Co.

AMS, DeltaV, Rosemount and Rosemount logotype are trademarks of Emerson Process Management.

HART is a registered trademark of the FieldComm Group.

FOUNDATION Fieldbus is a trademark of the FieldComm Group.

Modbus is a registered trademark of Gould Inc.

National Electrical Code is a registered trademark of National Fire Protection Association, Inc.

DTM is a trademark of the FDT group.

All other marks are the property of their respective owners.

© 2016 Emerson Process Management. All rights reserved.